

### WARNING

**DO NOT ATTEMPT TO INSTALL OR USE THIS PRODUCT BEFORE READING THE FOLLOWING INSTRUCTIONS.**

Please use caution during setup and installation. This product is not to be used for horseplay. If you are confused by these instructions or have questions regarding installation and/or setup, please contact **Camelback Displays, Inc.: 1-877-268-7469**

Thank you for purchasing the D Flag. We are sure that you will be most satisfied with your investment. Having accepted delivery of your D Flag you have accepted responsibility for the safe care and maintenance of this product.

The time taken to read and understand these directions could be the difference between having an excellent advertising opportunity and a potential disaster.

#### HANDLING INSTRUCTIONS


WARNINGS AND PRECAUTIONS

Ground stakes may have sharp edges. Please be extremely careful and wear gloves when handling your D Flag. Be aware of underground power lines, water lines, or any other obstructions in the ground. **Camelback Displays, Inc.** will not be held liable for misuse and negligence.

1. Never leave your D Flag unattended for long periods of time.
2. Always store your D Flag inside when not in use.
3. Never drag your D Flag on the ground or floor.
4. Never stand, walk, or jump on your D Flag .
5. Do not leave your D Flag out in the rain.
6. Keep your D Flag away from sharp edges as the fabric can snag and tear.
7. Please do not use your D Flag in a moving state or in winds above 25 m.p.h.

We recommend having 2 people when setting up your D Flag .

### PARTS LIST

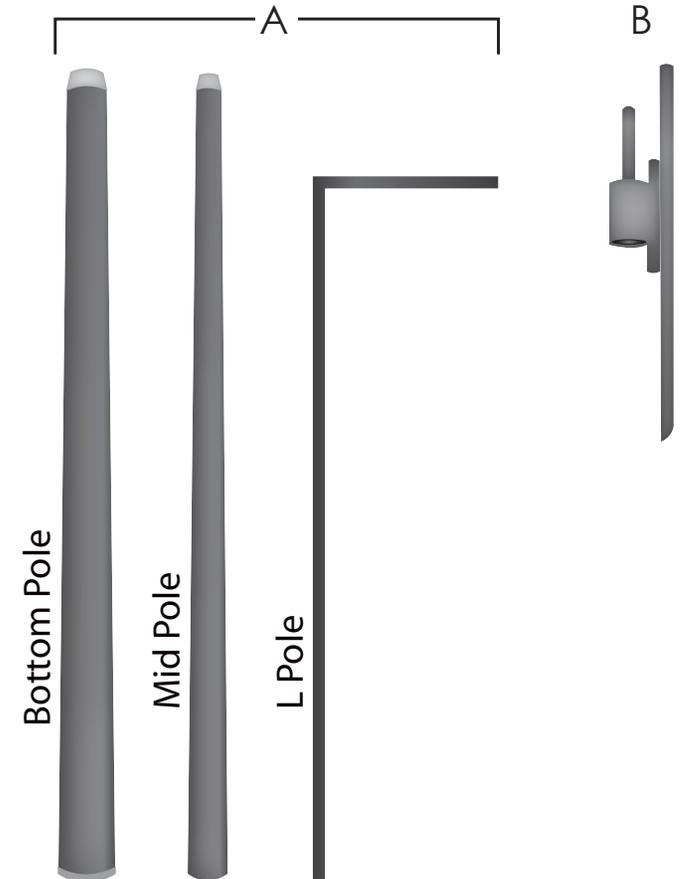


A - Pole System

B - Ground Stake

C - Print (not pictured)

\* Ground Platform option available, contact **Camelback Displays, Inc.**

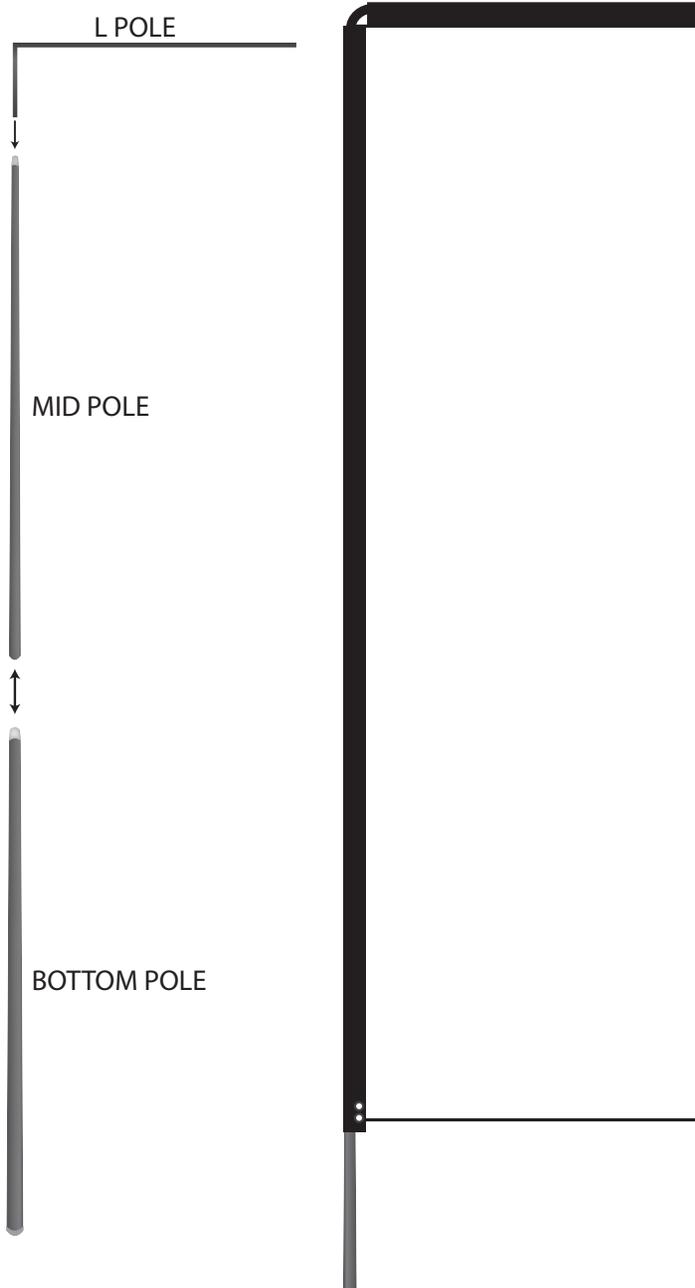

### HOW TO INSTALL YOUR ELBOW BANNER

- 1 - **FOR THE GROUND STAKE:** Remove the GROUND STAKE from the carry bag for installation into the ground, dirt or soft surface. Using a rubber mallet, drive the GROUND STAKE into the grass or soft ground so the ball bearing is almost flush with the ground (leave about 1/4" of space). Try to drive the GROUND STAKE perpendicular into the grass or soft ground. This will make sure the ELBOW BANNER is installed properly and will stand as intended.  
**IMPORTANT: DO NOT STRIKE MALLET ON BALL BEARING CONNECTOR**
- FOR THE GROUND PLATFORM:** If you need to use the D Flag indoors or on a hard surface (e.g., Concrete) you will need a GROUND PLATFORM. Please contact **Camelback Displays, Inc.** for more information.
- 2 - Remove the POLE SYSTEM from the carry bag. Set the L POLE aside for now and Connect the BOTTOM POLE to the MID POLE.
- 3 - Once you have the POLE SYSTEM connected correctly, open the D Flag and find the bottom of the D Flag SLEEVE. It will have two grommets and an opening.
- 4 - Slide the longer end of the L POLE into the sleeve at the top of the D Flag. Then, starting at the top of the POLE SYSTEM, the end with the smaller diameter, slide the bottom of the D Flag SLEEVE down the pole. Once the POLE SYSTEM is through the SLEEVE, connect the L POLE to the rest of the POLE SYSTEM.
- 5 - Finally, simply place your D Flag on top of the GROUND STAKE and your D Flag is ready for use.