

Deluxe Telescoping Retractor - Single Deluxe Telescoping Retractor - Single Wide

262035, 262037, 191097
262039, 262041, 190362
BSD1135, BSD1138


Product Specifications

Graphic Template Available


SKU	Description	Viewable Graphic Size	Max Pole Height**	Footprint Dimensions
BSD1135, 262035, 262037, 191097	Single	33.5" w x 61.5" h up to 78.75" h	78.75"	36" w x 11" d
BSD1139, 262039, 262041, 190362	Single-Wide	46.5" w x 61.5" h up to 78.75" h	78.75"	48.5" w x 11" d

Product Parts

- 1 - Base
- 2 - Banner Rail
- 3 - Shock Corded Telescoping Pole**
- 4 - Pin/Left End

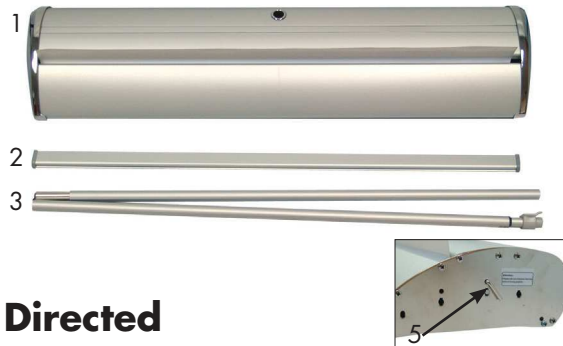

***Do Not Pull Pin Until Directed**

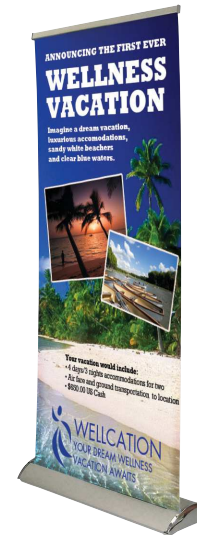

Banner Install



Step 1

Remove parts from the bag. Turn the Base (1) upside down. Align the bottom of the banner (print side up) to the adhesive strip on your leader. Remove the protective paper from the adhesive and firmly press the bottom of the banner onto the adhesive, and be sure to smooth out any bubbles or wrinkles.




Step 2

Remove both endcaps from the Banner Rail (2) and snap the Banner Rail (2) open. Fully insert the top edge of the Banner into the groove of the Banner Rail (2.) Close the Banner Rail (2) & replace the endcaps.

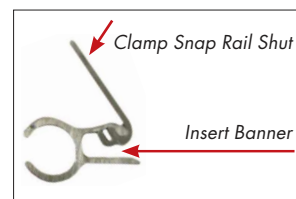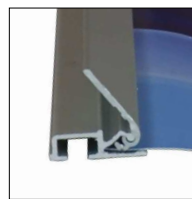

Step 3

Maintain tension on the banner while slowly removing the Front Banner Pin (4) located under the left Base (1) end. Allow the banner to gently roll into the Base (1).

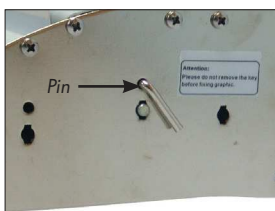

Step 4

Save the pin in the pin holder on the inside of the Base (1) end for future graphic changes. Replace the base end.



Display Set-Up


Step 1

Open the wing foot on the bottom of the Base (1) and set the Base (1) on the floor.




Step 2

Assemble the shock corded section of the Shock Corded Telescoping Pole (3). Insert the Pole (3) into the receptacle in the center of the Base (1).

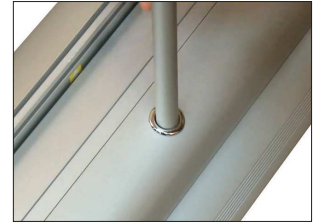


Step 3

Gently lift the front Banner Rail (2) up and attach it to the top of the Pole (3)

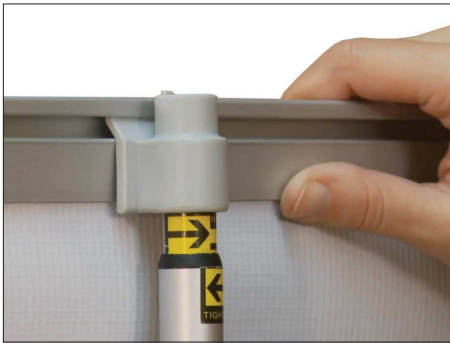

Step 4

Lift telescoping section the Pole (3). **Do not exceed 78.75" high.** Twist the bottom section to lock into place.

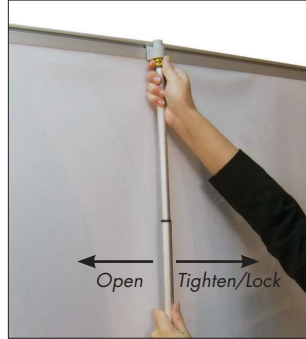

Storage

Place all product parts into Carry Case and store in a cool dry location.



Care

To clean, wipe with damp cloth.

Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.