ShowStopper Deluxe 10' x 20' Tent

Product Specifications

Thermal Peak Maximum Imprint: 46" w x 17" h
Thermal Overhang Maximum Imprint: 60" w x 8" h

Canopy Color: White

Dimensions: 236" w x 125" h up to 138" h x 118" d

Product Parts 1 - Frame 2 - Canopy



Set-Up

Step 1

Remove the tent from the bag and placing it at your desired location.

In tandem with another person, separate the legs of the tent until they are extended a full arms length.



Step 2

Unfold your Canopy (2) and drape over the tent's Frame (1). Attach the Canopy (2) by connecting the loop strips on the canopy corners with the hook strips on the frame's four legs. Position the canopy's apex with the center poles of the Frame (1).







Step 3

Separate the frames legs. About halfway open, attach the loop in the middle of the Canopy (2) to hook on the middle legs on each side. Continue to open the frame until fully extended. *The frame will open a little at a time so alternate ends until the Frame (1) no longer expands.*





Step 4

Lift the expanding section of the frame upwards until the sliding connectors lock into place on the frame's legs.



Set-Up Continued...

Step 5

Once set, release and extend the telescoping legs. Raise the tent to your desired height and lock the legs into place



Step 6

Lift the three apexes of the canopy up into place by turning the cranks located on the center of the expanding frame. Turn counterclockwise until the canopy is taut.



Secure with Stakes - Sold Separately

Simply drive the stakes through the holes in the feet and into the ground to secure.







Secure with Ballast - Sold Separately

Simply strap the Ballast to the legs and fill with water or sand.







Storage

Place all product parts into either your provided dust cover, and store in a cool dry location.



Dust cover is for storage only & is not a carry case

Care

To clean, wipe with damp cloth.