

Congratulations on the purchase of your ShowStopper™ Event Tent Full Wall.

Owner's Manual

- Includes:
- Parts List
- Assembly Instructions
- Disassembly Instructions
- Storage Instructions
- Care Instructions
- Warranty Information

Please read all of the information carefully and contact your distributor or supplier with any issues.



Parts List

Important: Before you begin please count and inspect all pieces.

- 1 - ShowStopper™ Event Tent Full Wall (A)



(A) *Shown attached to tent, not included.*

Assembly Instructions



Step 1

Fasten the velcro on one of the corners of the full wall (A) around one corner of the tent frame in an "X" design. One velcro strap will go over top bar on tent frame. The other strap will go around the side bar on the tent frame.



Step 2

Fasten the velcro from the center of the tent wall to the tent frame by looping it over the top bar.



Step 3

Fasten the velcro on the other corner of the full wall (A) around one corner of the tent frame in an "X" design. One velcro strap will go over top bar on tent frame. The other strap will go around the side bar on the tent frame.



Step 4

Fasten the velcro from the sides of the full wall (A) to the tent frame legs by looping it around the tent frame leg.

Disassembly Instructions

Unfasten the velcro that is on the sides of the full wall from the tent frame legs. Then unfasten the velcro that is on the top of the full wall from the top bar on the tent frame.

Storage Instructions

Store in a cool, dry place, away from direct sunlight.

Care Instructions

Wipe clean with a damp cloth.

Warranty Information

All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.