### **Product Specifications**

Viewable Graphic Size: 24" w x 84"h or 40"w x 75"h Graphic Finishing: #2 Grommets in all four corners Color: Black Footprint Dimensions: 39" w x 14" d Graphic Template Available

### **Product Parts**





# **Display Set-Up**

### Step 1

Remove parts from bag and place the unit on the ground/work surface. Extend the back leg and secure into place by turning the knob on the hub.



# 1

# Step 3

Slip each arm (2) into the holes on the top of the hub (1), being sure that the hooks face the same direction as those on the bottom legs (1).



# Storage

Place all product parts into Carry Case and store in a cool dry location.



### Step 2

Press the center button on the hub (1) to move the bottom legs (1). Spread the front bottom legs to approximately the width of your banner and stand up right on all 3 legs.





# Step 4

Attach the top of the banner by hooking the grommets onto the hooks on the Arms (2). Gently pull the bottom grommets down to place into the bottom hooks. The arms and legs will need to bend, which will pull the banner taut. Stand the unit upright, and adjust the back leg out to support the stand.

Gently bend arms (2) when attaching banner.

Caution: Do not force a smaller then recommended banner on the display as it may cause damage to the unit.

### Care

To clean, wipe with damp cloth.



Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.