

PRODUCT DESCRIPTION

Our Casita Canopy Tents[™] are an excellent way to provide shade during outdoor and indoor events. This canopy is a 15' x 10' size and is available in custom UV print, which has a high quality finish with vivid color. Set up is quick, easy, and user friendly. Telescopic legs snap into place offering a range of heights. This lightweight system includes a protective dust cover to use while in storage

cover to use while in stora g .		
DISPLAY DIMENSIONS	176'	"W x 135"H x 118.75"D
GRAPHIC SIZE	Bac	opy: 176"W x 89"H kWall: 117"W x 79"H Wall: 117"W x 40.5"H
GRAPHIC MATERIAL		
UV Fabric (water resistant)		
GRAPHIC FINISHING		
Hemmed around sides		
DISPLAY CONSTRUCTION		
Aluminum frame (Hex leg thickness: 50mm)		
SHIPPING WEIG#S & DIMENSIONS		
Shipping Weight	50 lbs (frame only) 56 lbs (frame and graphic)	
Shipping Dimensions	62"H x 10"W x B"D (over size)	
LARGE QUANTITY FREIGHT		
Freight Shipping	16 boxes per & "L x 40"W x 67"H skid	
FreightWeight	845 lbs (frame only) 941 lbs (frame & graphic)	
	941	lbs (frame & graphic)
GRAPHIC TURN AROUN		
GRAPHIC TURN AROUN 4 business days after proof	D TI	ME
	D TI app	ME
4 business days after proof	D TI app	ME
4 business days after proof AVAILABLEACCESSORIE	D TI app	ME
4 business days after proof AVAILABLEACCESSORIES (Qty 4) Ropes - 124.5"L each	D TI app	ME roval Sand Bag
4 business days after proof AVAILABLEACCESSORIE (Qty 4) Ropes - 124.5"L each (Qty 4) Stakes	D TI app S	ME roval Sand Bag La Caja Hard Case



Optional Sand Bag



Stakes (option)

Rope

(option)



Travel Bag w/wheels (option)



Nylon Travel Bag



Optional La Caja Hardcase

PARTS LIST



SET UP INSTRUCTIONS (5FT CANOPY SHOWN BELOW)

Step 1 Take your frame and slightly expand it open to expose the corner bars.



Step 3

Adhere each corner of the canopy to each corner of the frame. Inside each corner of the canopy, there is a strip of loop Velcro sewn to it and each corner of the frame has a strip of hook Velcro.



Step 5

Increase the height by extending the lower legs.



Step 7

Locate the spindle under the canopy, in the middle of the frame. Pull the lever out and rotate to extend the upper peak pole. The dome cap will push out the canopy creating tension to flush out any loose areas.




Step 2

Take your canopy graphic and place it on top of the frame.



Step 4

With the canopy securely in position, expand the frame until the corner latches lock into place.

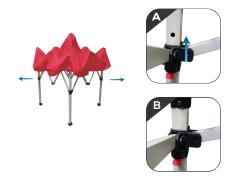

Step 6 Pull each leg down until the latch locks into place.



Step 8 The install is complete.

