


Ready Pop Fabric Pop Up Display

INSTRUCTION SHEET

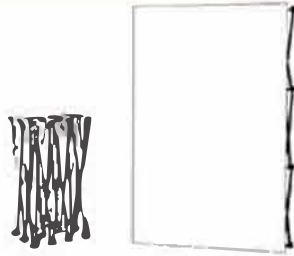

1 Remove frame and graphic from nylon bag.



2 Ensure "adjustable feet" of frame are on the floor. Pull up display into upright position.



3 Lock all hooks between front and back hubs.




4 Adjust leveling feet for desired angle. Ready pop display can now easily be moved into position.




5 **OPTIONAL**
Attach lights to top of frame by sliding the plastic "x blocks" under the frames cross sections.

Warning: To avoid damage, separate end caps & disconnect ALL hooks before collapsing the frame.


How to install or replace graphics on your OneFabric:

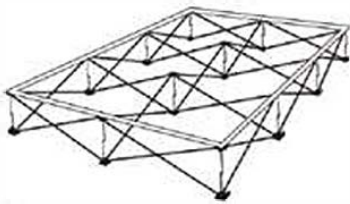


1 Assemble frame and lay flat on its back. Remove existing graphic.

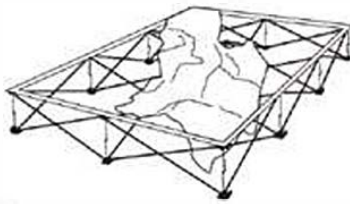

2 Starting at one corner, attach loop on the graphic to hook on the frame.
NOTE: Hook & Loop on the graphic should extend approx. 1/4" - 1/2" beyond hook and loop on the frame (it should not be flush)

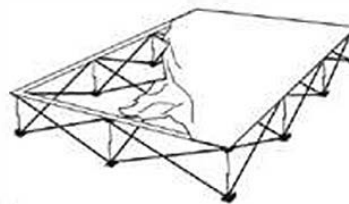

3 Working in a continuous direction around the frame, attach the rest of the graphic. Make sure the graphic is pulled taut while attaching the Hook & Loop.

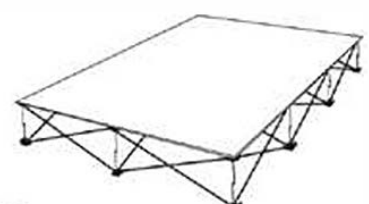

4 If needed, adjust hook & loop for taut fit.