

# Sail Sign Mount for Deluxe Tent Frame


240198

## Product Specifications

Color: Silver and Black

### Product Parts


- 1 - Connector (x2)
- 2 - Pole Holder

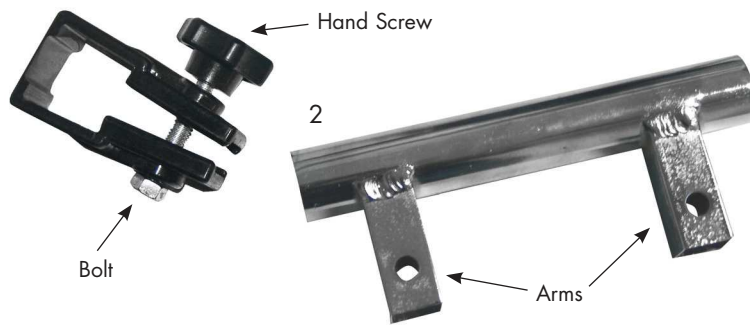

## Display Set-Up


### Step 1

Remove the Bolts from the Hand Screws and the Hand Screws from the Connectors (1).

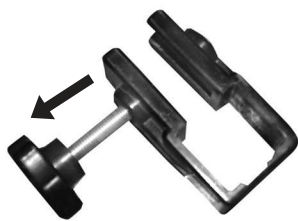

### Step 2

Position one Connector (1) at desired height on tent leg. Push the Connector (1) forward until the tent's leg fits firmly against the back of Connector (1).

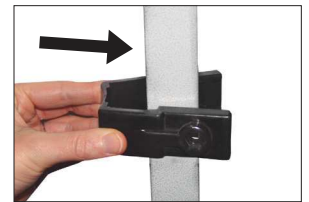


Place the second Connector (1) above the first and repeat step.



### Step 3

Insert the Pole Holder's (2) Arms into both Connector (1) openings.

Thread the Hand Screw through the holes in both the Pole Holder's (2) Arm and Connector (1). Replace the Bolt to secure.

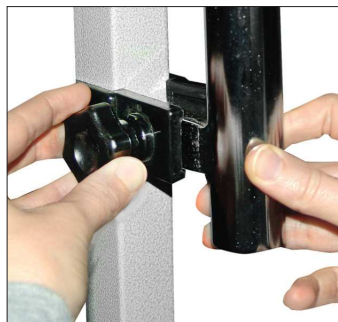

Repeat for the other Connector (1).

### Step 4

Insert your Sail Sign's pole into the Pole Holder (2) and your Sail Sign Mount is complete!

\*Recommend for use with 8' and 11' Sail Signs only. Do not use with 14' Sail Signs.



## Storage

Place all product parts into shipping box and store in a cool, dry location.

## Care

To clean, wipe with damp cloth.

*Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.*