
SINGLE ARM ASSEMBLY

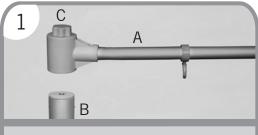

 Place Banner Arm (A) onto the Aluminum Pole (B).
Using the supplied Screw (C), fix the Banner Arm
(A) in place.



2. Attach flag to the Banner Arm Clips on the Banner Arm (A) and the Pole Clips on the Aluminum Pole (B)




3. Extend Aluminum Pole (B) to the point until the Spring Buttons (D) lock.



4. Fix Security Ring (E) to the hole in the Aluminum Pole (B) right above the bottom Pole Clip (this will prevent the flag from sliding up).



DOUBLE ARM ASSEMBLY

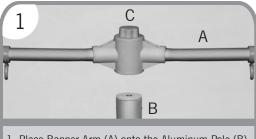

 Place Banner Arm (A) onto the Aluminum Pole (B).
Using the supplied Screw (C), fix the Banner Arm
(A) in place.




Attach flags to the Banner Arm Clips on the Banner Arm (A) and the Pole Clips on the Aluminum Pole (B).






4. Fix Security Ring (E) to the hole in the Aluminum Pole (B) right above the bottom Pole Clips (this will prevent the flag from sliding up).

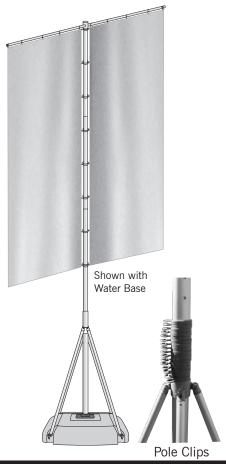






PARALLEL ARM ASSEMBLY

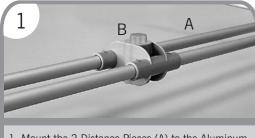

1. Mount the 2 Distance Pieces (A) to the Aluminum Pole's Upper Connecting Piece (B).

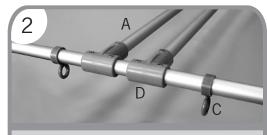

Screw the Upper Banner Arms (C) with their pre-mounted Parallel Connectors (D) onto the ends of the Distance Pieces (A).




3. Remove 3 Banner Arm Clips from the Lower Banner Arms (B). Fit Lower Banner Arms (C) into the pole's Lower Connecting Piece (E) and put the removed Banner Arm Clips back on. At the Connecting Piece (E), fix the Lower Banner Arms (C) in a central position.



4. Attach flags to the Banner Arm Clips on both Upper and Lower Banner Arms (B). Extend Aluminum Pole to the point that the Spring Buttons (D) lock.



TRIPLE ARM ASSEMBLY

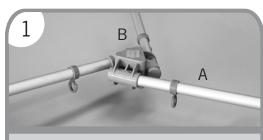

1. Screw three of the Banner Arms (A) into the Upper Connecting Piece (B).



2. Screw the remaining three Banner Arms (A) into the Lower Connecting Piece (C).



3. Attach flags to the Banner Arm Clips on the Banner Arms and Pole Clips on the Aluminum Pole.



4. Extend Aluminum Pole to the point until the Spring Buttons (D) lock.







