 


Tent Banner Shield

TNT-3MX3M-GUARD-HLF-WLL

The Tent Banner Shield is a clear vinyl tent panel to add to your Zoom™, Eco or Standard 10' canopy frame (not included; frame and canopy is sold separately). This 10' wide and 5' tall crystal-clear vinyl banner shield/ wall canopy wall panel install in minutes. The clear vinyl protects you inclement weather and provides a barrier for social distancing and safe transactions.

Whether you're working in an enclosed job site, camping or taking your Tent to an outdoor sporting event, you can stay protected inside while still being able to enjoy what's going on around you. The clear Tent Banner Shield is sold per panel and can be used on just one side of your canopy tent enclosure or on multiple sides.

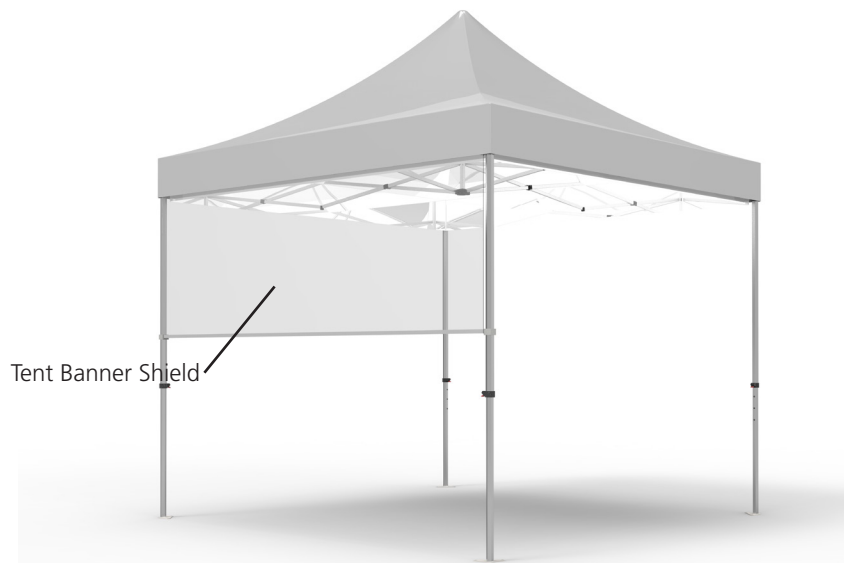

features and benefits:

- Toolless assembly
- Attaches easily to canopy and legs
- Simple and fast to take assemble and breakdown
- Easy to clean with soft cloth and mild soap
- 6 month warranty against manufacturer defects.
- Tent and canopy sold separately

dimensions:

Hardware

Assembled unit:
116" w x 40" h x .125" d
2946mm(w) x 1016mm(h) x 3mm(d)

Approximate weight:
3 lb / 2 kg

Shipping

Packing case(s):
1 BOX

Shipping dimensions:
18" l x 12" h x 4" d
457mm(l) x 304mm(h) x 101mm(d)

Approximate total shipping weight
(includes Shield & Box):
5 lb / 3 kg

additional information:



WARNING: Cancer
www.P65Warnings.ca.gov

2 person assembly recommended:



We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE. See Graphic Templates for graphic bleed specifications.

ATTACH GRAPHIC

*Not to scale

INCLUDED IN YOUR KIT:



x1

TNT-3MX3M-GUARD-HLF-WLL-G

 
STEP 1:

Start in either corner. Attach graphic with hook & loop on the inside of tent's apron. See picture below.



STEP 2:

After connecting top with hook & loop, next the graphic has a hook & loop scrap at the bottom of each side of graphic. Attach both to tent posts. See picture below.

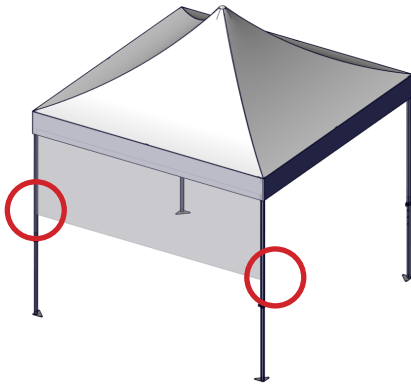

STEP 3:

COMPLETE SETUP



Zoom Popup Tent Essentials

Care and Maintenance

1. Avoid use during heavy downpours and strong winds. Water may collect on canopy tops in heavy rain. Water must be pushed off the top or its weight may collapse the canopy.
2. This is a sewn product. Water may leak through needle holes in fabric during constant or heavy rain.
3. Always pack your canopy top dry to prevent mildew.
4. Remove your canopy top from the frame before storing or transporting.
5. The canopy should always be anchored. Spikes are provided for anchoring on turf. We recommend using the Base Weights for anchoring on solid surfaces.
6. Washing instruction. Place the canopy top on the frame at the lowest position and spot clean with mild detergent and a soft brush for soiled spots. Allow the top to dry completely before storing.
7. The frame will operating and look better if the bolts are tightened frequently. Use a Philips screwdriver for most fasteners. The tool is not included.

Canopy Top Folding Instructions

Caution: Please use care when folding combination light and dark colored tops. Fabric dyes have a tendency to migrate from dark shades to lighter shades if the coated sides are in contact when folded and stored.

Step 1. Fold all four corners together and lay flat. This is the most important step in correctly folding color combination tops. Keep the coated side of the same color together to prevent color transfer.

Step 2. Take the four corners and fold them to the opposite side.

Step 3. Fold the tip of the top down to the bottom edge.

Step 4. Fold in half lengthwise bringing the top to the bottom edge.

Step 5. Fold into thirds and place in bag.

