

ASSEMBLY INSTRUCTIONS

Contents of Case



Frame
Channel Bars in Bag
Center Panels
Endcaps
Halogen Light(s)
Emergency Repair Kit
Fabric or Graphic Case Wrap*
*Not always included

- Installing Lights

Position frame in front of you with the Black hubs at the top, and facing you.







Expanding the Frame

Pull the frame upwards extending in all directions.



Channel Bars

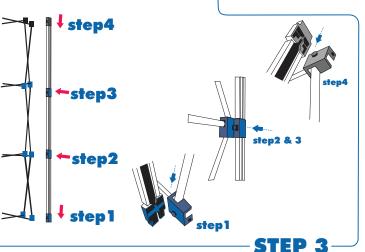

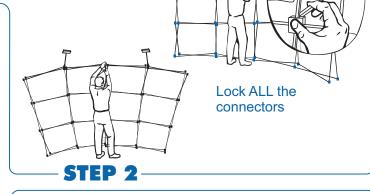


Attaching Panels

Attach panels in order, left to right or right to left, and finish with the end caps.

It may be necessary to adjust panels for improved alignment.





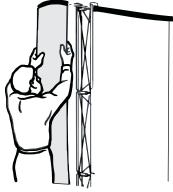

STEP 4



DISASSEMBLY INSTRUCTIONS


Case to counter conversion

Wrap fabric/graphics around the case as shown.







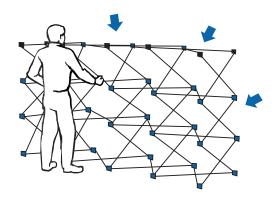

Disassembly & Repacking

- Remove panels starting at the bottom and carefully pulling upward, then unhooking from the hubs at the top. Roll all the panels together with the graphic/fabric facing outward.
- 2 Starting at the top, remove the channel bars and pack in their carry bag.

Before collapsing frame, release ALL connectors by depressing lever.



- 3 Stand in front of the frame and collapse it by gently pulling the left and right sides together as shown. The display will collapse with minimal effort.
- 4 Pack components as shown.





Note: When stored, panels must be rolled with fabric/print outside.

LIMITED WARRANTY

Camelback Displays extends warranties to all its product lines to ensure customer satisfaction.

The pop up frame is backed by a limited lifetime warranty against manufacturer's physical defects in materials or workmanship under normal use by the original owner.

For other pop up components – channel bars, cases, light fixtures, shelving, and accessories – the warranty period is one year.

