

Congratulations on the purchase of your Tabletop Pop-Up Three Dimensional Fabric Display.

Owner's Manual

- Includes:
- Parts List
- Assembly Instructions
- Disassembly Instructions
- Storage Instructions
- Care Instructions
- Warranty Information

Please read all of the information carefully and contact your distributor or supplier with any issues.



Parts List

- 12-Quad Frame (Q)
- Graphic Banner (C)
- Graphic Banner (E)
- Graphic Banner (G)
- Graphic Banner (H)
- Graphic Banner (I)



Assembly Instructions



 
Step 1

Remove frame (Q) from case. Standing in front or behind the frame (Q) pull up from the middle of the frame until it expands and extends out fully. Position on table top.



Step 2

Attach graphic banner to frame (Q) by locating hole slits in each corner of banner (and sides) and securing it around metal pins in frame (Q). Repeat this step for each banner until all banners are secured to frame (Q) in desired locations.

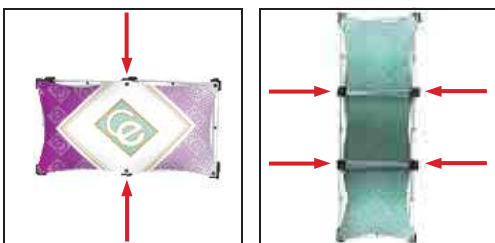

Step 3

Please note that graphic banners (E, H & I) have additional hole slits located in the center that need to be attached to frame (Q).

See Step 4 for banner placement specifics.

Assembly Instructions (cont.)

Step 4

 
Banner C attaches to the front of the frame with the right two corners and the back of the frame with the left two corners. Or this can be reversed with the left two corners in the front and the right two corners in the back.

Banner E attaches horizontally only to the front of the frame with all six peg holes. Or this can be reversed with all six peg holes in the back.

Banner G attaches diagonally to the front of the frame with all four peg holes. Or this can be reversed with all four corners in the back.

Banner H attaches vertically to the frame. The two sets of end peg holes attach to the front of the frame, the center (top and bottom) four peg holes attach to the back of the frame. Or this can be reversed with the two sets of end peg holes attach to the back of the frame, the center (top and bottom) four peg holes attach to the front of the frame.

Banner I attaches vertically only to the frame, with the top four peg holes on the front of the frame, and with the bottom two peg holes attached to the back of the frame.

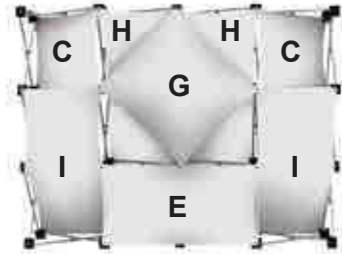

Graphic Placement



Banner C



Banner E



Banner G



Banner H



Banner I

Disassembly Instructions



Step 1

For quick set up and take down you may leave graphic banners on frame (Q). Place hands on frame (Q) and collapse.



Step 2

Continue to collapse frame (Q) until fully retracted for storage. Make sure that no graphic banners become snagged while collapsing frame (Q).

Care Instructions

Graphic banners are machine washable. Tumble dry low. Clean frame with damp cloth and wipe dry.

Warranty Information

All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.

GeoMetrix Pop Up Products:

<https://www.camelbackdisplays.com/pop-up-displays/3d-pop-ups/mini-geometrix-pop-up/>

Product Page:

<https://www.camelbackdisplays.com/product/minigeometrix-kit-l-337211/>