


Optimum Retractor

Product Parts


- 1 - Base
- 2 - Banner Rail
- 3 - Shock-cord pole
- 4 - Pin (x2)

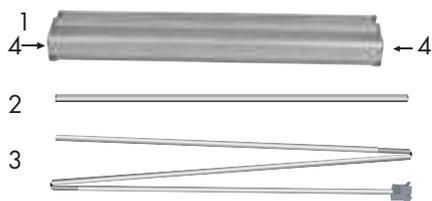

Banner Set-up

Step 1

Remove both end caps from the Banner Rail (2) and open. Fully insert the top edge of the Graphic Banner into the groove of the Banner Rail (2). Snap it shut. Replace end caps.

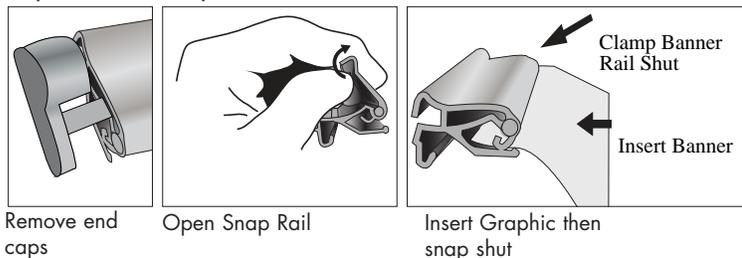

Remove end caps

Open Snap Rail

Insert Graphic then snap shut


Step 3

Maintain tension on the banner while slowly removing one of the Pins (4). Allow the banner to gently roll into the canister. Repeat steps 1-3 for opposite side.




Step 5

Gently lift one of the Banner Rails (2) up to the top of the Shock-cord Pole (3) and attach as shown. Repeat step 5 for opposite side.

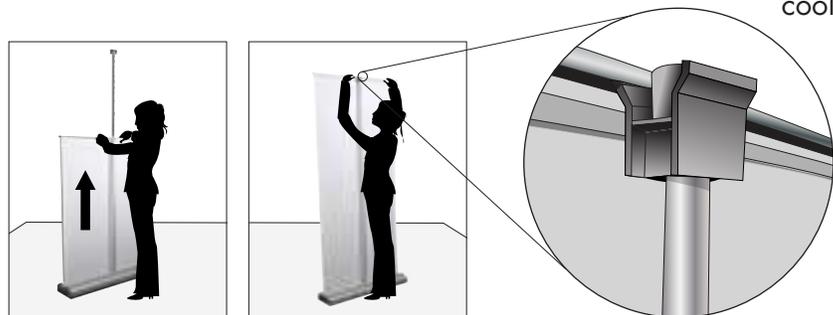


Step 2

Lay the Graphic Banner Flat (printed side up) and align it to the top of the tape leader from the Base (1). Remove the strip of protective paper to expose the adhesive. Firmly and evenly press the Graphic Banner onto the adhesive moving up the edge as you pull away the strip of protective paper.

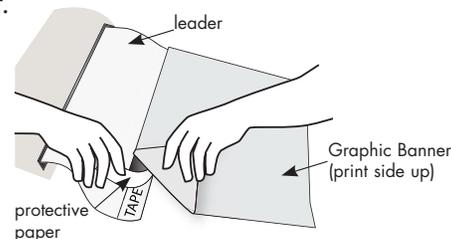

Step 4

Place Shock Cord Pole (3) all the way into the middle base holder. NOTE: make sure the poles make it into the second stabilizing holder as shown.

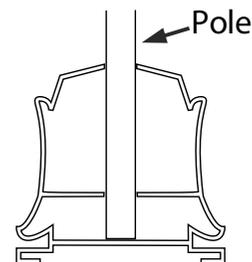

Storage & Care


Place all product parts into Carry Case and store in a cool dry location. To clean, wipe with a damp cloth.



Replacement Graphic

What you will need before you start

- 1 - Graphic
- 2 - Two-Sided Banner Tape
- 3 - Tension Pin

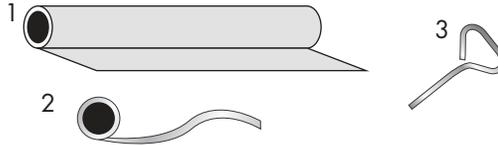

* For ease of graphic replacement, the use of a competent partner is recommended but not required.



Prep Instructions


Step 1

Locate the Tension pin on your retractor. It is usually found on the bottom of the base. A two inch finishing nail can substitute for the pin. Hold the base firmly and have your partner carefully pull the banner completely out of the base exposing the leader beyond the original graphic. This is best done laying the unit on its backside.



Step 2

With the leader exposed and tension on the banner, fully insert the tension pin into the hole on the side of the unit preventing the axle from retracting the banner back inside. This may take your partner moving the banner slightly in or out to line the pin in its slot. If done correctly there will not be any tension on the banner and you can begin the graphic change out procedure.

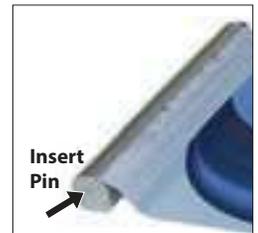

Graphic Replacement

Step 1

Carefully peel the graphic from the leader. You don't want to damage or tear the leader.



Step 2

Remove the plastic end caps from the ends of the snap rail. Snap the rail open. Note how the banner was installed in the rail so you can replicate that with the new graphic.



Step 3

Install the snap rail on the top of the banner. Make sure the banner is all the way inserted in the snap rail. Snap the rail shut and replace the end caps.



Step 4

Adhere the provided banner tape to the end of the leader. Remove backer from the tape and adhere the banner to the leader making sure it's completely straight. You can add a strip of packing tape for added precaution.



Step 5

Have your partner hold the top of the banner taut and then gently pull the tension pin out. Retract the new banner slowly into the base.



NOTE:

End Caps, Snap Rails, Tension Pins and other hardware may vary from your product, however the concept is the same.

Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.