



Eurofit Chalet

Product Parts


- 1 - Main Frame Pieces
Shown below
- 2 - Graphic

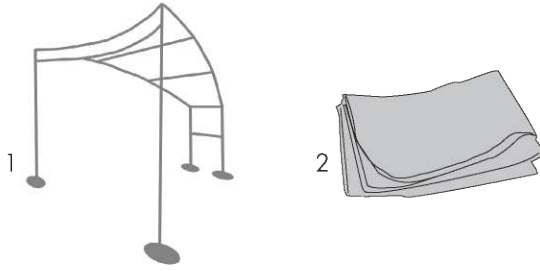


Front Vertical Sides

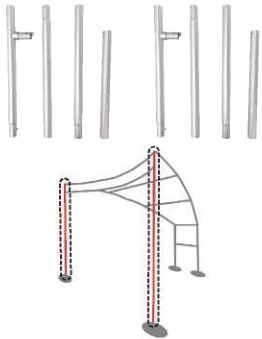


Back Vertical Sides

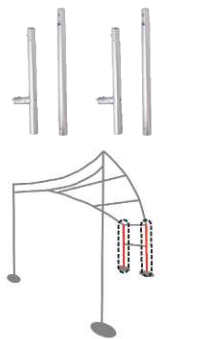

Back Horizontal Bars

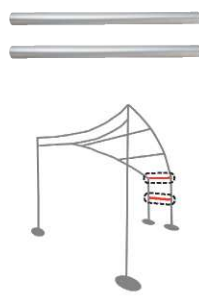

Back Corners

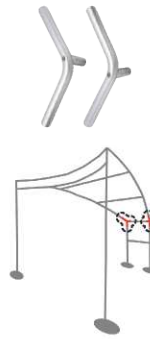

Display Set-Up


Step 1

Find parts with matching numbers and connect them using their push buttons. Attach the feet and stand the frame upright.

Step 2

Drape the Graphic (2) over the top and back of the frame, and zip it closed on all sides.


Duo Top Horizontal Bars

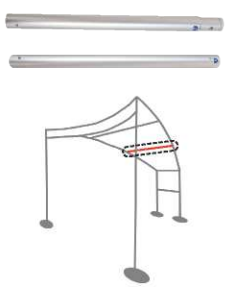


Trio Top Horizontal Bars




Top Sides

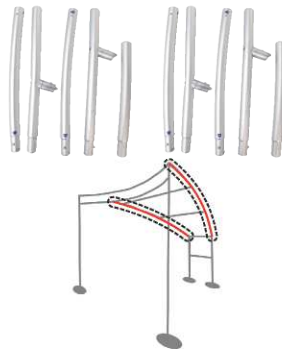


Front Horizontal Arches

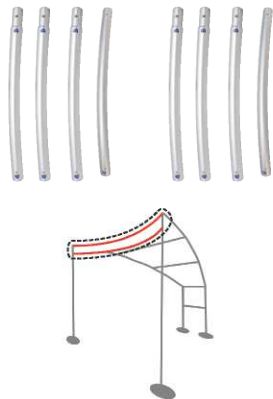

Front Top Corners

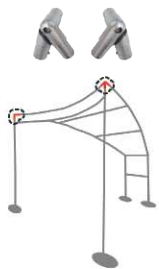

Feet (x4)

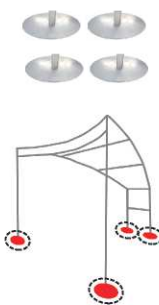

Storage & Care

Wipe the frame with damp cloth to clean. Machine wash the graphic on a cold, gentle cycle. Only air-dry and never dry clean. Steam clean for wrinkles and store parts in a cool, dry place. If any bolts on the frame need to be tightened, use a 5mm Hex Wrench (not included).