

5ft Verge & Verge Glo Displays

Product Parts

- 1 - 4-quad Frame
- 2 - Front or Back Rails (x16)
- 3 - Side Rails (x4)
- 4 - Feet (x2)
- 5 - Graphics with gaskets
(Kit includes 1 front panel and two sides)

Verge Glo addl. Parts

- 6 - Single Quad Ladder LED Lights (x4)
- 7 - Power Adapter Cord (x2)
- 8 - Power Cord (x2)



Display Set-Up

Step 1

Expand the 4-quad Frame (1). Push the middle connectors together.

Step 2

Insert the front Rails (2) around the border of the Frame (1). Insert the Back Rails if ordering an optional back panel graphic.




Step 3

Insert the Side Rails (3) on the top and bottom ends of the Frame (1).


Step 4

From the front, position the Feet (4) so that their holes are toward the frame. Lift the frame and insert the closest corner into the hole. Slide the knob through the Foot until the hole reaches the frame's opposite corner and insert it. Move the Foot back toward the first corner until the Foot is aligned with the frame, with both corners securely in the Foot's groove.

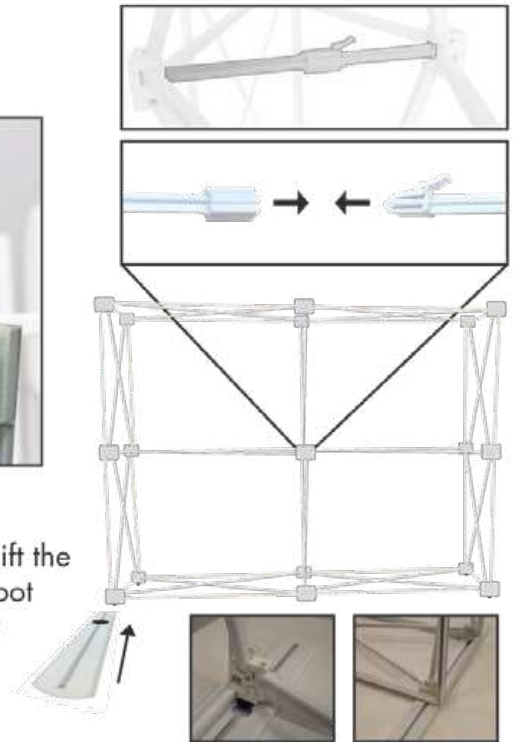

Step 5 - (Verge Glo Only)

Carefully unroll the Single Quad Ladder LED Lights (6). Hang the top clips onto the top of the scissor bar. Attach the bottom clips by securing it in the scissor bar's grooves. Arrows on the Ladder Lights indicate their orientation.

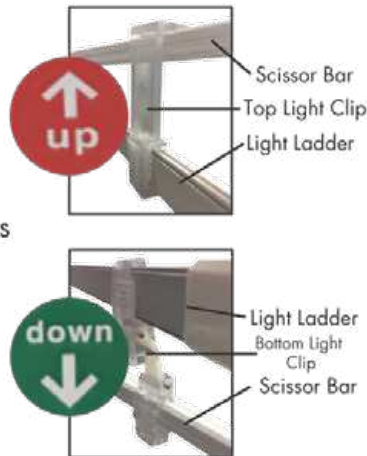

Step 6 - (Verge Glo Only)

Combine the Light Ladders (6) with their wires for power. Attach the Power Adapter Cords (7) to each Ladder's end. Connect the Adapter Cords with the Power Cords (8). For ease of use, a powerstrip or surge protector is recommended (not included).

Step 7

Insert Graphics (5) by feeding its gaskets into the grooves on the Side Rails (3). To remove them, pull the loop found on the corner of the graphic.



Storage and Care

Store all parts in its case, in a cool and dry location. To clean the frame, wipe with a damp cloth. Do not wash the 'Verge Glo' graphics. Wash the 'Verge' graphics on a cold, gentle cycle. Air-dry only. Steam clean for wrinkles and never dry clean.