
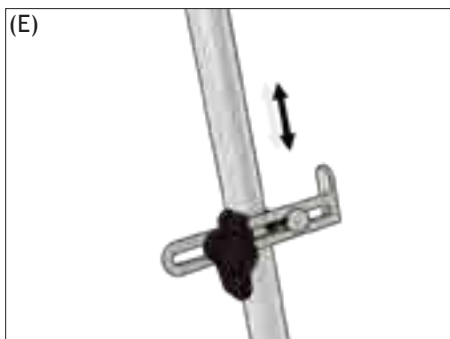


Display Easel

1. Adjust telescopic leg length (fig. A).
2. Open easel (fig. B).
3. (if using top bar) Unscrew knobs until they are almost out (fig. C-1), then hook back of top bar into easel (fig. C-2).
4. Swing top bar downwards to hook into easel and retighten knobs (fig. D).
5. Adjust lower canvas supports (fig. E).

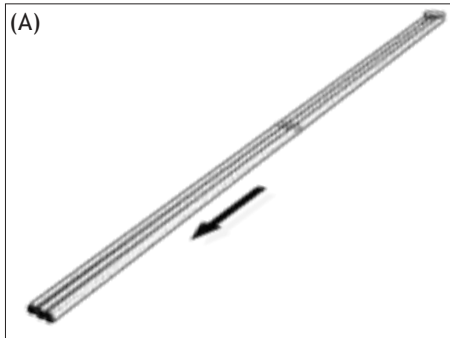

Applicable Products:

350, 350B (without top bar)
350TZ, 350TZB (with top bar)



Display Easel

1. Adjust telescopic leg length (fig. A).
2. Open easel (fig. B).
3. (if using top bar) Open top bar and insert carriage bolts and wingnuts (fig. C).
4. Adjust lower canvas supports (fig. D).

Applicable Products:

555, 556 (without top bar)
555TZ, 556TZ (with top bar)

