

X-TEND Spring Back

X-TEND-1
 X-TEND-2
 X-TEND-3
 X-TEND-4
 X-TEND-5

Economy X-TEND banner stands incorporate basic design features, functionality and reliability. Economy banners include a basic carry bag and a 90-day warranty.



features and benefits:

- #2 grommet in corners
- single sided graphic print
- basic carry bag included
- 90 day warranty against all manufacture defects

dimensions:

| Hardware | Shipping |
|--|--|
| Assembled unit: X-TEND-1: 23.62" w x 63" h x 24" d 600mm(w) x 1600mm(h) x 610mm(d) Approximate weight: 2 lb / 1 kg X-TEND-2: 27.56" w x 70.87" h x 24" d 700mm(w) x 1800mm(h) x 610mm(d) Approximate weight: 3 lb / 2 kg X-TEND-3: 31.5" w x 70.87" h x 24" d 800mm(w) x 1800mm(h) x 610mm(d) Approximate weight: 3 lb / 2 kg X-TEND-4: 31.5" w x 78.75" h x 24" d 800mm(w) x 2000mm(h) x 610mm(d) Approximate weight: 3 lb / 2 kg X-TEND-5: 33.75" w x 80.25" h x 27" d 858mm(w) x 2039mm(h) x 686mm(d) Approximate weight: 4 lb / 2 kg | Packing in 1 Carry Bag: X-TEND-1: 50" l x 6" h x 6" d 1270mm(l) x 153mm(h) x 153mm(d) Approximate shipping weight: 2 lb / 1 kg X-TEND-2: 50" l x 6" h x 6" d 1270mm(l) x 153mm(h) x 153mm(d) Approximate shipping weight: 3 lb / 2 kg X-TEND-3: 50" l x 6" h x 6" d 1270mm(l) x 153mm(h) x 153mm(d) Approximate shipping weight: 3 lb / 2 kg X-TEND-4: 50" l x 6" h x 6" d 1270mm(l) x 153mm(h) x 153mm(d) Approximate shipping weight: 3 lb / 2 kg X-TEND-5: 50" l x 6" h x 6" d 1270mm(l) x 153mm(h) x 153mm(d) Approximate shipping weight: 4 lb / 2 kg |
| Graphic | additional information: |
| Refer to related graphic template for more information. | Graphic material: Flatmaxx |

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE. See Graphic Templates for graphic bleed specifications.

Kit Assembly

Step by Step

Step 1.

 
Remove the graphic and X-TEND frame out of the carry bag.



Step 2.

Extend the frame to the open position. The rods will snap into place to hold its form.


Make sure the 2 upper rods have a flush hook and the 2 lower rods have a offset hook. All 4 hooks should be in the in the forward position for graphic grommet ring application.

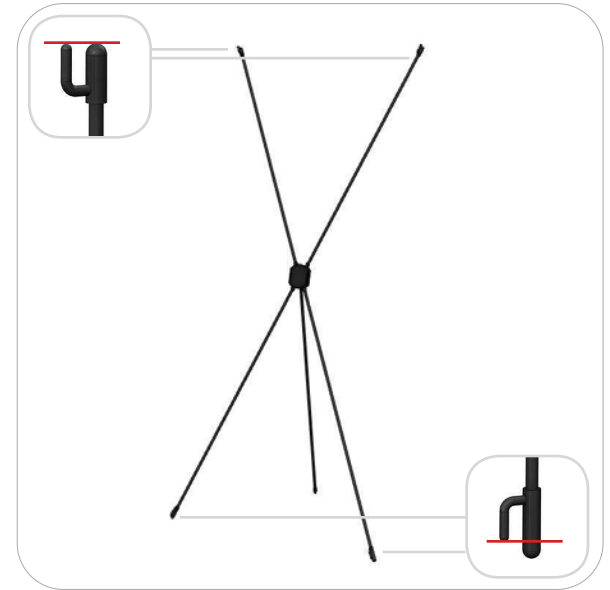

Step 3.

Take the graphic and attach the 2 top grommets onto the upper rods. Make sure the artwork is facing forward and upright.

 The X-TEND rods will start to flex and hold the graphic up with tension.

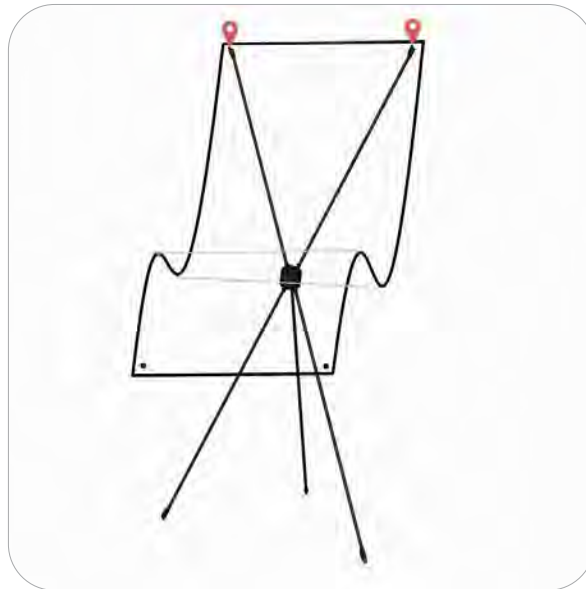

Step 4.

Continue to attach the 2 bottom grommets onto the lower rods. The X-TEND rods will start to flex and hold the graphic in place with tension.

Setup is complete.

