

2

Base

Plate

## Adjustable Pamphlet Tray Attachment Tighten Lock to Secure Attach connector piece to tray as shown. Then connect assembled pamphlet tray to vertical extrusion.

1) Slide infill between stand verticals as shown. 2) Attach horizontal [2] between stand verticals. 3) Attach base [1] to stand verticals using bolts. 4) Attach square plate [3] to stand using bolt.

7) Attach pamphlet trays to stand. Refer to detail.


6) Insert iPad and feed wire through hole.

Steps:



- 1) Remove foam lining from inside bottom of clam shell as shown.
- 2) Attach Home Button Shield with double-sided tape to inside of clam shell, keeping top of shield flush with clam shell opening as shown.

**NOTE**: This is a permanent fix and can't be easily removed.

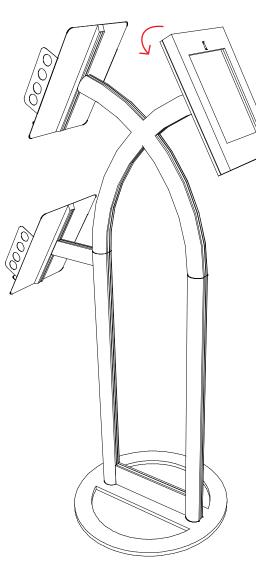

When assembled

Tools Required:

- 1) Hex Tool
- 2) Pliers

