


## EZ6 Oval Designer Counter Assembly Instructions

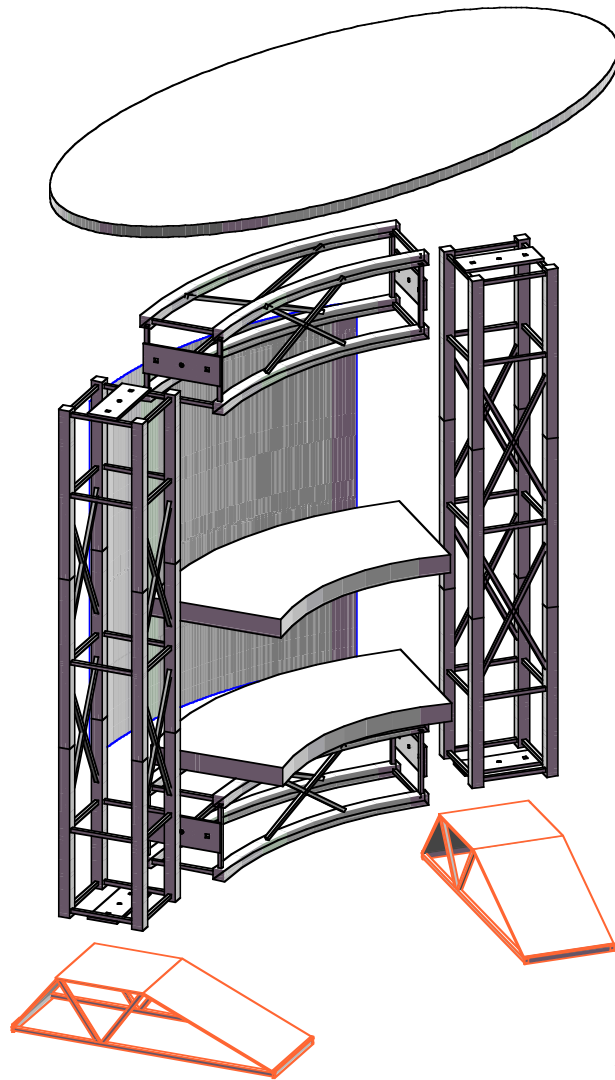

1. Bolt 2 - A3s to the EZ6 Designer Feet using 2 carriage bolts with wingnuts for each.
2. Stand them up and install the R2s between them at top and bottom using a corner bracket on each end. (not shown)
3. Attach the counter top using the supplied brackets and wingnuts.
4. Lay the lower shelf on the lower R2 truss.
5. Install the shelf brackets at the halfway point and put the second shelf on them.
6. Magnet the graphic to the front.