


CONNECTING EZ612 TRUSS

ALIGN THE PARTS SO THAT THE
SQUARE HOLES ARE LINED UP
(EZ612 JCT SHOWN IN GREEN)

INSERT CARRIAGE BOLTS
AS SHOWN (SHOWN IN BLUE)
4 FOR EZ612 HORIZONTAL BEAM
2 FOR EZ6 VERTICAL BEAM

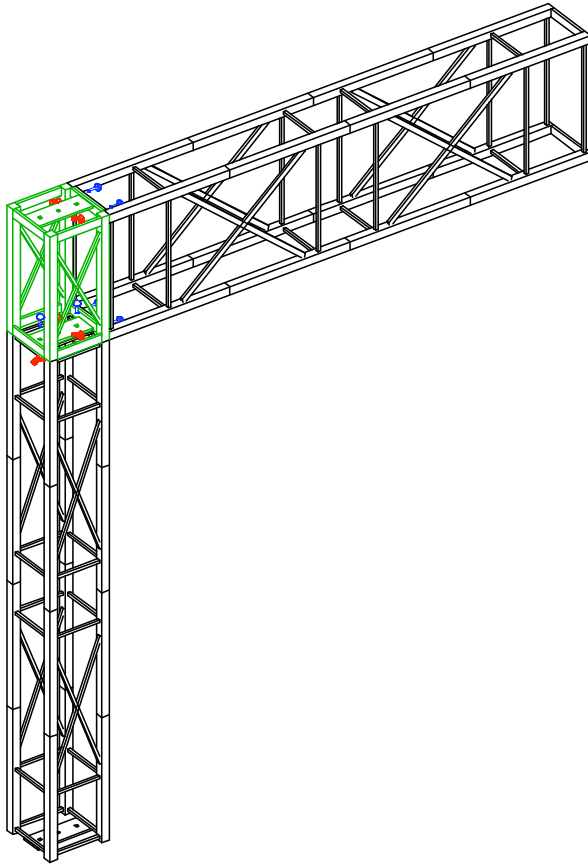

THREAD A WINGNUT ONTO
EACH CARRIAGE BOLT AND HAND TIGHTEN
(DO NOT USE A WINGNUT WRENCH)

