

SOLO Evolution

Instructions

Step 1

Situate the base (B) at the desired location, stretch out the Tensaflex (A) and place it according to the guiding dots. Verify proper vertical direction.

Step 2

Put together the hook and loop on the base with that on the Tensaflex. Leave both sides slightly open.

Step 3

Place each of the shelves (D & E), starting with the lowest one, matching the guiding dots.

Step 4

Place Top (C) starting with the guiding dots, firmly pressing the two shells of hook and loop against each other. Adjust the Tensaflex so that all the hook and loop lines are securely fastened.

To dismantle follow the same steps in reverse order.

Posts


Attach the three parts of the post together. Insert in one of the holes on the Top (A), until it rests on the first shelf (D). Keep in mind that the hook and loop lines on top of the posts should be in front of the SOLO, so that you can place the header.

Locking Door


Detach the Tensaflex (A), two inches from each side. Place the door on the base, open the door and press the doorframe's hook and loop against that on the Tensaflex.

NOTICE


Different types of light may affect the appearance of the SOLO. If you notice shading or color variations on the fabric once you assemble the product, re-assemble the unit reversing the vertical direction of the Tensaflex. For final detailing lightly brush the fabric.

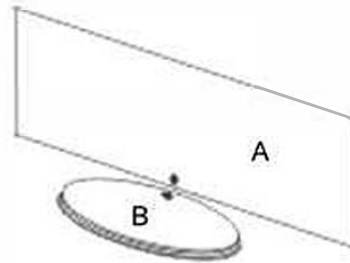


Step 1

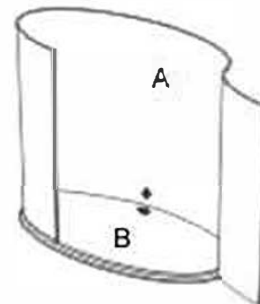

Step 2

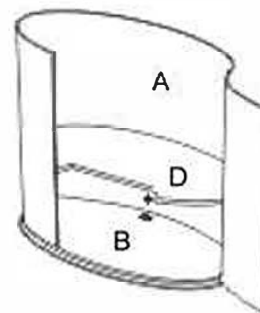

Step 3

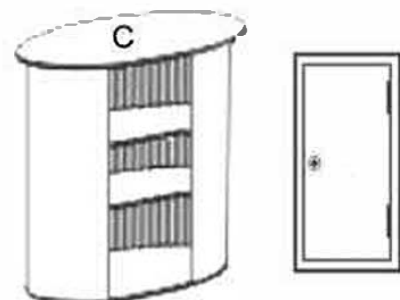

Step 4