
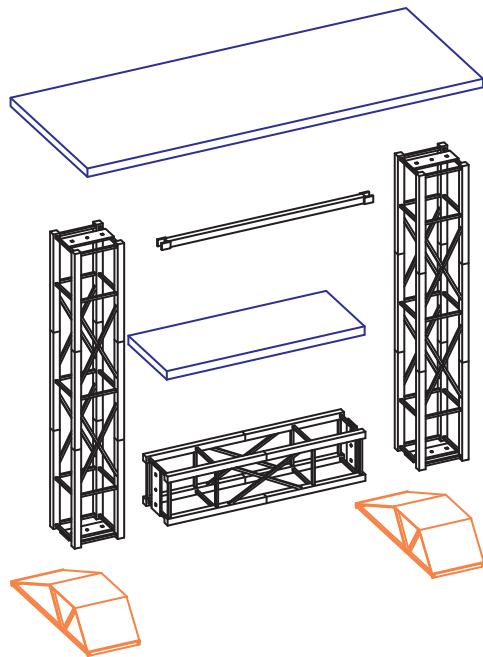


Construction Detail

EZ6 Designer Reception Counter

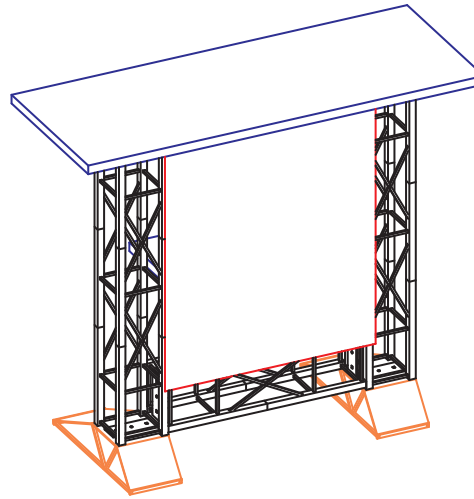

1. Bolt 2-A3 pieces to the EZ6 Designer Feet using two carriage bolts with wingnuts for each.
2. Stand them up and install the A2 between them, at the bottom, using a corner bracket on each end.
3. Attach the counter top using the supplied brackets and wingnuts.
4. Insert seambar between legs, at the front, 1/2" below the top of leg (just inder the webbing.)

Install the shelf bracket on the middle horizontal webbing, and place the shelf on.

5. Apply 28.5"H x 24.5"W flexible graphic, using magnet strip on the reverse perimeter.