



SET-UP NOTES

- 1. Redesign of this exhibit without approval by ORIGIN may result in dangerous and unsafe structures. ORIGIN disclaims any responsibility for redesigned exhibits it does not approve in writing.
- 2. Parts and components such as panels and extrusions are manufactured to metric sizing. Where ever possible sizes have been noted in feet and inches as well as in metric. Below is the imperial to metric sizing table as reference. "Nominal" refers to approximate size.

IMPERIAL TO METRIC SIZES


- 8' Nominal = 94 1/2" or 2400mm Actual
- 4' Nominal = 47 1/4" or 1200mm Actual
- 3' Nominal = 35 7/16" or 900mm Actual
- 2' Nominal = 23 5/8" or 600mm Actual
- 1' Nominal = 11 13/16" or 300mm Actual

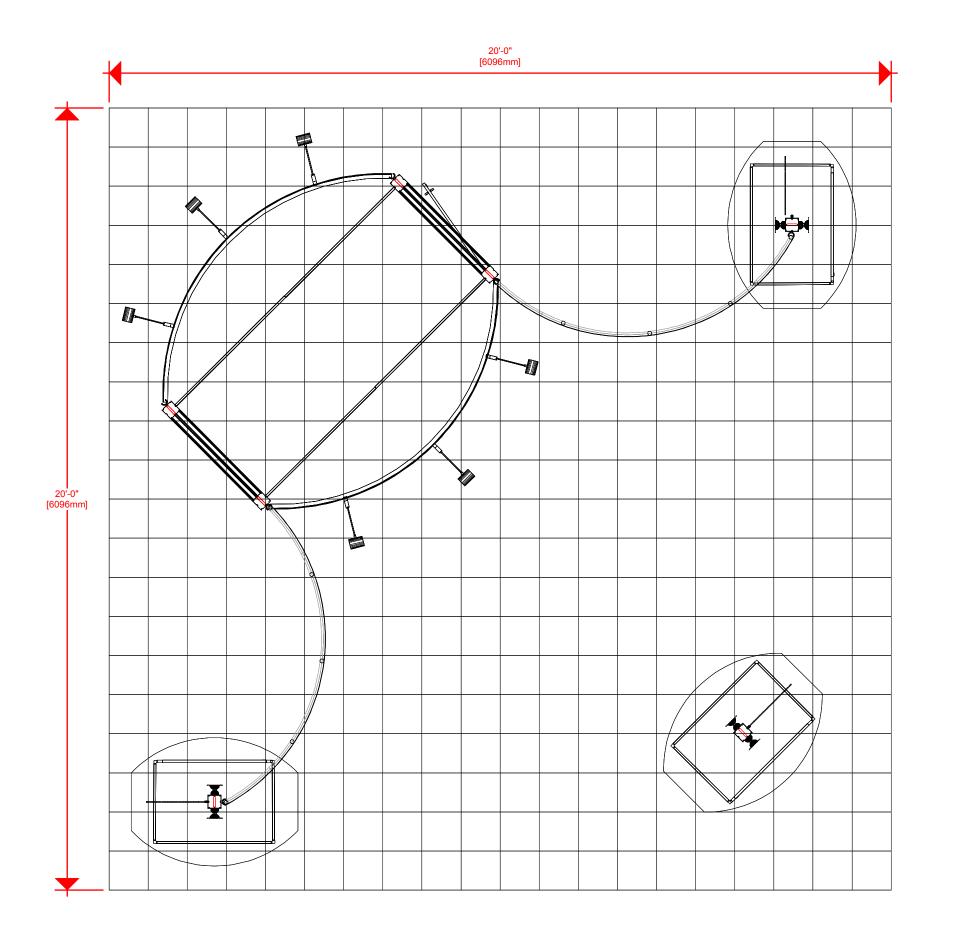


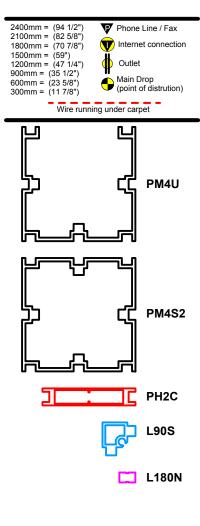


RENTAL KIT


	Code	#	Description
	PM4S2-4 4 1200MM PM4S2 SILVER EXTRUSION WITH PH2 STOP AT 302MM		1200MM PM4S2 SILVER EXTRUSION WITH PH2 STOP AT 302MM
PL43 1 1200MM V x 900MM W LAMINATE PANEL		1200MM V x 900MM W LAMINATE PANEL	
PL44 4 1200MM V x 1200MM W LAMINATE PANEL		1200MM V x 1200MM W LAMINATE PANEL	
L180N-2 2 600MM 180N DEGREE SILVER LINK EXTRUSION		600MM 180N DEGREE SILVER LINK EXTRUSION	
	L180N-600	6	600MM (23.62") 180N DEGREE SILVER LINK EXTRUSION

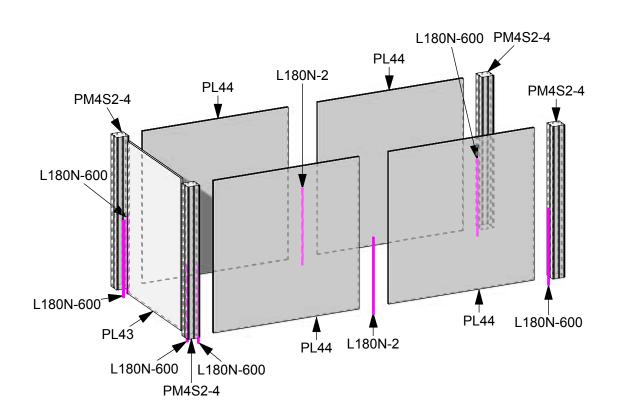


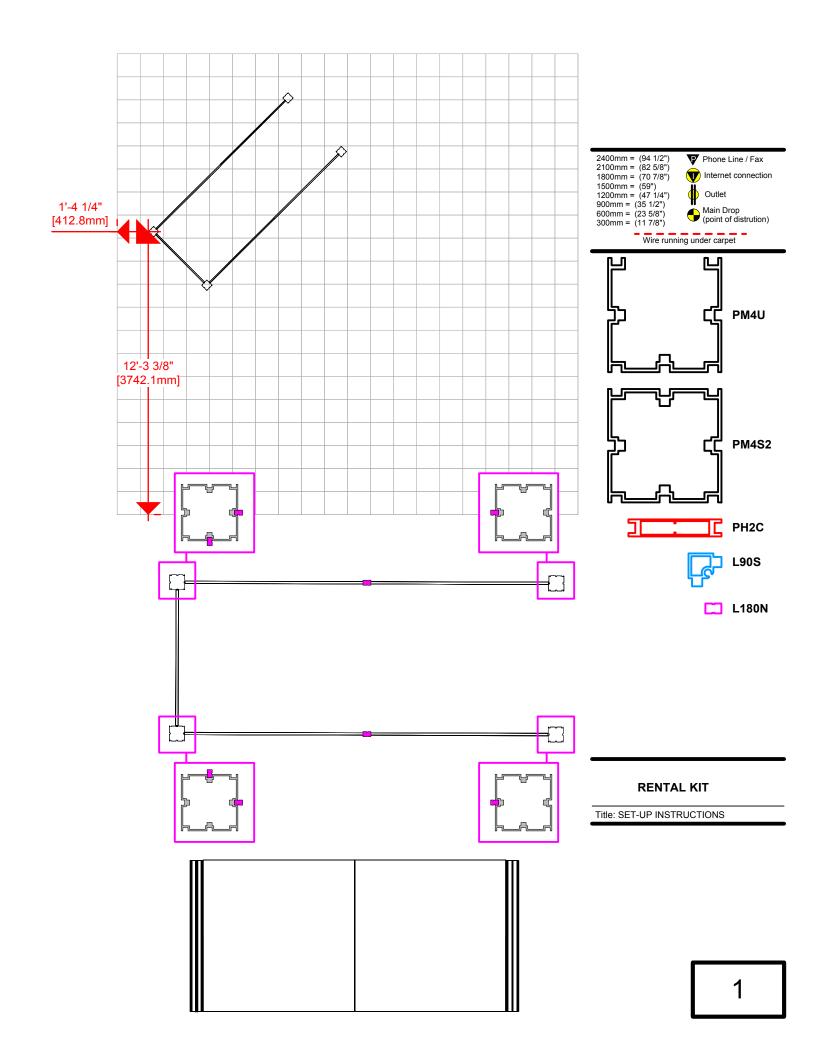


Code	#	Description
PM4S2-4	4	1200MM PM4S2 SILVER EXTRUSION WITH PH2 STOP AT 302MM
PH2C-2	4	600MM PH2 CONNECTOR WITH TENSION GLIDES
TC-30MM	4	SILVER ANODIZE FINISH 30MM TUBE CLAMP

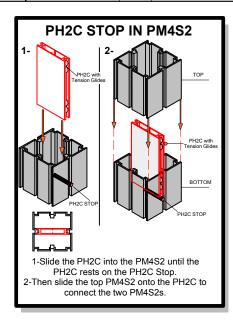


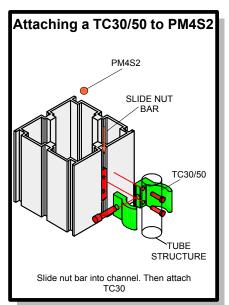


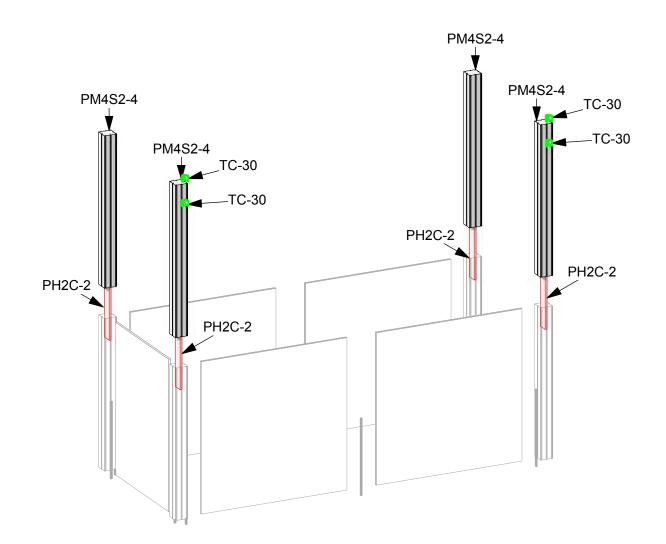

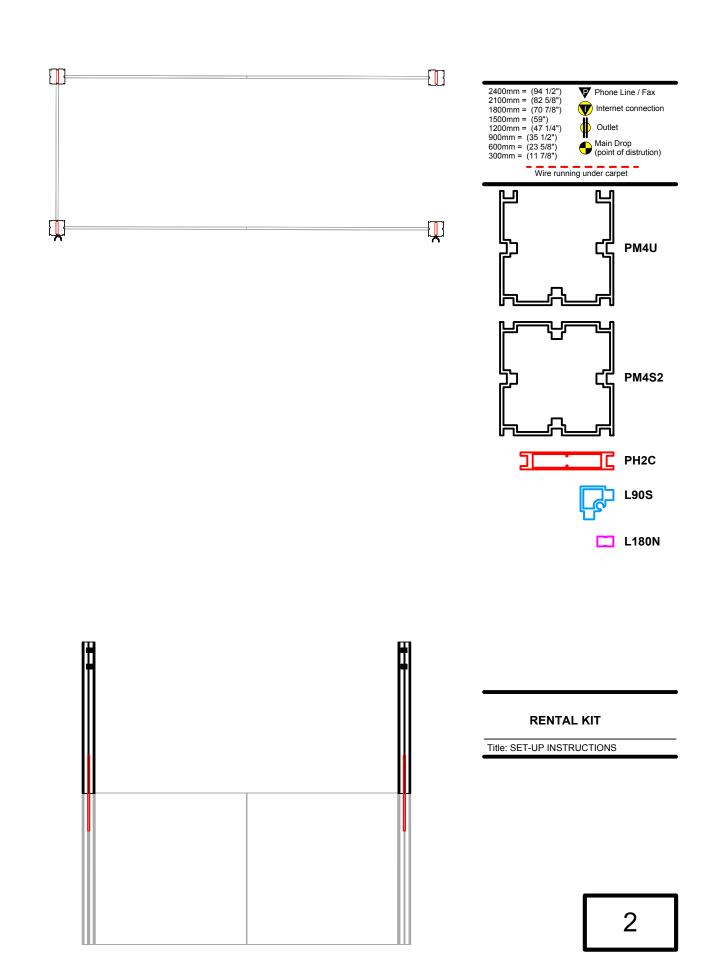



Code # Description					
DP83L-S	1	900MM W x 2400MM V FULL SIZE SPLIT LAMINATE DOOR PANEL			
L180N-1200 2		1200MM (47.24") 180N DEGREE SILVER LINK EXTRUSION			
L180N-600	4	600MM (23.62") 180N DEGREE SILVER LINK EXTRUSION			

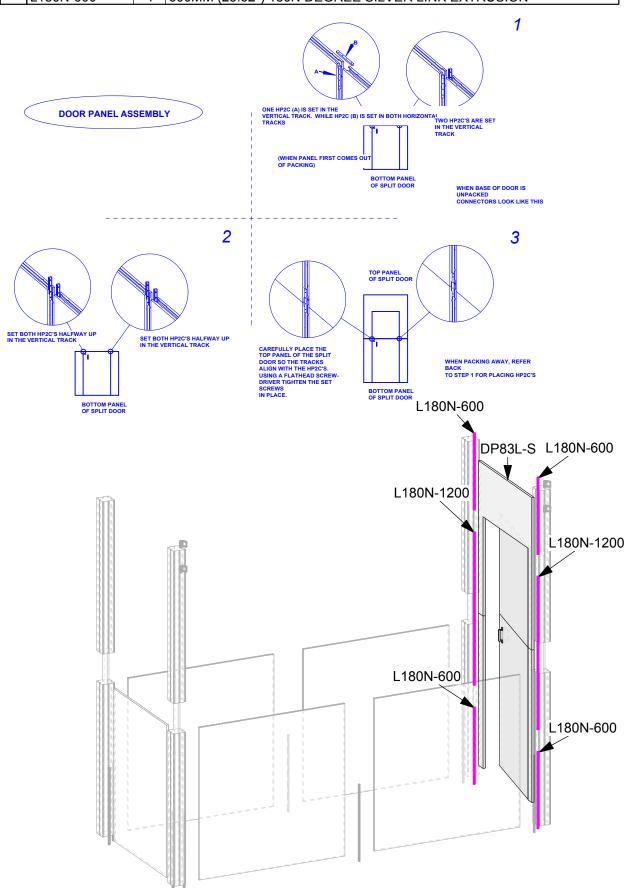

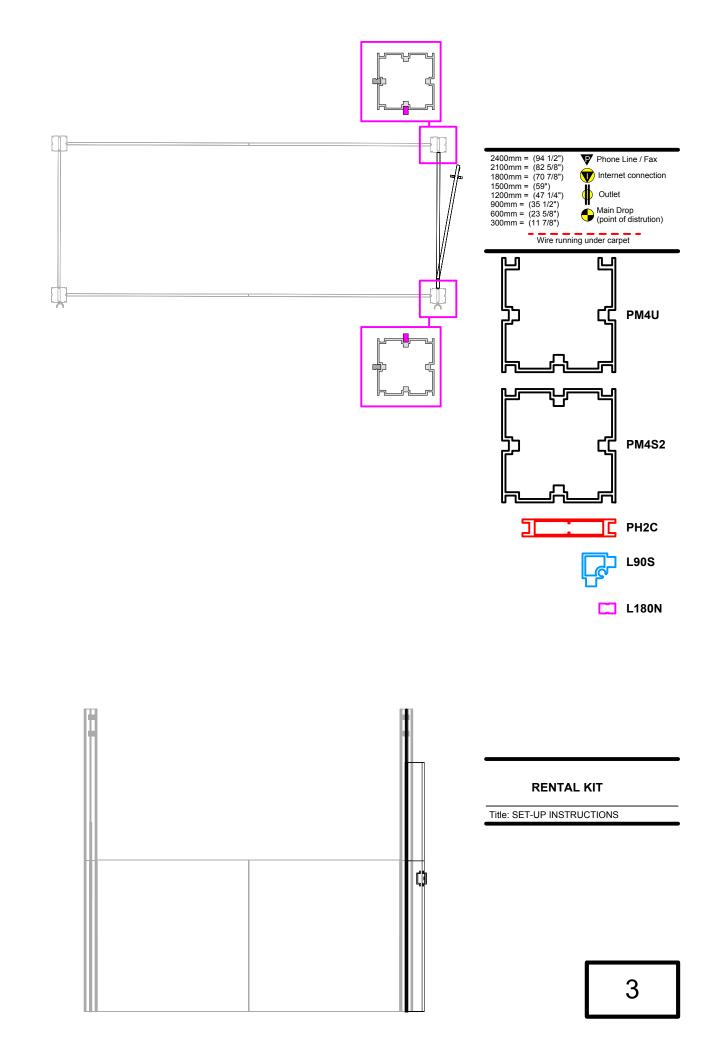



Code	#	Description
PL43	1	1200MM V x 900MM W LAMINATE PANEL
PL44	4	1200MM V x 1200MM W LAMINATE PANEL
L180N-4	2	1200MM 180N DEGREE SILVER LINK EXTRUSION
L180N-1200	6	1200MM (47.24") 180N DEGREE SILVER LINK EXTRUSION

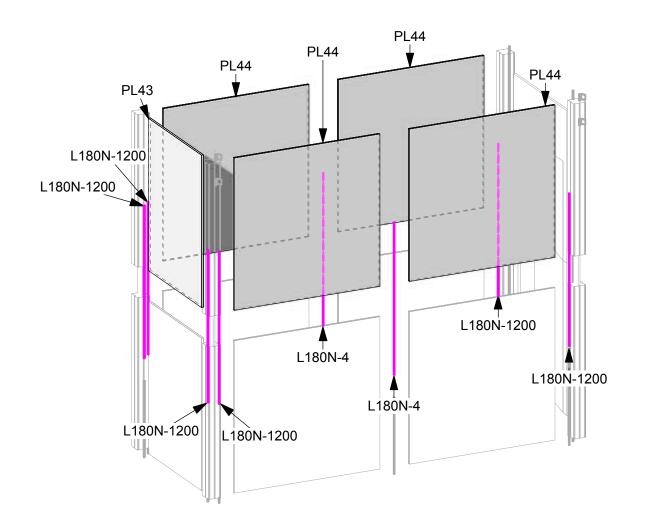


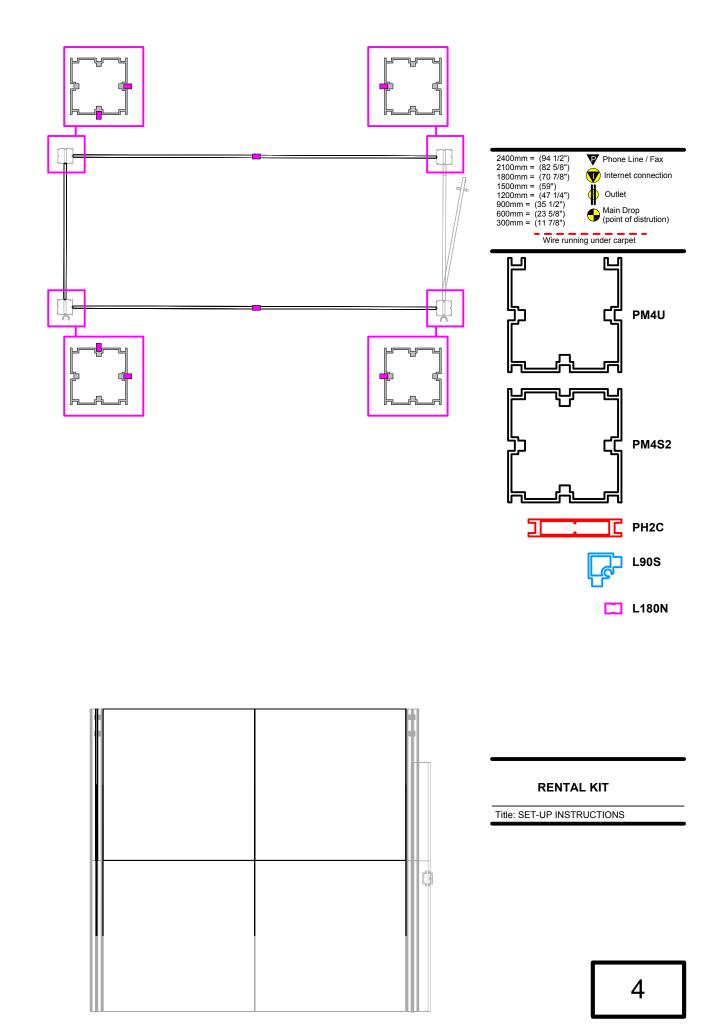


		Code	#	Description
		PM4S2-4	4	1200MM PM4S2 SILVER EXTRUSION WITH PH2 STOP AT 302MM
		PH2C-2	4	600MM PH2 CONNECTOR WITH TENSION GLIDES

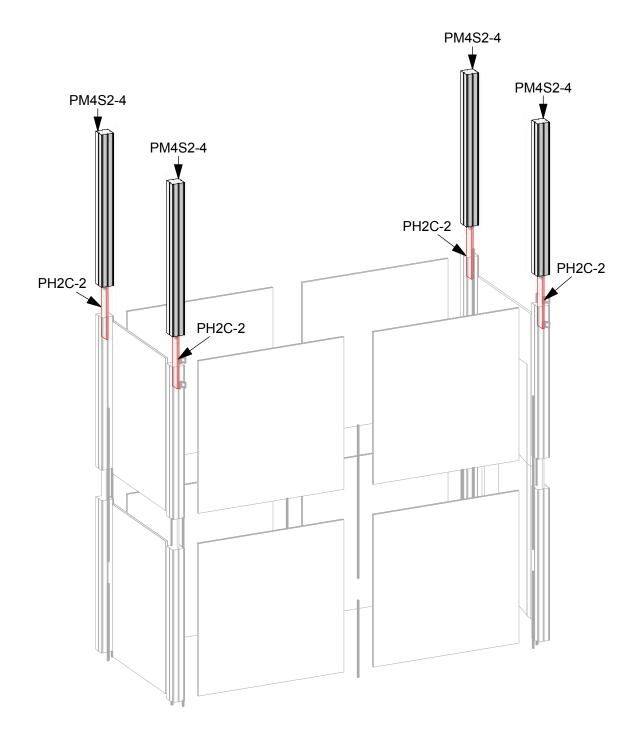


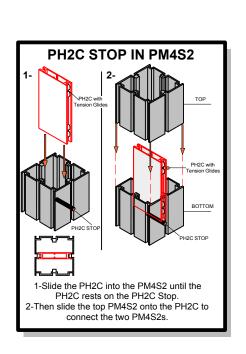

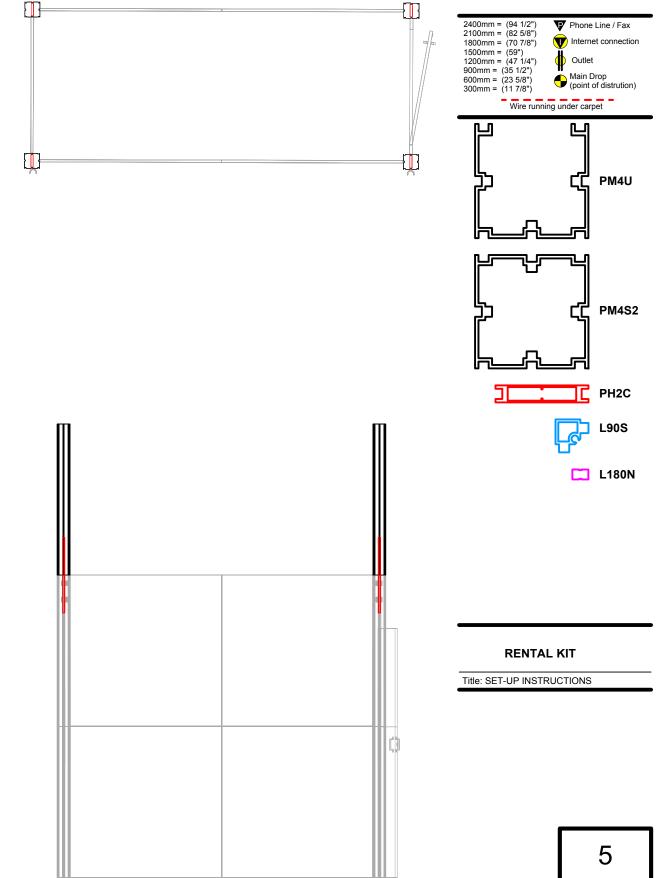



	Code #		T	Description			
		L180N-2	2	600MM 180N DEGREE SILVER LINK EXTRUSION			
Ī		L180N-600	6	600MM (23.62") 180N DEGREE SILVER LINK EXTRUSION			

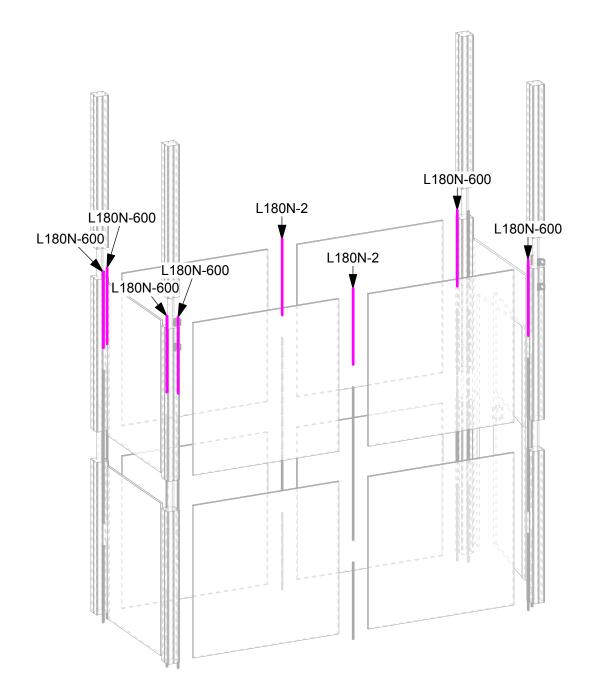


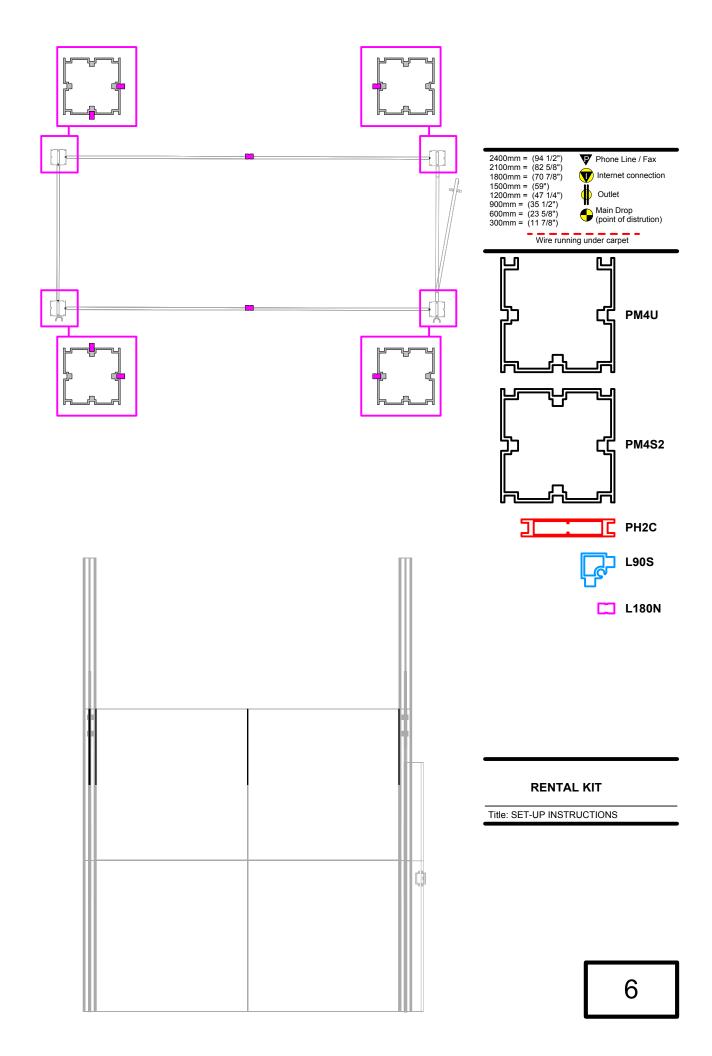


Code	#	Description
PM4S2-3-W/LBE	2	900MM PM4S2 SILVER EXTRUSION WITH LOCKS BOTH ENDS

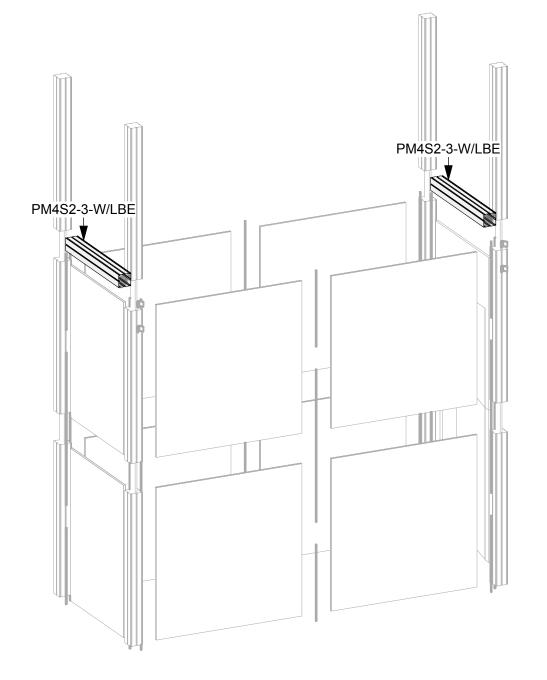


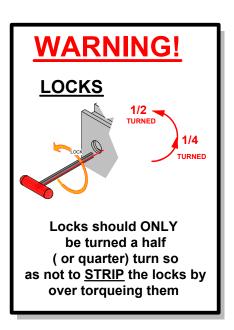


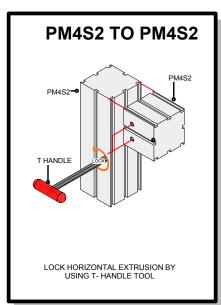

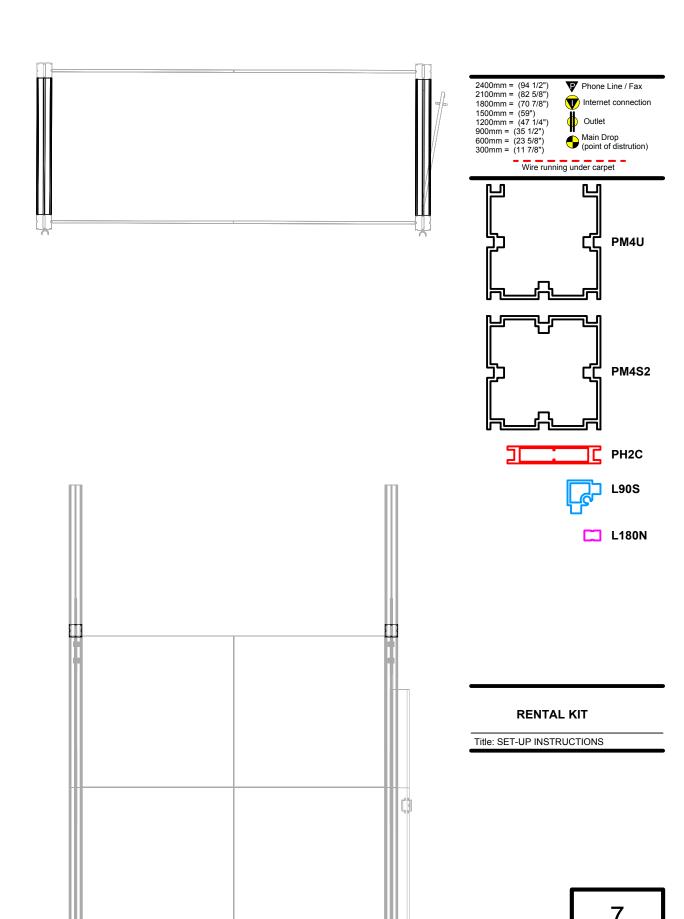

Code	#	Description	
PM4S2-4	4	1200MM PM4S2 SILVER EXTRUSION WITH PH2 STOP AT 302MM	
PH2C-2	4	600MM PH2 CONNECTOR WITH TENSION GLIDES	
TC-30MM	8	SILVER ANODIZE FINISH 30MM TUBE CLAMP	

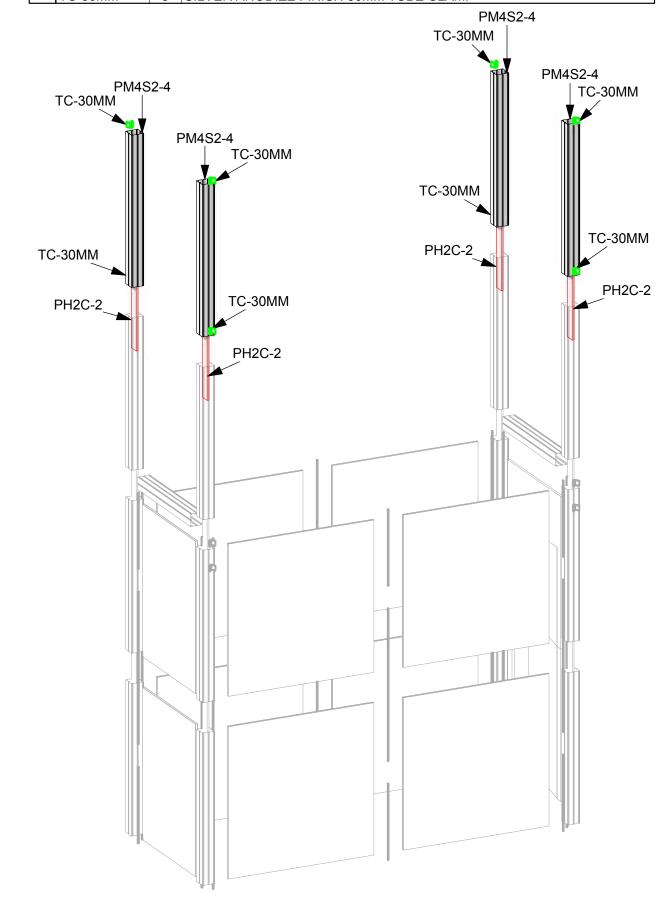

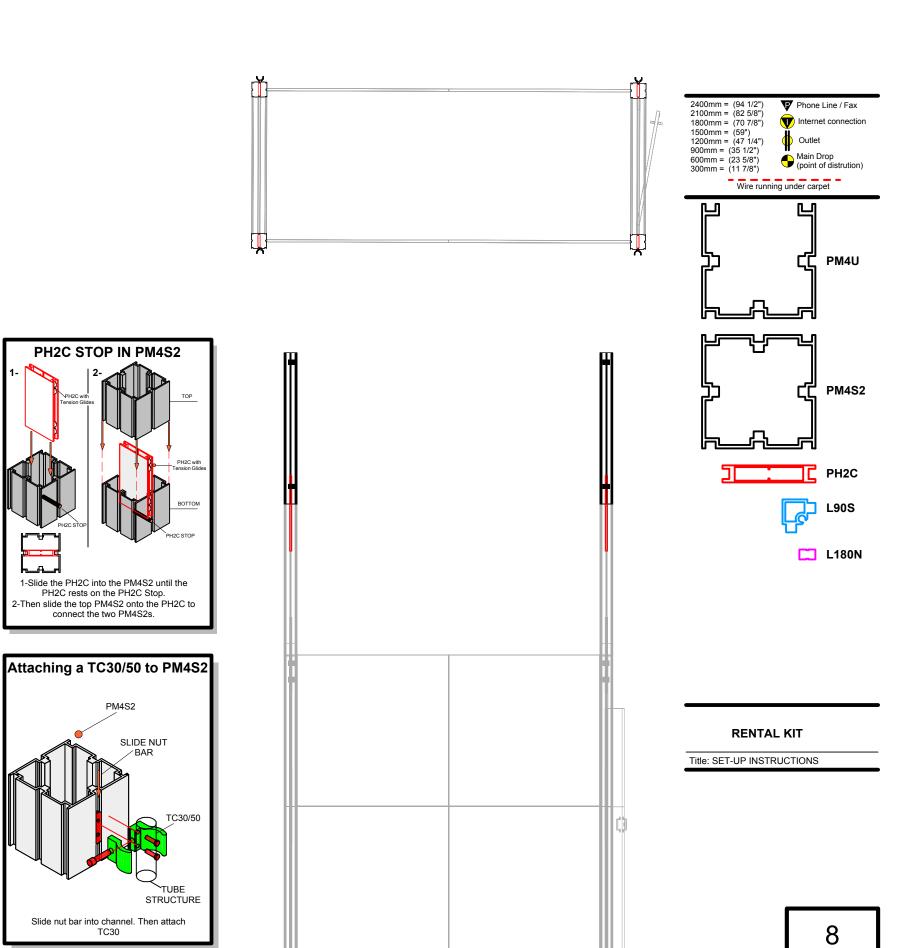

PH2C STOP IN PM4S2


connect the two PM4S2s.


PM4S2


Slide nut bar into channel. Then attach TC30


SLIDE NUT

Code	#	Description
 PM4U-3-W/LBE	2	900MM PM4U SILVER EXTRUSION WITH LOCKS BOTH ENDS

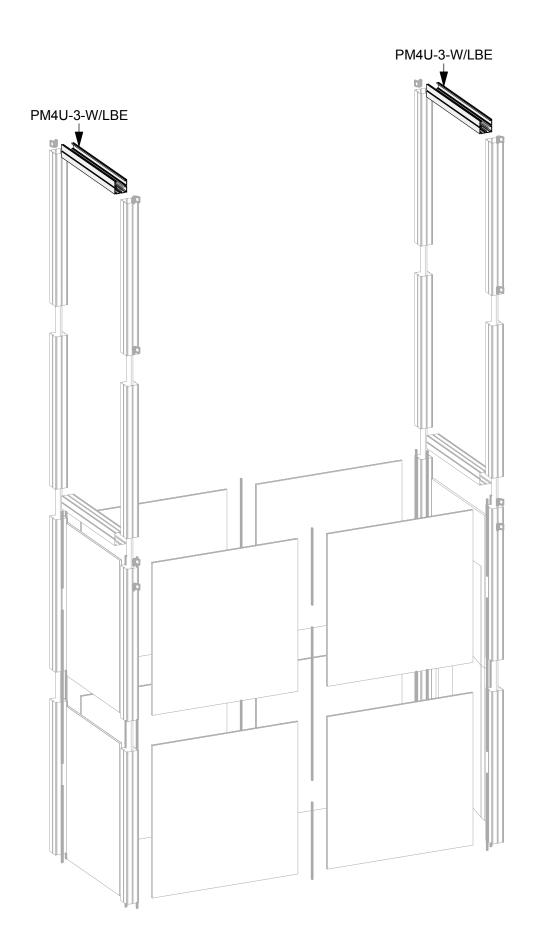

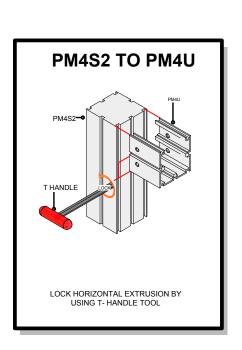

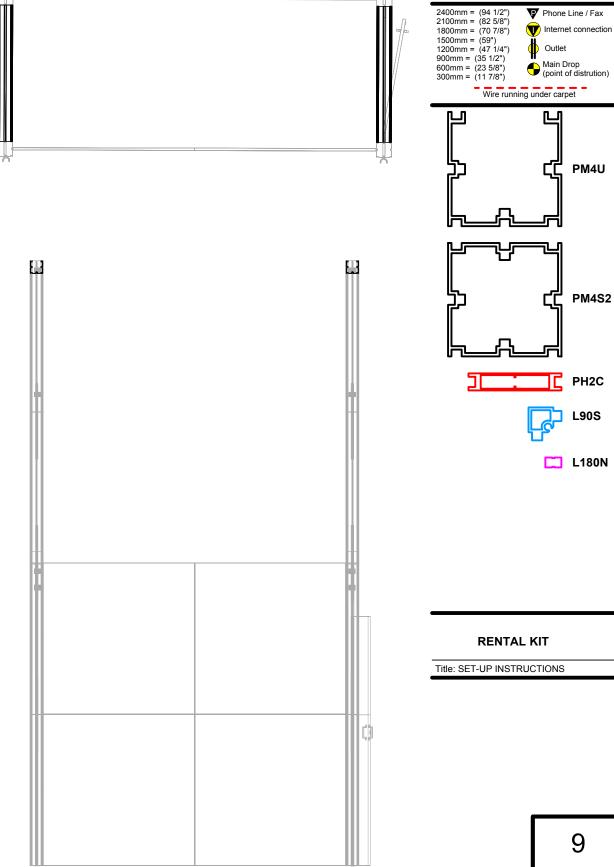

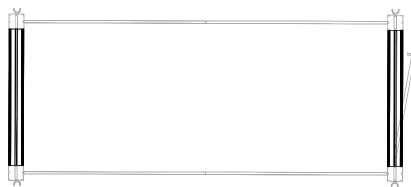

Outlet


CC PM4U

CC PM4S2


PH2C


🗀 L180N

	Code	#	Description
	GRAPHIC D	1	86.37" X 35.43" SINGLE SIDED DYESUB GRAPHIC W/ 8MM POLE POCKETS T&B
Γ	GRAPHIC E	1	86.37" X 35.43" SINGLE SIDED DYESUB GRAPHIC W/ 8MM POLE POCKETS T&B

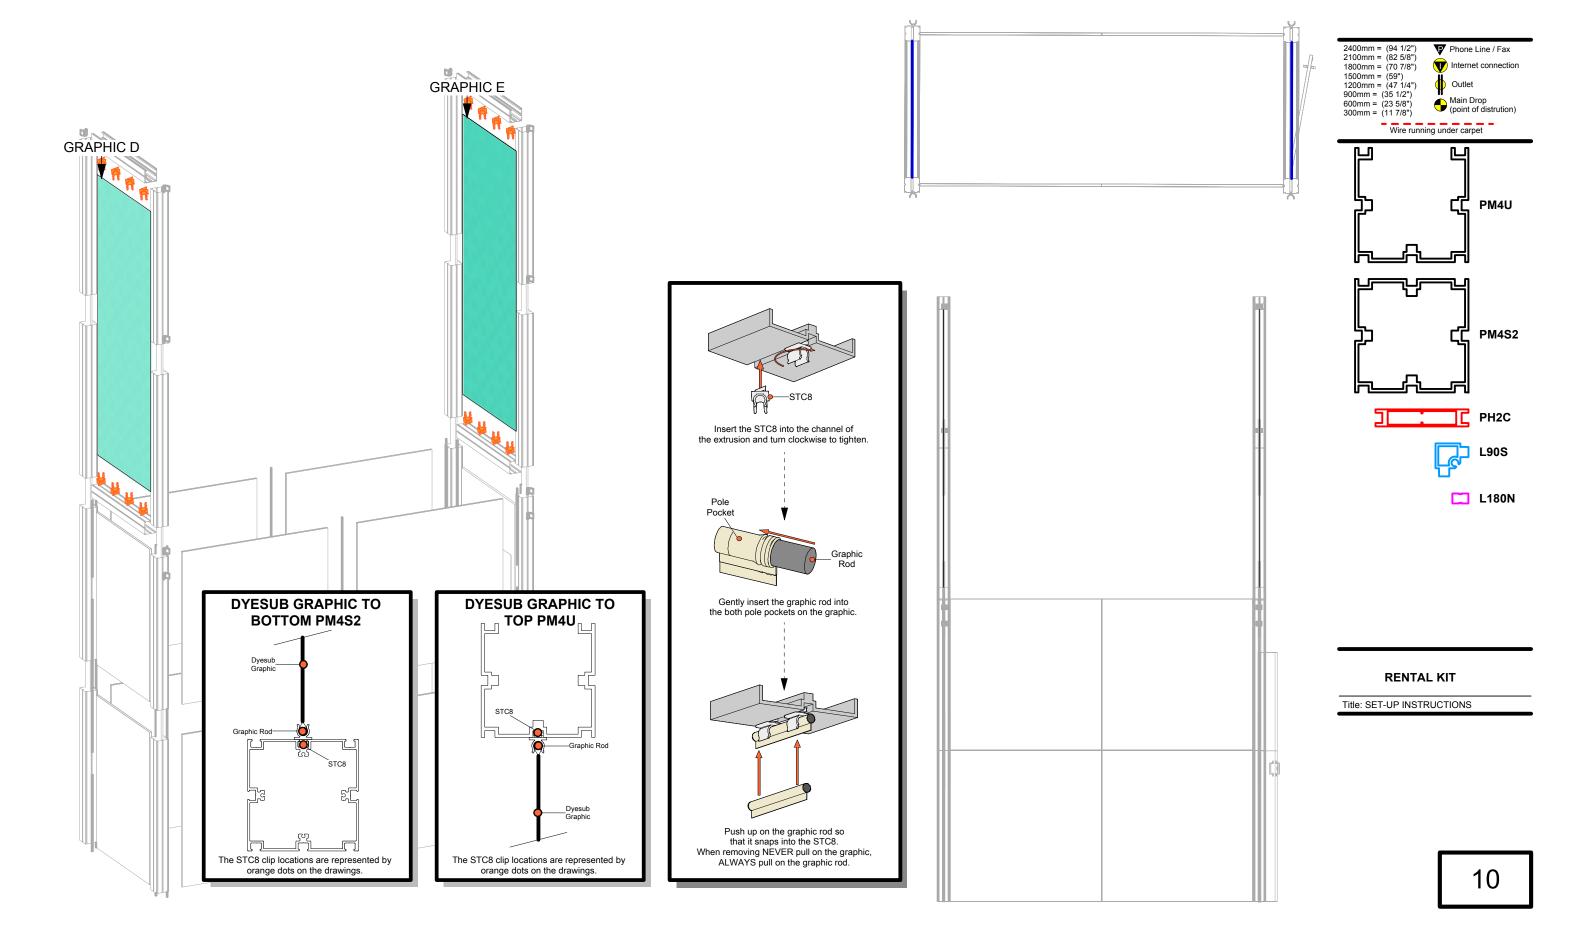



Code	#	Description
CRV-0804	1	8' L X 4' H CURVE BANNER W/ GRAPHIC I
CRV-0804	1	8' L X 4' H CURVE BANNER W/ GRAPHIC H

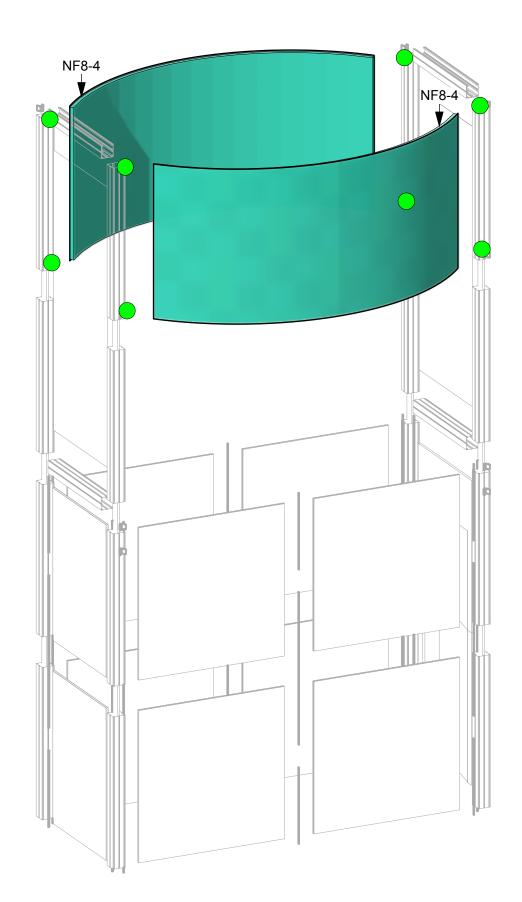


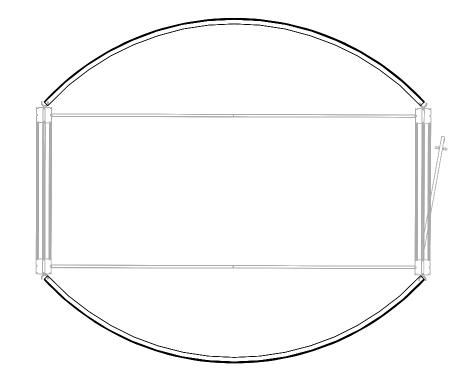

PLEASE SEE THE NEXT PAGE FOR DETAILED SETUP INSTRUCTIONS

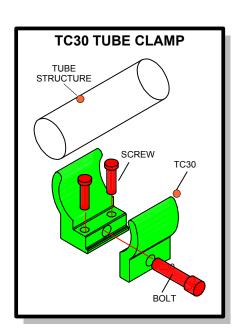

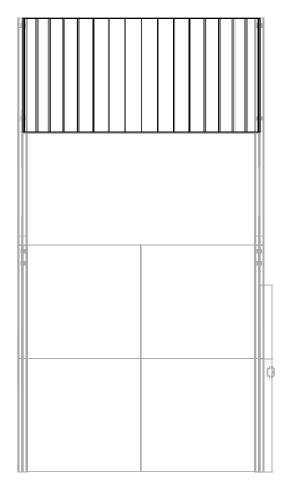

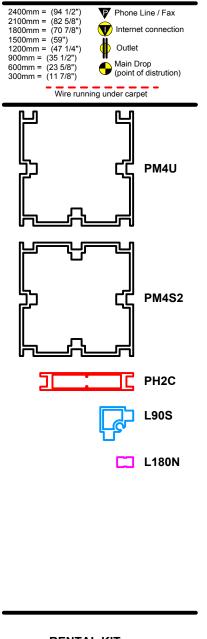


RENTAL KIT

Code # Description CRV-0804 1 8' L X 4' H CURVE BANNER W/ GRAPHIC I CRV-0804 1 8' L X 4' H CURVE BANNER W/ GRAPHIC H SET UP INSTRUCTIONS: 1. CONNECT BOTTOM AND TOP RAILS FOLLOWING THE LABELS 2. CONNECT SIDE RAILS 3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE 4. CAREFULLY REMOVE FABRIC COVER FROM BAG 5. PLACE COVER AROUND THE BOTTOM OF THE FRAME 6. PULL COVER CAREFULLY UP TO THE TOP MAKING SURE HOLES ARE ALIGNED WITH EYEBOLTS 7. CLOSE ALL ZIPPERS 8. ADJUST FABRIC AROUND THE FRAME 9. CONNECT EYEBOLTS TO THE FRAME 10. CONNECT CABLE HARNESS TO THE EYEBOLTS 11. COMPLETELY TIGHTEN THREADED CONNECTORS BREAK DOWN INSTRUCTIONS: REVERSE SET-UP STEPS TO BREAKDOWN FRAME FABRIC CARE INSTRUCTIONS: 1. UNZIP COVER ZIPPERS 2. CAREFULLY REMOVE FABRIC COVER 3. CLOSE ALL ZIPPERS 4. FOLD OR ROLL NEATLY 5. PLACE FABRIC IN COVER BAG	Frame Assembly Assemble frame as shown SWAGE 6 3 SWAGE		2400mm = (94 1/2") 2100mm = (82 5/8") 1800mm = (70 7/8") 1500mm = (59") 1200mm = (47 1/4") 900mm = (35 1/2") 600mm = (23 5/8") 300mm = (11 7/8") Wire running under carpet PM4U PM4S2 PH2C L90S L180N
Frame parts x2 11' Dia. Curve tube w/ molded connector x2 4' End tube 44" Spreader 11' Dia. Curve tube		BOLT	RENTAL KIT Title: SET-UP INSTRUCTIONS







Code	#	Description
L10T LIGHT	6	200W HALOGEN LIGHT FIXTURE (ETL APPROVED) **WITH NIMTRUSS CLIP

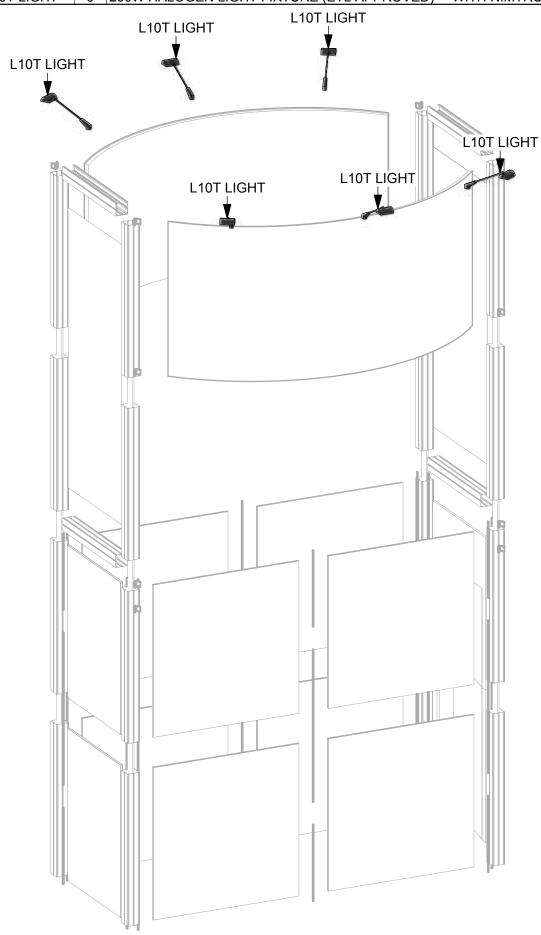



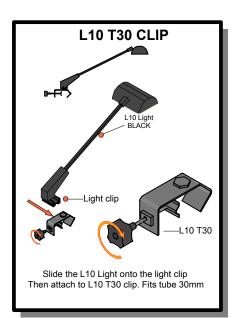

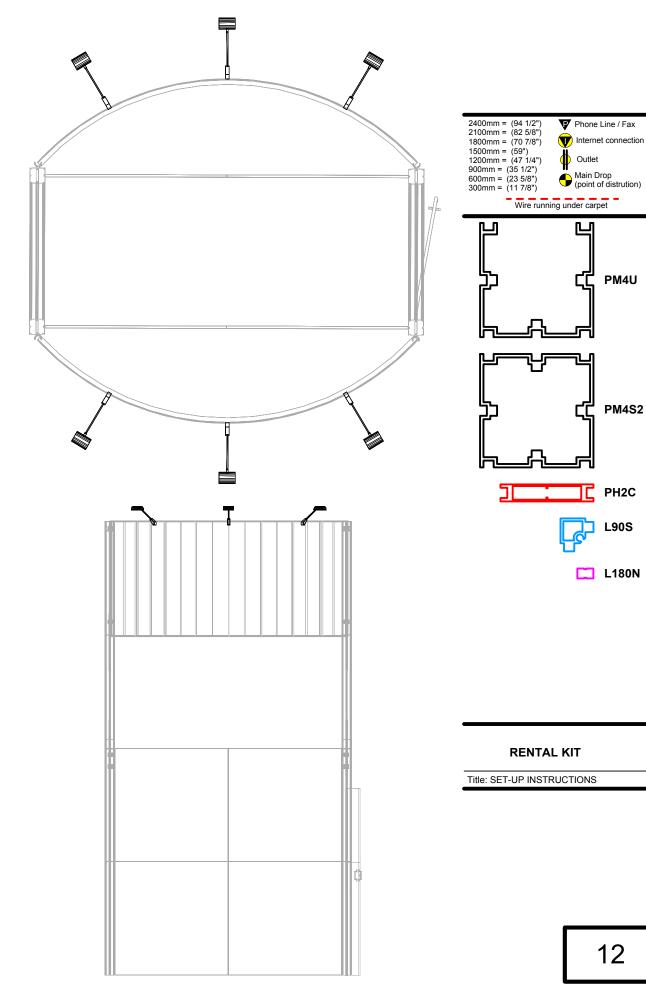

Outlet


CC PM4U


CC PM4S2


PH2C


🗀 L180N


PI.32 4 900MM y 800MM VI.AMINATE PANEL 1908-3 8 900MM W 8 900MM VI.AMINATE CABINET DOOR PANEL CD33L 2 900MM W 8 900MM VI.AMINATE CABINET DOOR PANEL	Code	# Description	
190S-3 8 900MM W X 900MM V LAMINATE CABINET DOOR PANEL 190S-3 CD33L 2 900MM W X 900MM V LAMINATE CABINET DOOR PANEL	PL33	2 900MM V x 900MM W LAMINATE PANEL	
CD33L 2 900MM W x 900MM V LAMINATE CABINET DOOR PANEL L90S-3 CD33L L90S-3			
L90S-3 CD33L L90S-3			
		3 CD33	
	0S-3	PL32	

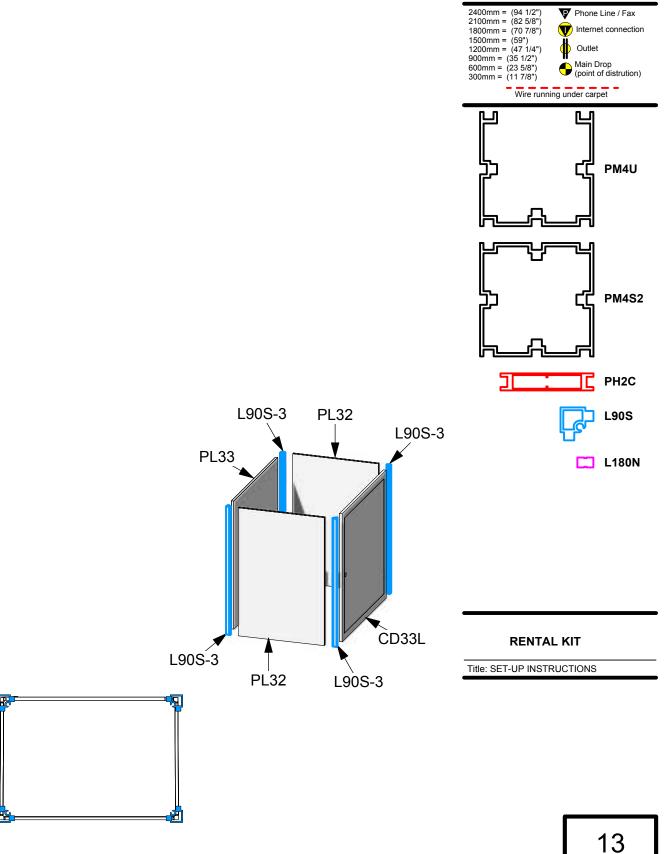


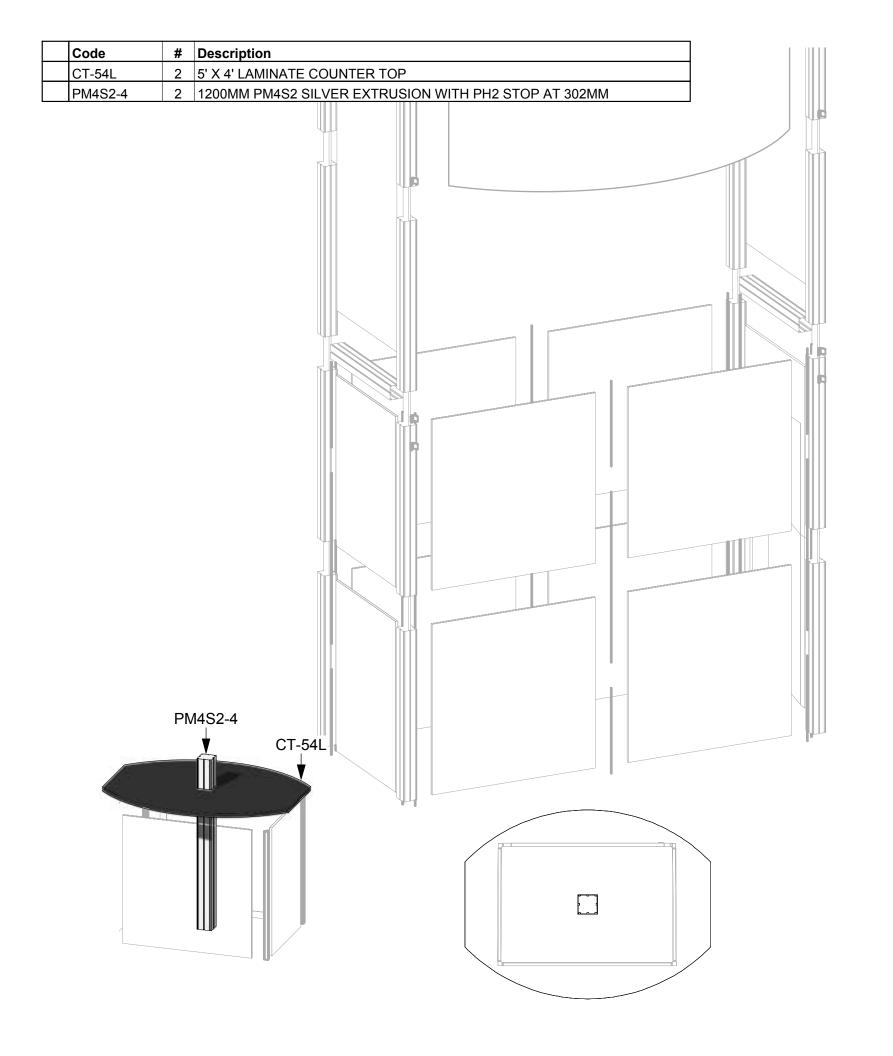


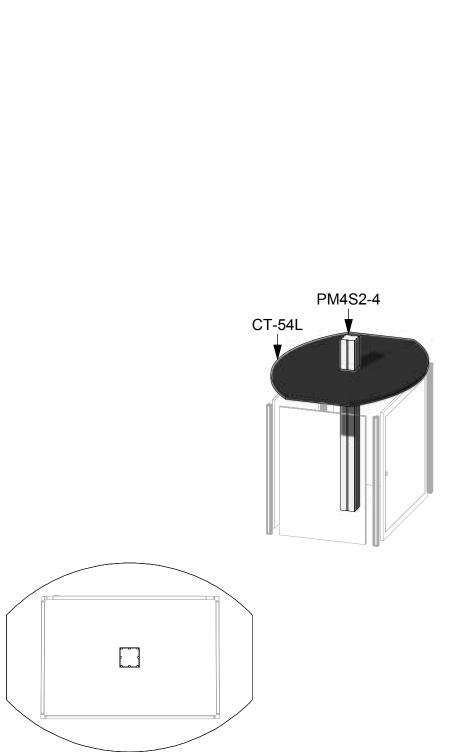


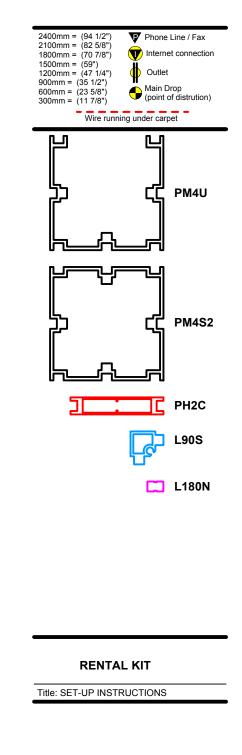

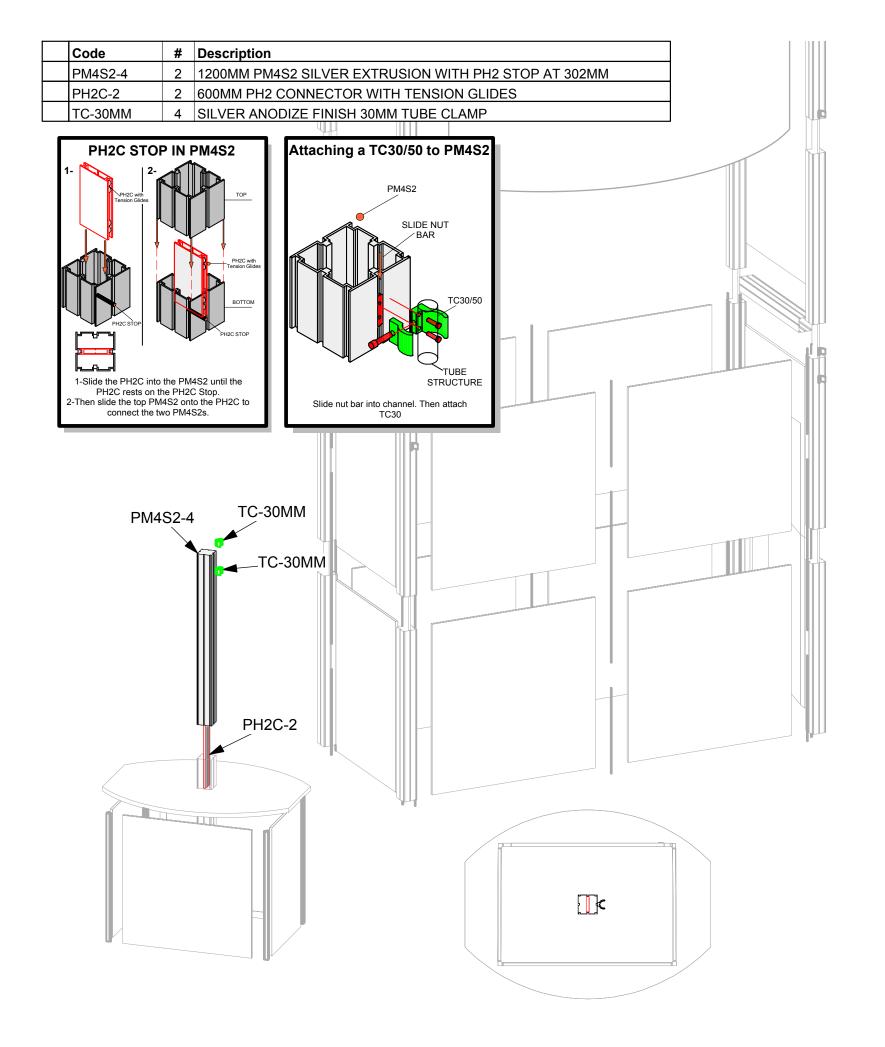

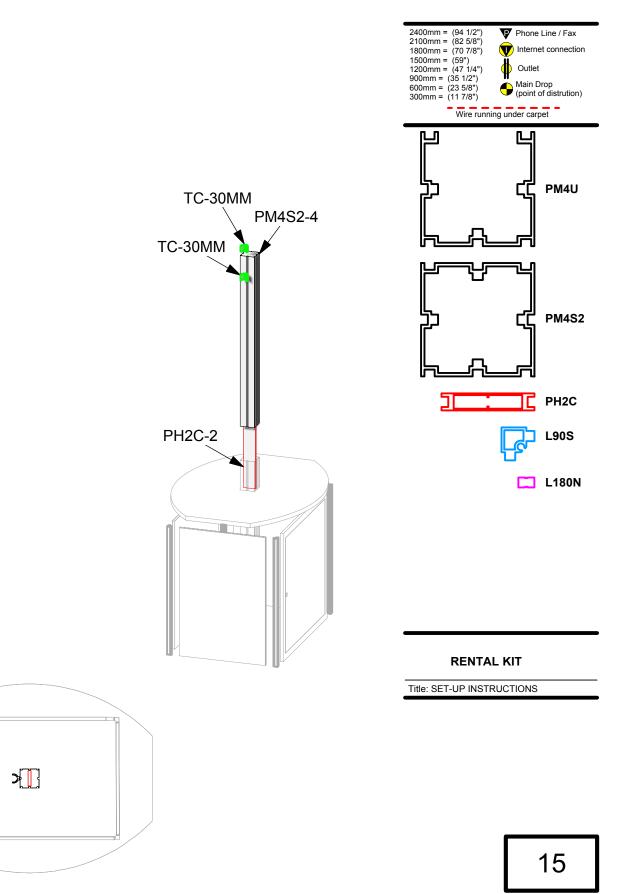

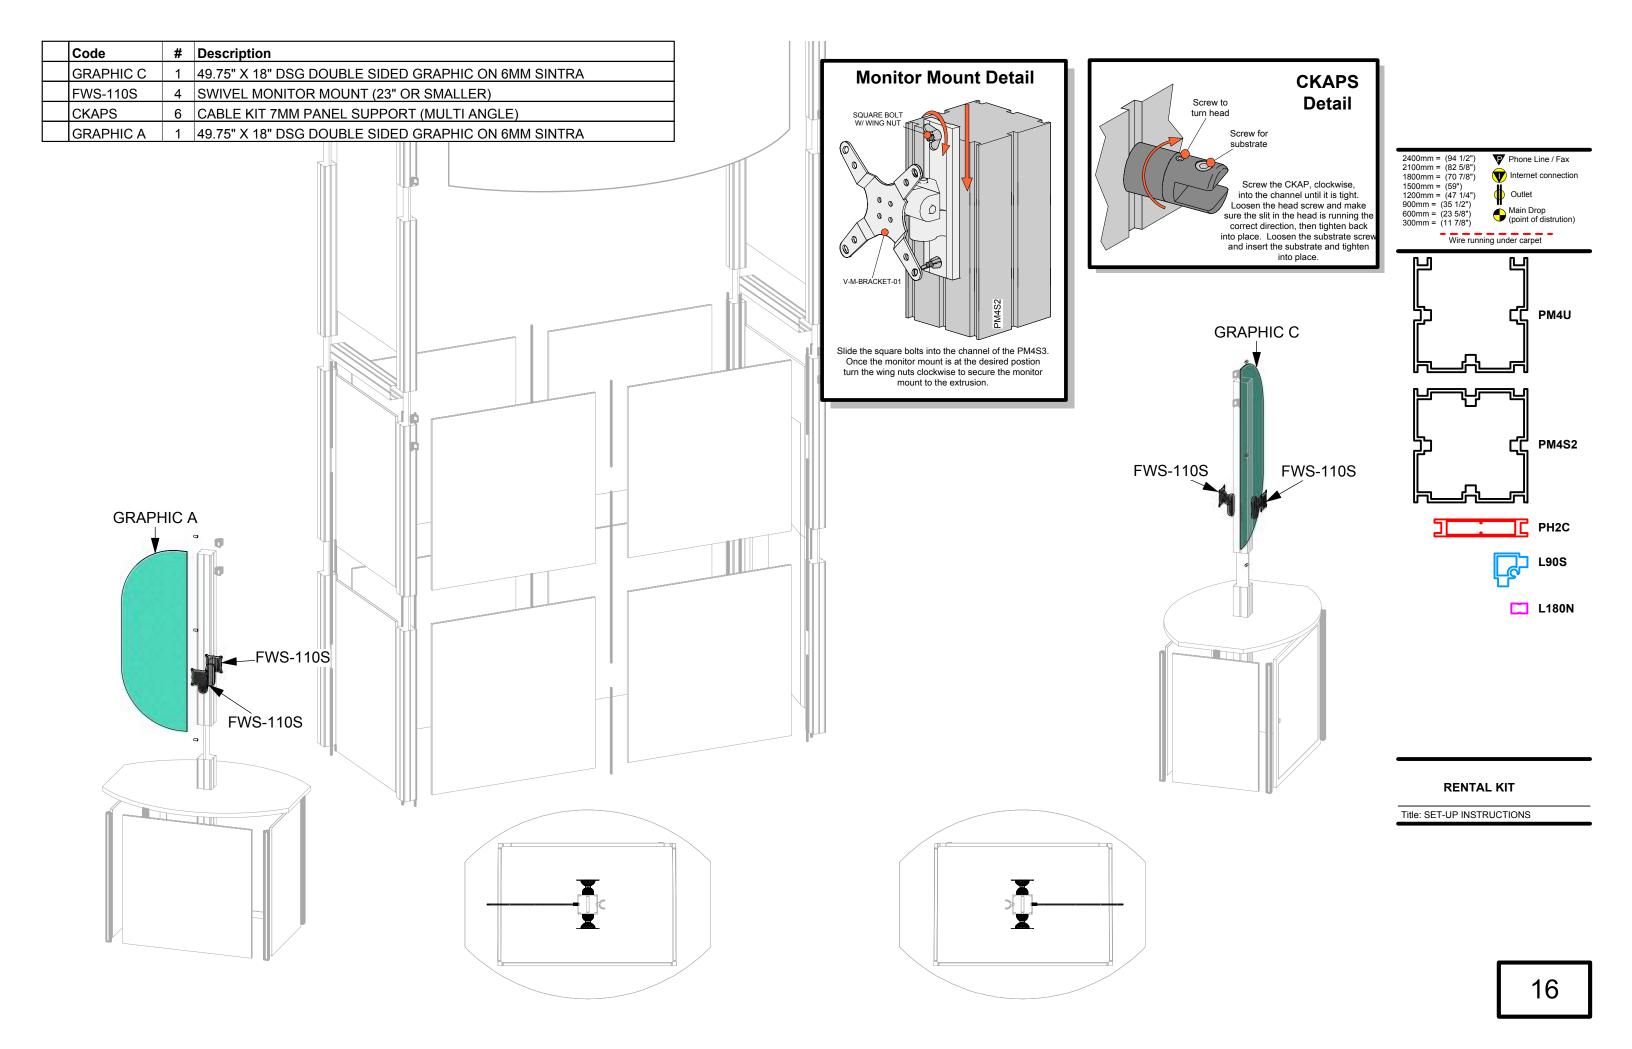

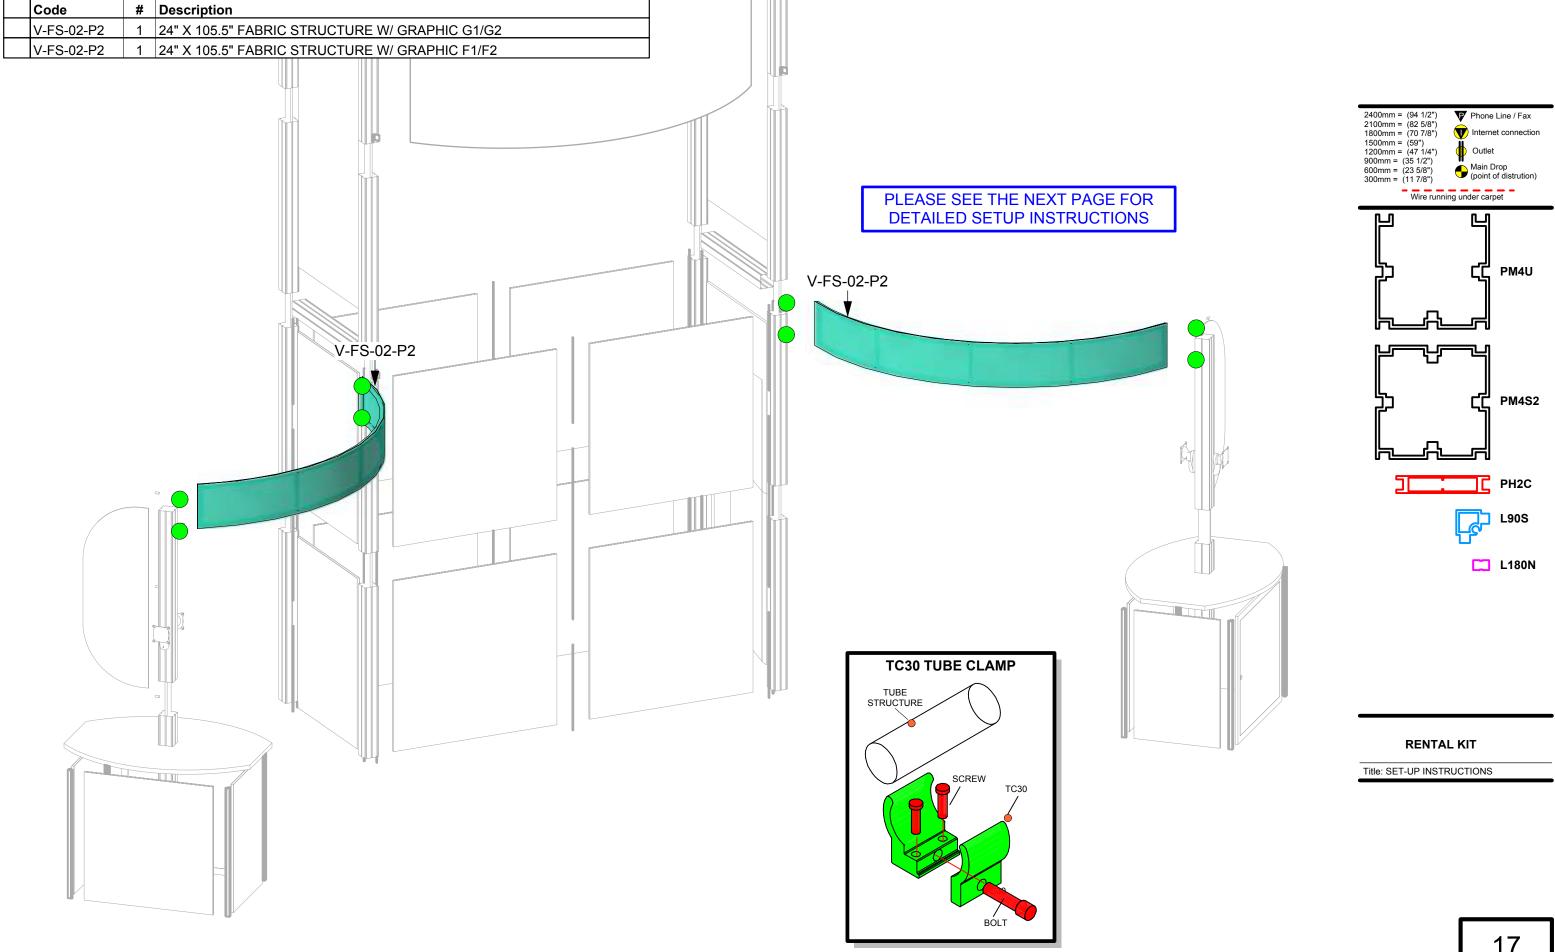

Code	#	Description
V-FS-02-P2	1	24" X 105.5" FABRIC STRUCTURE W/ GRAPHIC G1/G2
V-FS-02-P2	1	24" X 105.5" FABRIC STRUCTURE W/ GRAPHIC F1/F2

SET UP INSTRUCTIONS:

- 1. CONNECT BOTTOM AND TOP RAILS FOLLOWING THE LABELS
- 2. CONNECT SIDE RAILS
- 3. CLEAN THE FRAME AND PLACE THEM ON CLEAN PLACE
- 4. CAREFULLY REMOVE FABRIC COVER FROM BAGS
- 5. PLACE COVER AROUND THE BOTTOM OF THE FRAME
- 6. PULL COVER CAREFULLY UP TO THE TOP
- 7. CLOSE ALL ZIPPERS
- 8. ADJUST FABRIC AROUND THE FRAME

BREAK DOWN INSTRUCTIONS:

REVERSE SET-UP STEPS TO BREAKDOWN FRAME


FABRIC CARE INSTRUCTIONS:


- 1. UNZIP COVER ZIPPERS
- 2. CAREFULLY REMOVE FABRIC COVER
- 3. CLOSE ALL ZIPPERS
- 4. FOLD OR ROLL NEATLY
- 5. PLACE FABRIC IN COVER BAG


PART LIST:


PER UNIT


- 11 30MM DIA. TUBE SECTIONS
- 1 FABRIC COVER

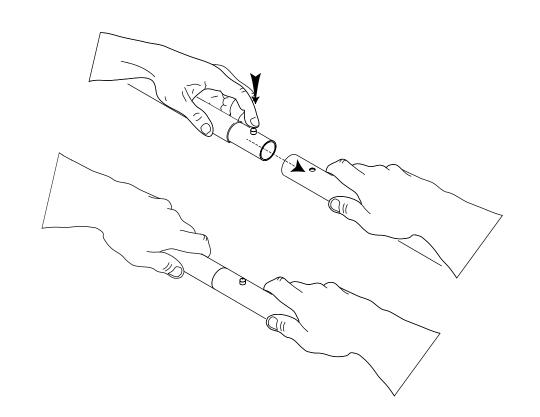

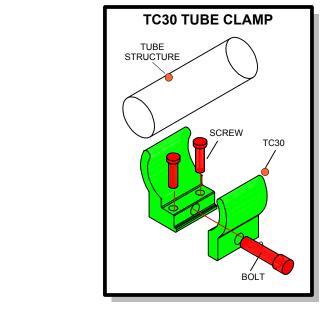

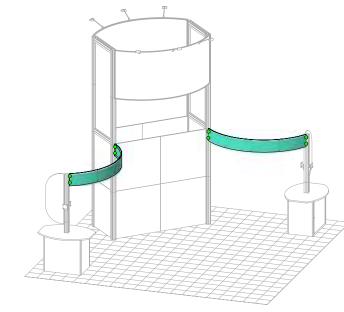


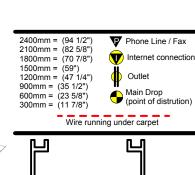


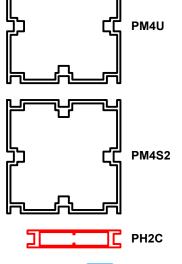

L90S


L180N

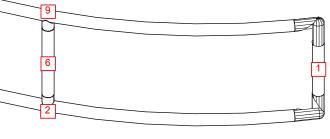

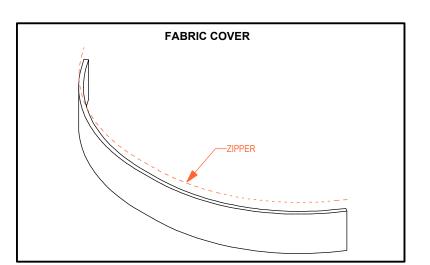



RENTAL KIT

Code	#	Description
PL33	1	900MM V x 900MM W LAMINATE PANEL
PL32	2	900MM V x 600MM W LAMINATE PANEL
L90S-3	4	900MM 90 DEGREE SILVER LINK EXTRUSION
CD33L	1	900MM W x 900MM V LAMINATE CABINET DOOR PANEL

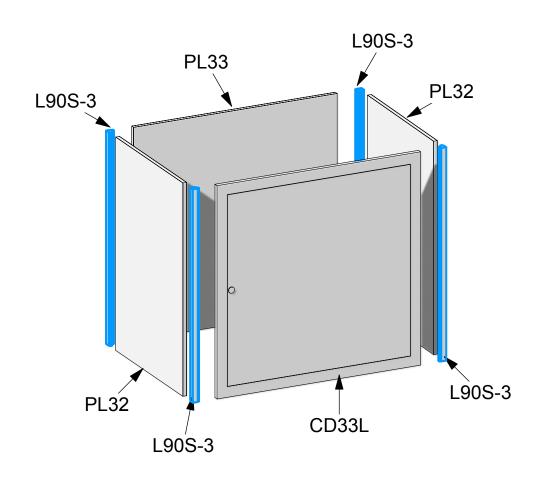




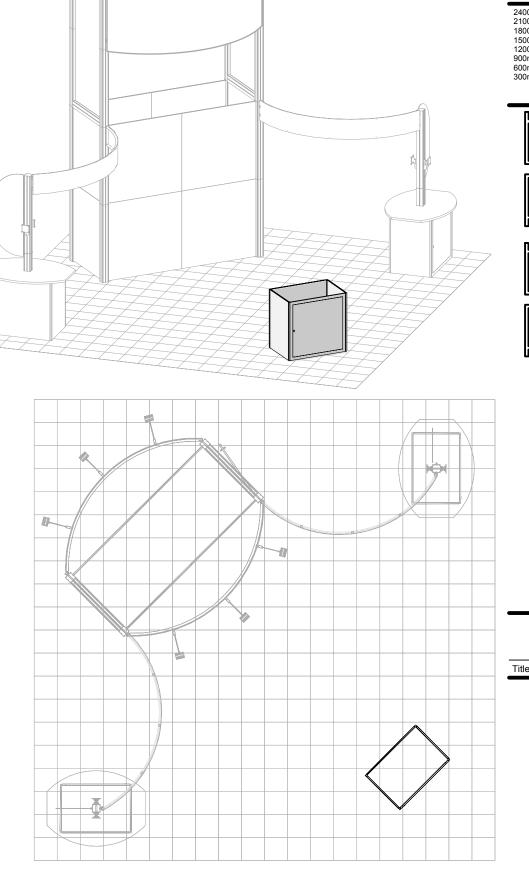


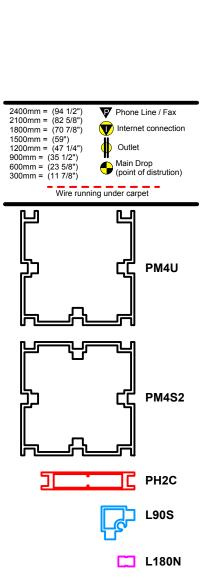

RENTAL KIT


Code	#	Description
CT-54L	1	5' X 4' LAMINATE COUNTER TOP
PM4S2-4	1	1200MM PM4S2 SILVER EXTRUSION WITH PH2 STOP AT 302MM

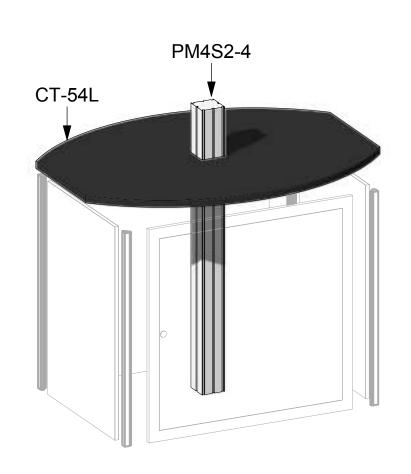


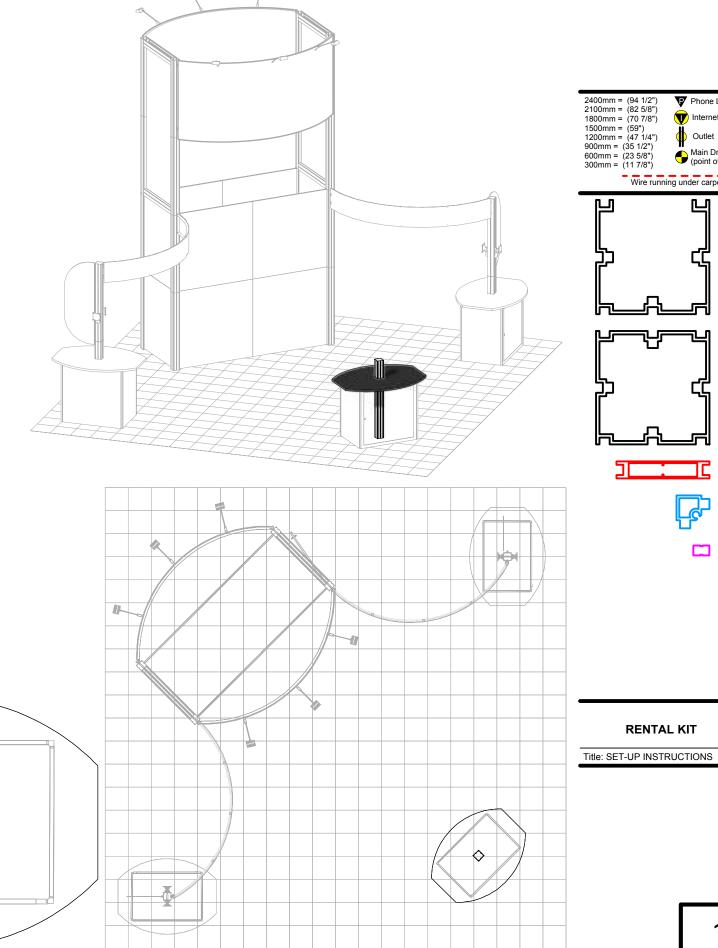



Phone Line / Fax Outlet Main Drop
(point of distrution) Wire running under carpet CC PM4U CC PM4S2 PH2C L90S 🗀 L180N


Code	#	Description
PM4S2-4	1	1200MM PM4S2 SILVER EXTRUSION WITH PH2 STOP AT 302MM
PH2C-2	1	600MM PH2 CONNECTOR WITH TENSION GLIDES

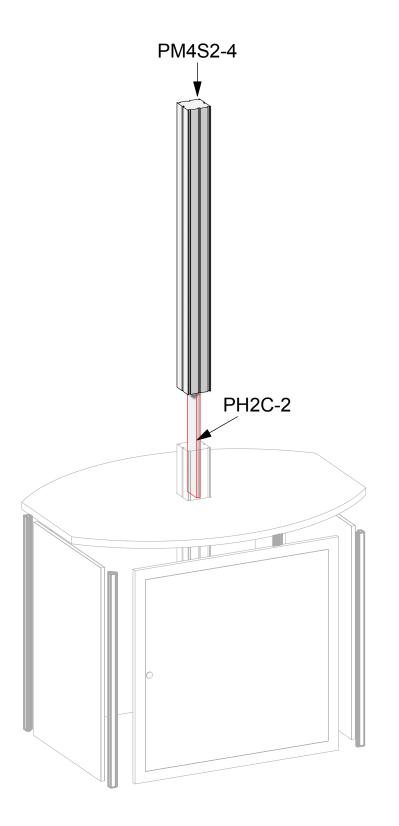


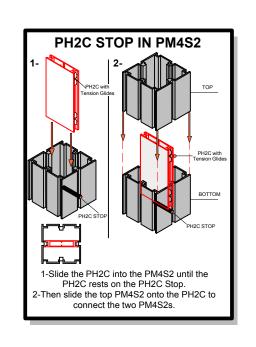

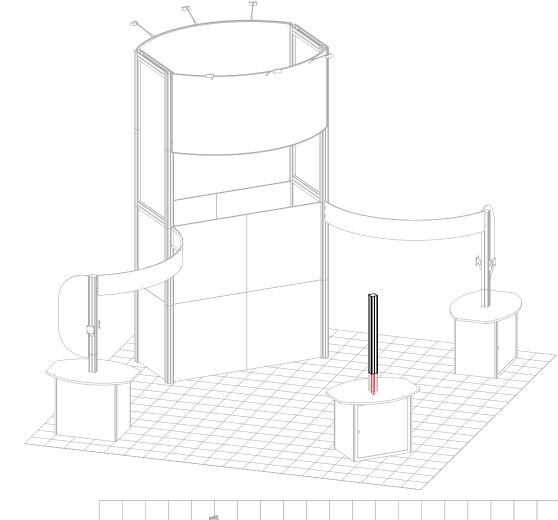

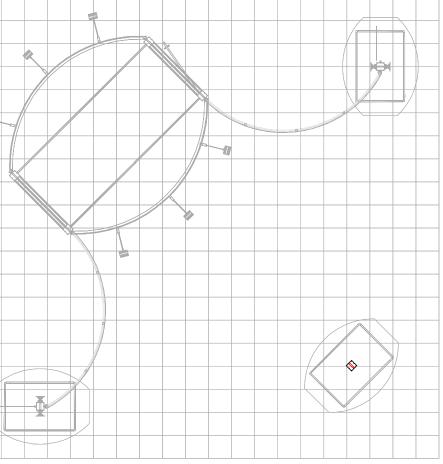

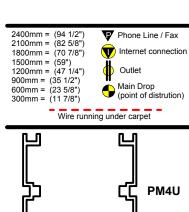


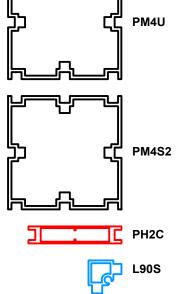



L180N





Code	#	Description
GRAPHIC B	1	49.75" X 18" DSG DOUBLE SIDED GRAPHIC ON 6MM SINTRA
FWS-110S	2	SWIVEL MONITOR MOUNT (23" OR SMALLER)
CKAPS	3	CABLE KIT 7MM PANEL SUPPORT (MULTI ANGLE)

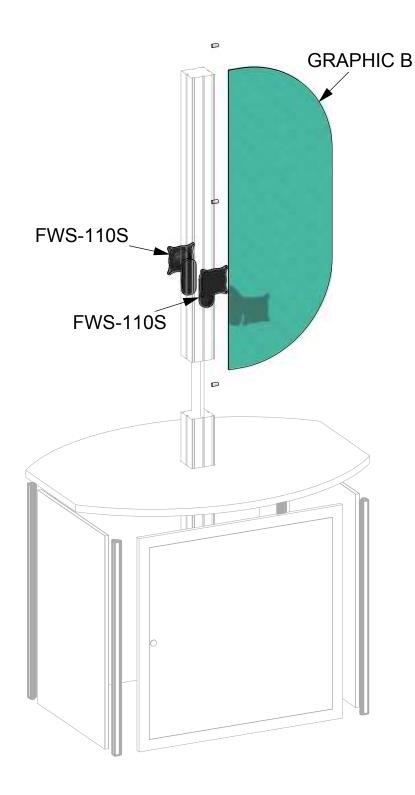


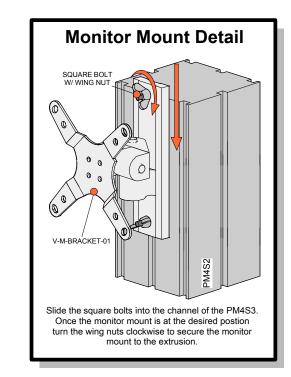

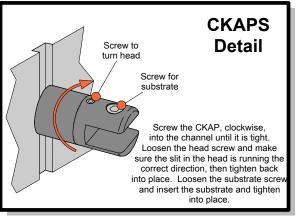

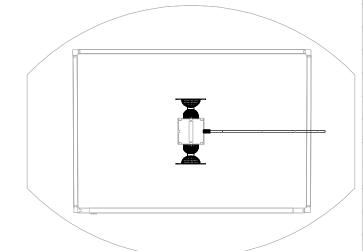


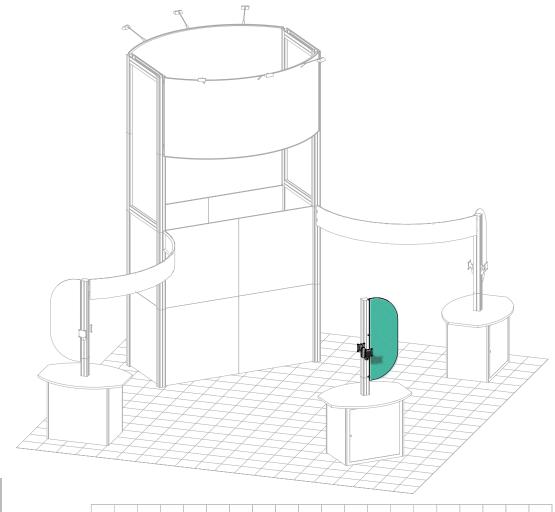

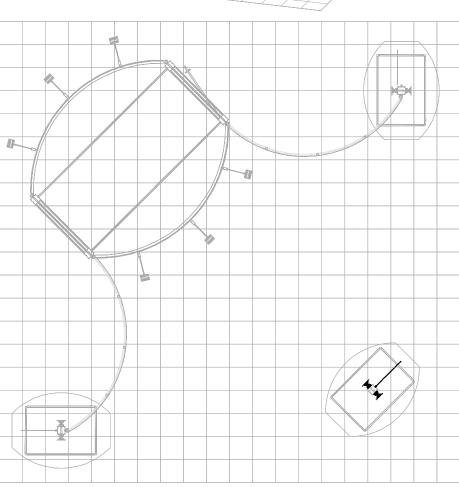

2400mm = (94 1/2")
2100mm = (82 5/8")
1800mm = (70 7/8")
1500mm = (59")
1200mm = (47 1/4")
900mm = (35 1/2")
600mm = (23 5/8")
300mm = (11 7/8")

Wire running under carpet

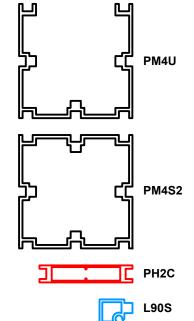




Title: SET-UP INSTRUCTIONS

L180N



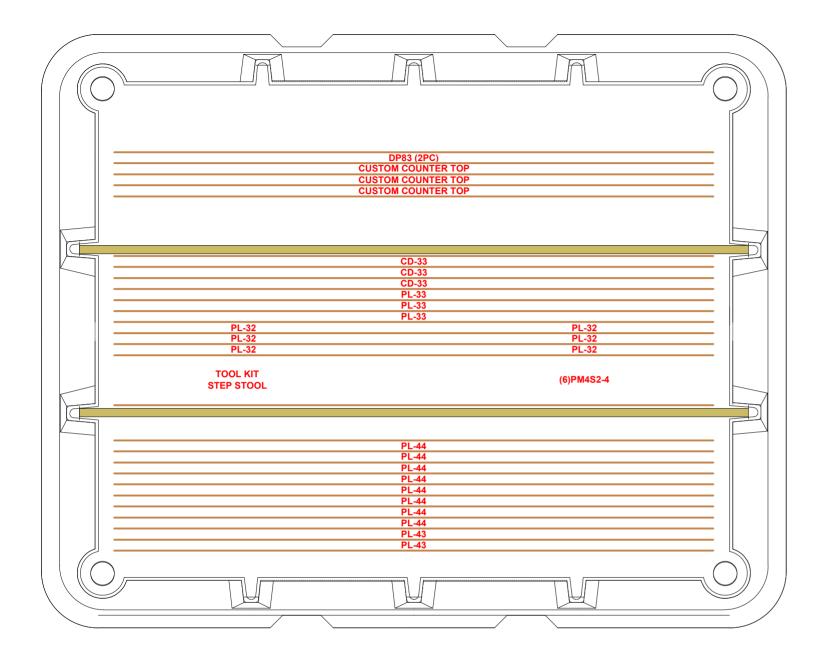





NCRATE


INTERNAL DIMS 49"L X 38.5"W X 51"H

EXTERNAL DIMS 59"L X 48"W X 57"H

9	GREY FOAM FOLDED TO FILL EMPTY SPACES OR USED AS PROTECTION
<u>ü</u> ——	1/8" CARDBOARD SPACER (PUT IN BETWEEN EVERY PANEL)
	DIVIDER
	1/4" WHITE FOAM (USED AS PROTECTION DOOR PANELS W/ LOCKS)



CASE # 1

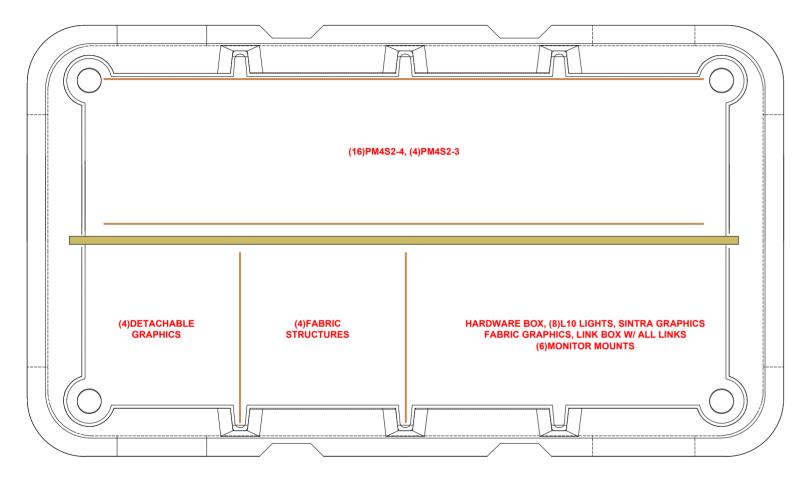

SCRATE

INTERNAL DIMS 49"L X 24.5"W X 51"H

EXTERNAL DIMS 59"L X 34"W X 57"H





