



CONNECTING TWO EZ6 PARTS END TO END

ALIGN PARTS SO THAT THE TWO SQUARE HOLES IN THE ENDPLATES ARE ALIGNED.

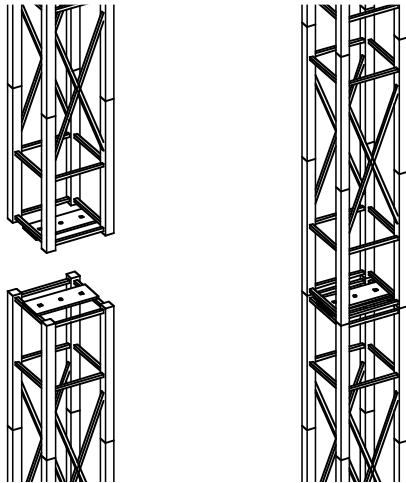

LOCATE THE TWO SQUARE HOLES ON THE SIDES OF EACH ENDPLATE, AND INSERT CARRIAGE BOLTS THROUGH THE TWO ALIGNED SQUARE HOLES.

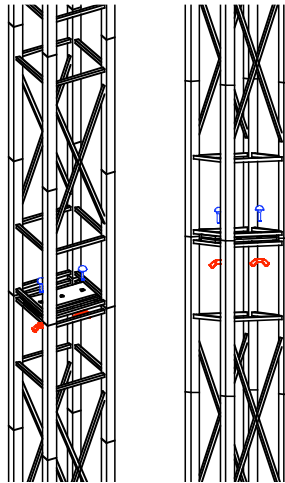

THREAD A WINGNUT ONTO EACH CARRIAGE BOLT AND HAND-TIGHTEN.

DO NOT USE A WINGNUT WRENCH.

