

ASSEMBLY HARDWARE

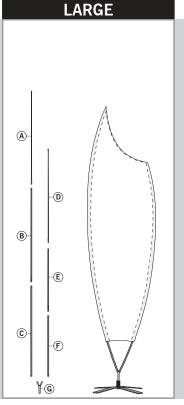

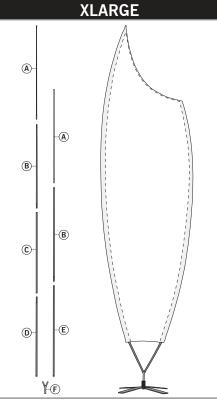

Large:

- A. L3/XL4 Tip
- B. L2/XL3 No Interior Sleeve w/ Exterior Insert
- C. L1 Interior Sleeve w/ No Exterior Insert
- E. M2 No Interior Sleeve w/ Exterior Insert
- F. M1 Interior Sleeve w/ No Exterior Insert
- G. Y-Connector 50°

XLarge:

- A. (2) L3/XL4 Tip
- B. (2) L2/XL3 No Interior Sleeve w/ Exterior Insert
- C. XL2 No Interior Sleeve w/ No Exterior Insert
- D. XL1 Interior Sleeve w/ Exterior Insert
- E. L1 Interior Sleeve w/ No Exterior Insert
- F. Y-Connector 50°










Exterior Insert

Interior Sleeve

None

ASSEMBLY

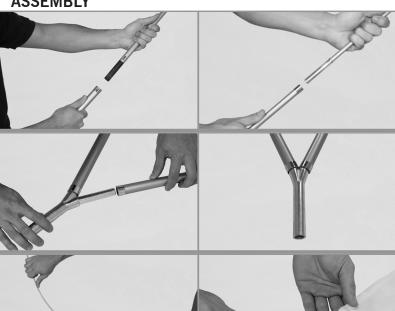

- 1. Assemble the two sets of poles, one for each pole sleeve. The poles are listed from top to bottom and are illustrated in the sketch above.
 - Large Left pole sleeve: L3/XL4 (A), L2/XL3 (B), L1 (C) Right pole sleeve: M3 (D), M2 (E), M1 (F)
 - XLarge Left pole sleeve: L3/XL4 (A), L2/XL3 (B), XL2 (C), XL1 (D) Right pole sleeve: L3/XL4 (A), L2/XL3 (B), L1 (E)
- 2. Attach the bottom ends of each set of poles to the Y-Connector 50° (G/F).
- 3. The pole tips are made to flex a little to give the print its shape. Insert the pole tip of the longest set of poles into the left pole sleeve first. Slightly curve the poles towards the second set of poles. Insert the pole tip of the second set of poles into the right pole sleeve.
- 5. Slide the print down both sets of poles until taut. Be sure that both pole tips are fully inserted into each pole sleeve.
- 6. Mount the display using one of the available bases.



