

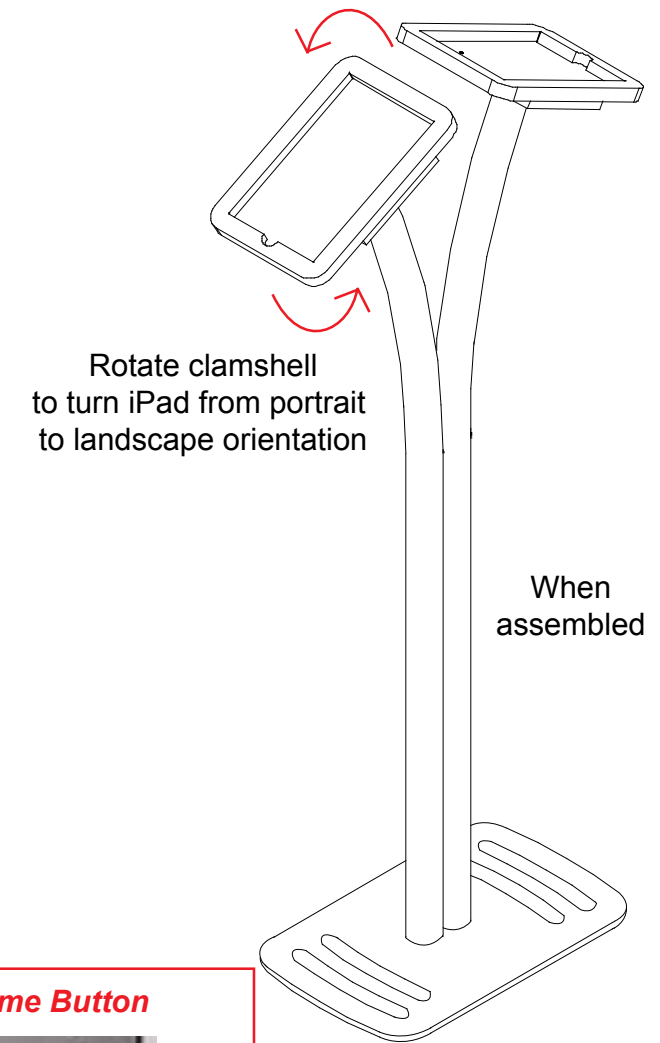


Steps:

- 1) Attach base [1] to curved verticals [2,3] using bolts.
- 2) Attach square plates [4] to verticals [2,3] using bolts.  
*NOTE: Square plate [4] must rotate to left and right before installing clamshell.*
- 3) Attach clamshells [5] to square plates [4] using hex nuts.
- 4) Insert iPad and feed wire through holes as shown in detail.

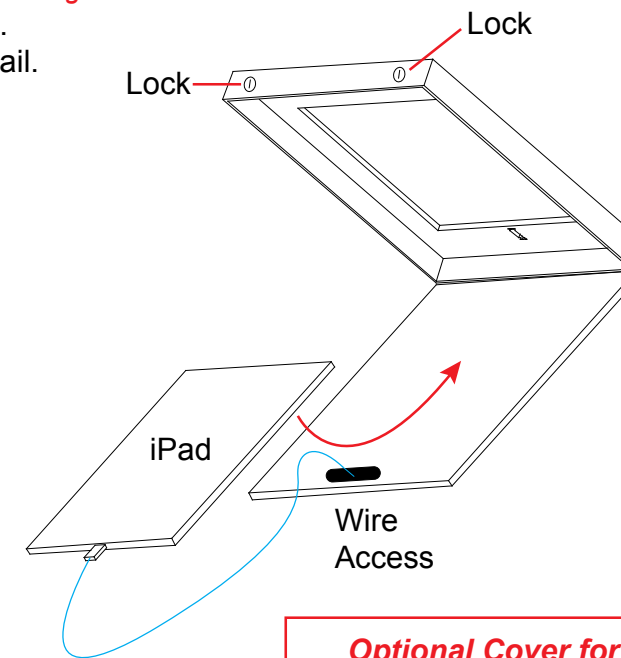


**Wire Management for iPad**

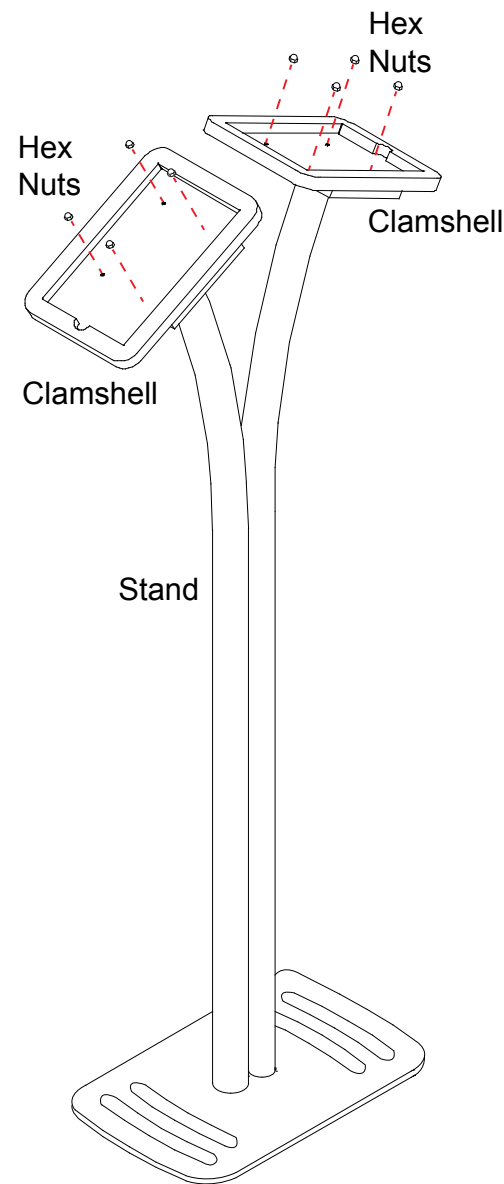

Feed iPad charging cord through holes from top to bottom of post as shown.

**Optional Cover for Home Button**

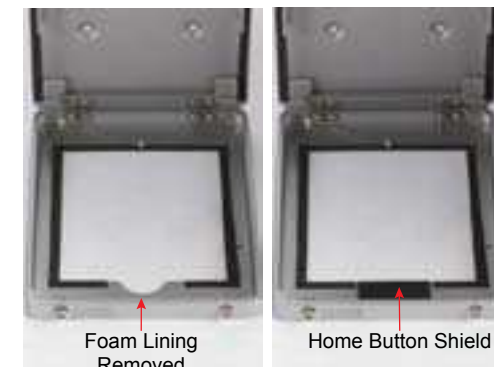

- 1) Remove foam lining from inside bottom of clamshell as shown.
  - 2) Attach Home Button Shield with double-sided tape to inside of clamshell, keeping top of shield flush with clamshell opening as shown.
- NOTE:** This is a permanent fix and can't be easily removed.

Tools Required:  
1) Hex Tool  
2) Pliers

