



DISPLA OVER 60 000 CLISTOMERS SERVED SINCE 100

Steps:

- 1) Attach base plate to bottom of post, using bolt.
- 2) Connect Z-plate to front of post, using bolts. See V4 Connector detail.
- 3) Attach Z-plate to top of post, using bolt.

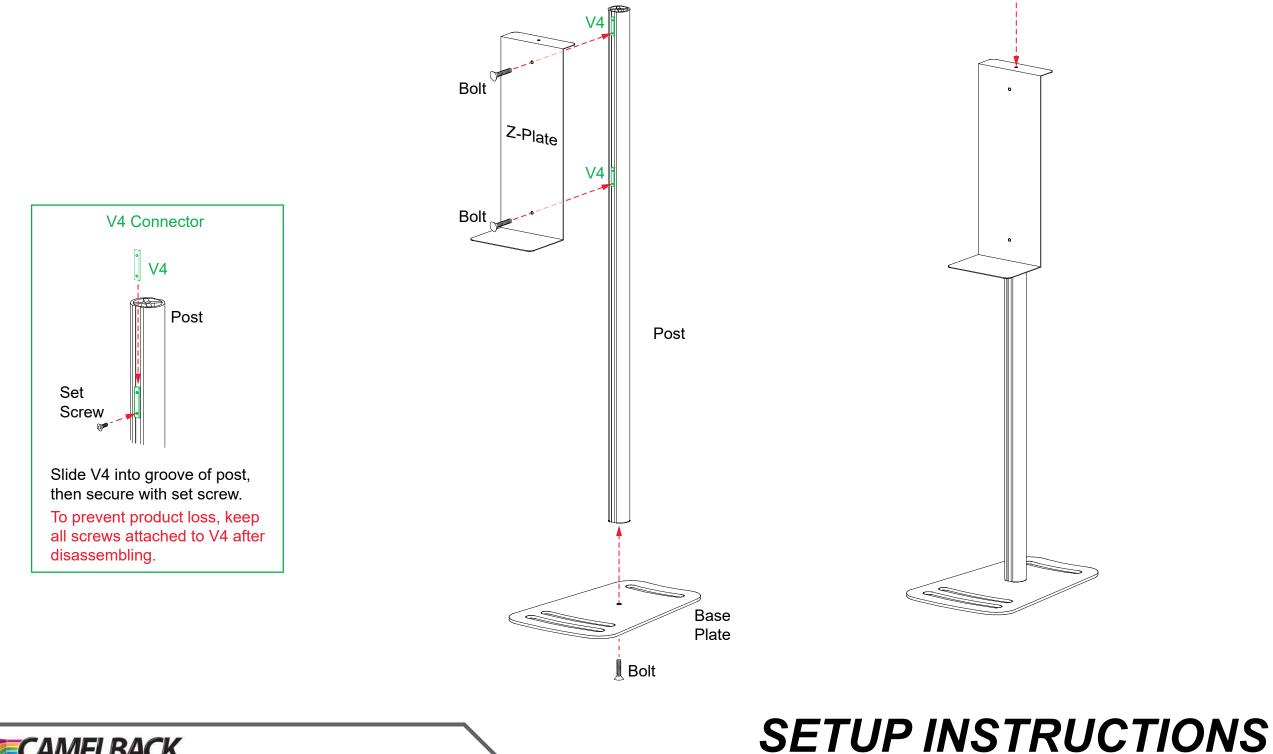



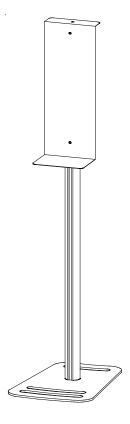

Completed Assembly



Bolt



General Setup Instructions

- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
 Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials.
 All provided packing materials are for ease of repacking & component protection.

Disassembly

- For loss prevention, tighten all set screws and locks during disassembly.





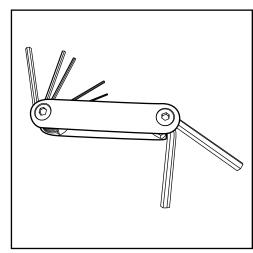

Hex Tool - Essential for Assembly









DO NOT USE POWER TOOLS

ALL CONNECTIONS MUST BE TIGHTLY SECURED

DO NOT USE SCREWS THAT ARE STRIPPED