

► Assembly Instructions

1. All components are marked with the specific Component Name
2. Each panel comes pre-assembled with one upright on it
3. Attach one panel to an adjacent panel fastening bolts through uprights
4. Attach feet to uprights as follows:
 - > Long feet (12" front / 12" rear) attach onto the uprights at the outermost ends
 - > Short feet (3" front / 12" rear) attach onto all other uprights
5. Attach back braces onto all uprights and feet
6. See photos on next pages for assembly details

Helpful Hints


1. Do not over tighten the fasteners.
2. The labels marking each component are for your reference only. After unpacking and assembling the displays for the first time, you may find it necessary to move the labels or remove them altogether. Regardless, we do recommend that some marking system be used to identify each component. Your display has been individually tested at the factory for fit with its corresponding components.
3. Depending on your aesthetic requirements for the display, you may choose to have the head of the bolts or the acorn nuts be more visible. Either way works.
4. To clean the slatwall, use furniture polish. To clean the support structure use rubbing alcohol and a soft rag (household cleaners may leave a cloudy residue)
5. Use Scotch-Brite pads to polish away scratches on the support structure
6. Pack the components into their individual plastic bags and bubble wrap to help avoid scratching and damage during transit.

► Assembly Instructions

Example Shown Below

- Display Size: 8'H x 20'W
- Individual Panel Size: 8'H x 4'W

Assembled Display: Front View

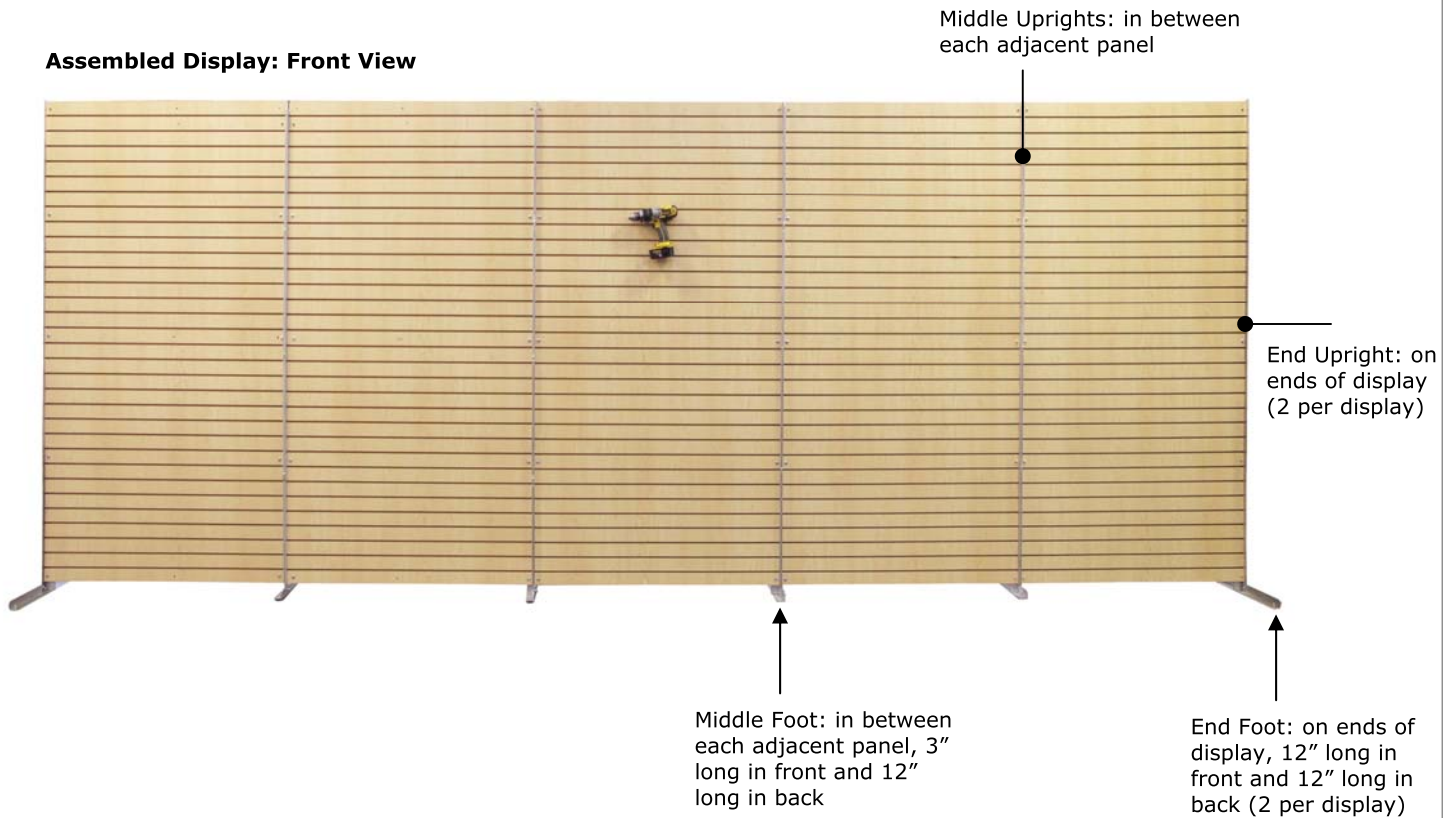

Assembled Display: Back View




► Assembly Instructions


Example Shown Below

- Display Size: 8'H x 20'W
- Individual Panel Size: 8'H x 4'W


Assembled Display: Angled Back View

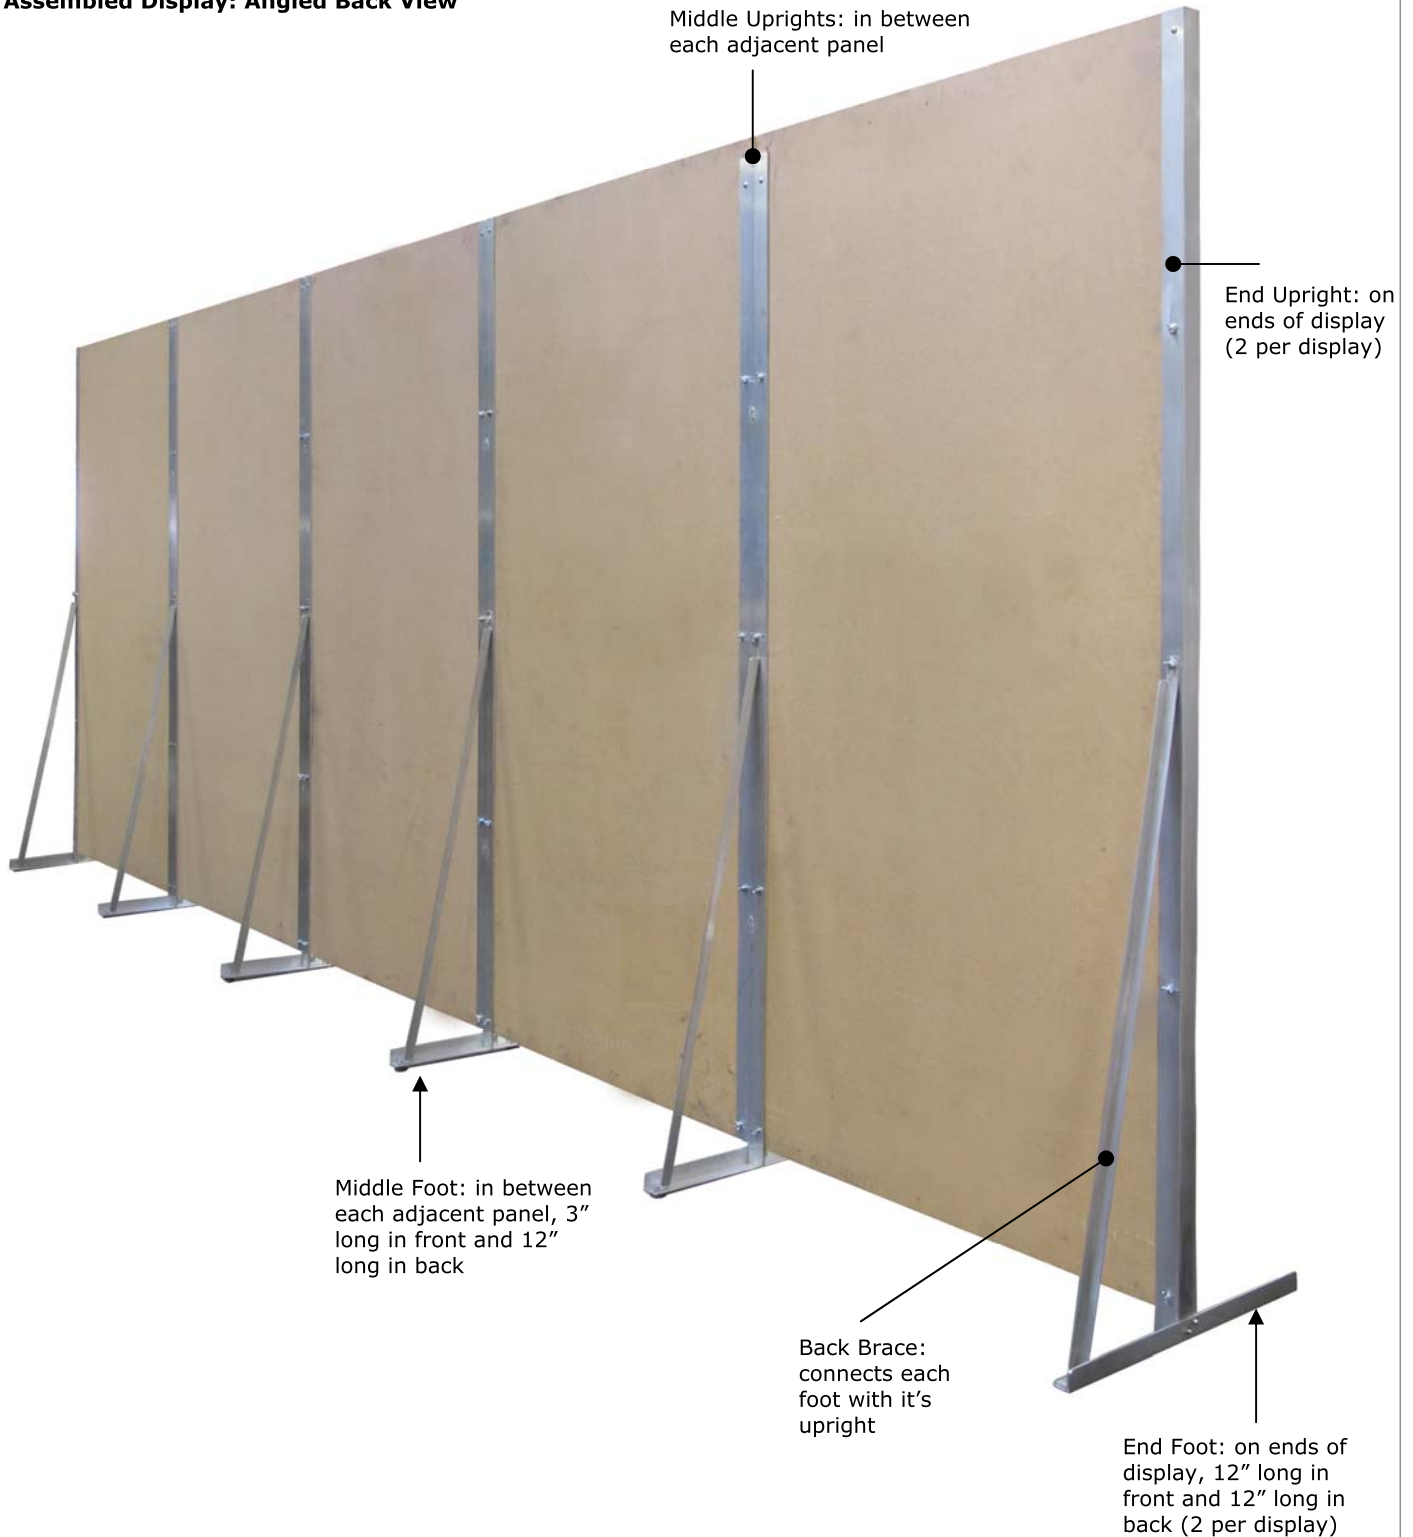

► Assembly Instructions

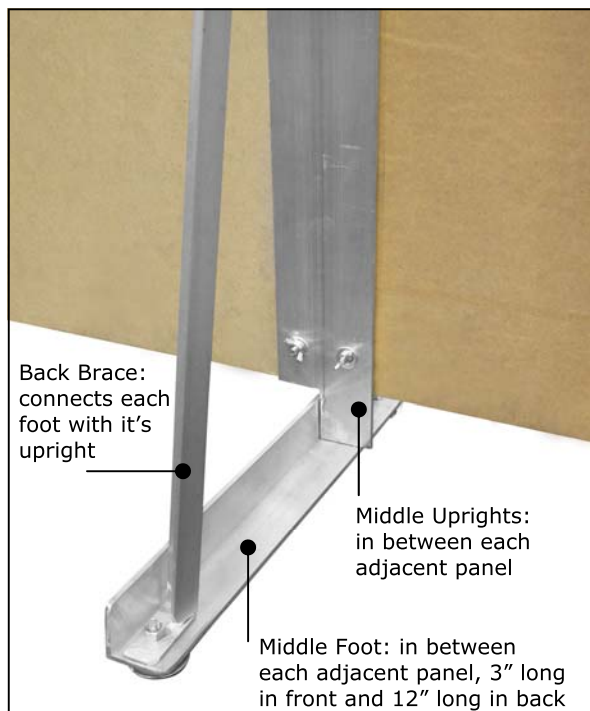

Back View of Back Brace to Foot Assembly

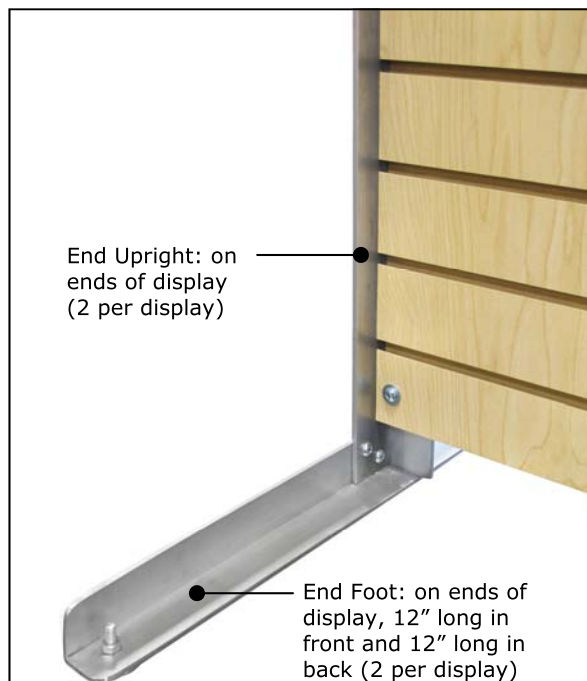

Front View of End Foot Assembly



Front View Middle Foot Assembly