

# **ANGLE IRON FRAME SETUP INSTRUCTIONS**

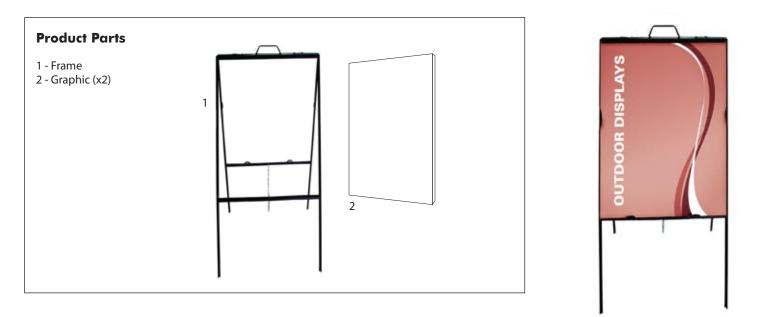

## Sign Install and Display Set-Up

#### Step 1

Carry the A-Frame (1) to the de sired location. Separate the front and back seg ments of the A-Frame (1) until the Chain (3) is taut.

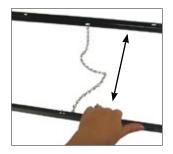

### Step 2

Insert the primary graphic into the frame and with one hand holding the frame and graphic - pl ace holes in your graphic at the at tachment eyelets with a dril I (not included).



#### Step 3

Attachment hardware does not come standard with the Angle-Iron Frame.

Attach your primary graphic to the frame with your hardware.



#### **Recommended Hardware (not included)**

QTY 16 Sheet Metal Bolt - .25" long x .75" long QTY 16 Nut - .25" QTY 32 Washers, .25" hole, .5" wide

#### **Storage**

Store in a cool dry location.

#### Care

To clean, wipe with d amp cloth.