

MAGELLANI DESIGNS

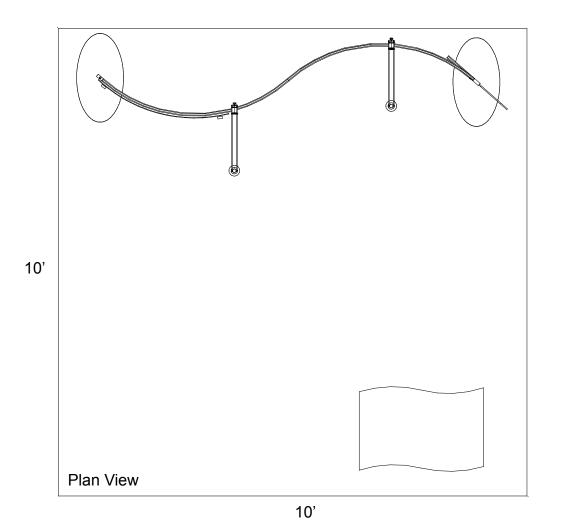

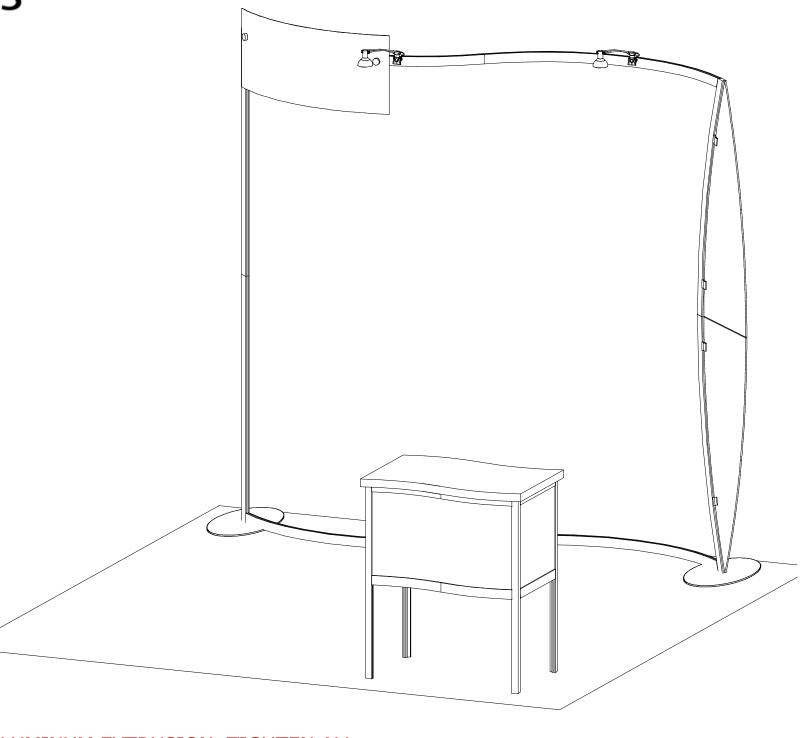

MAGELLANI DESIGNS

Using You Set-up Instructions:

The Visionary Designs Set-up Instructions for Magellan displays are created specifically for your configuration. They are laid out sequentially, including an exploded view of the entire display and a logical series of detailed steps for assembly. We encourage you to study the instructions **before** attempting to assemble your exhibit.

THIS IS VERY IMPORTANT!

Each page reminds you to tighten the setscrews after disassembling your exhibit to prevent loss of the locks and setscrews (see below in red).

Cleaning & Packing Your Display:

- 1) Use care when cleaning aluminum extrusions or acrylic inserts. Use only non-abrasive cleaners.
- 2) When cleaning laminate inserts or counter tops, use mild cleansers and a soft material such as cotton.
- 3) Keep all display components away from extreme heat and long exposure to sunlight to avoid warping and fading.
- 4) Retain all packing materials. It will make re-packing much easier and will reduce the likelihood of shipping damage.

Hex Key Tool



Most visionary design exhibits can be assembled with the supplied Hex Key Tool. Occasionally, a flat head screwdriver may be required.


Typical Connection



Typical Connection




Detail A: Most horizontal extrusion connections have a patented expandable lock. This lock inserts into the groove of an opposing extrusion. Tightening the lock with the Hex Key Tool expands the lock and creates a strong positive connection.

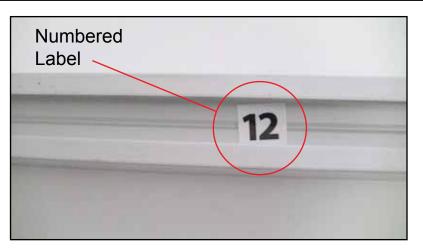

Detail B: Each extrusion contains a numbered label that corresponds to set-up instructions. The label is located within a groove of the extrusion (when possible). Visionary Design labels contain Black numbers unless otherwise specified.


Horizontal Connection

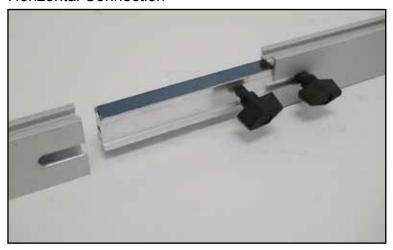

Detail C: A rectangular connection bar with plastic T Knobs is inserted between two horizontal extrusions joined end-to-end. Turn the knobs clockwise to tighten.


Do Not Overtighten.



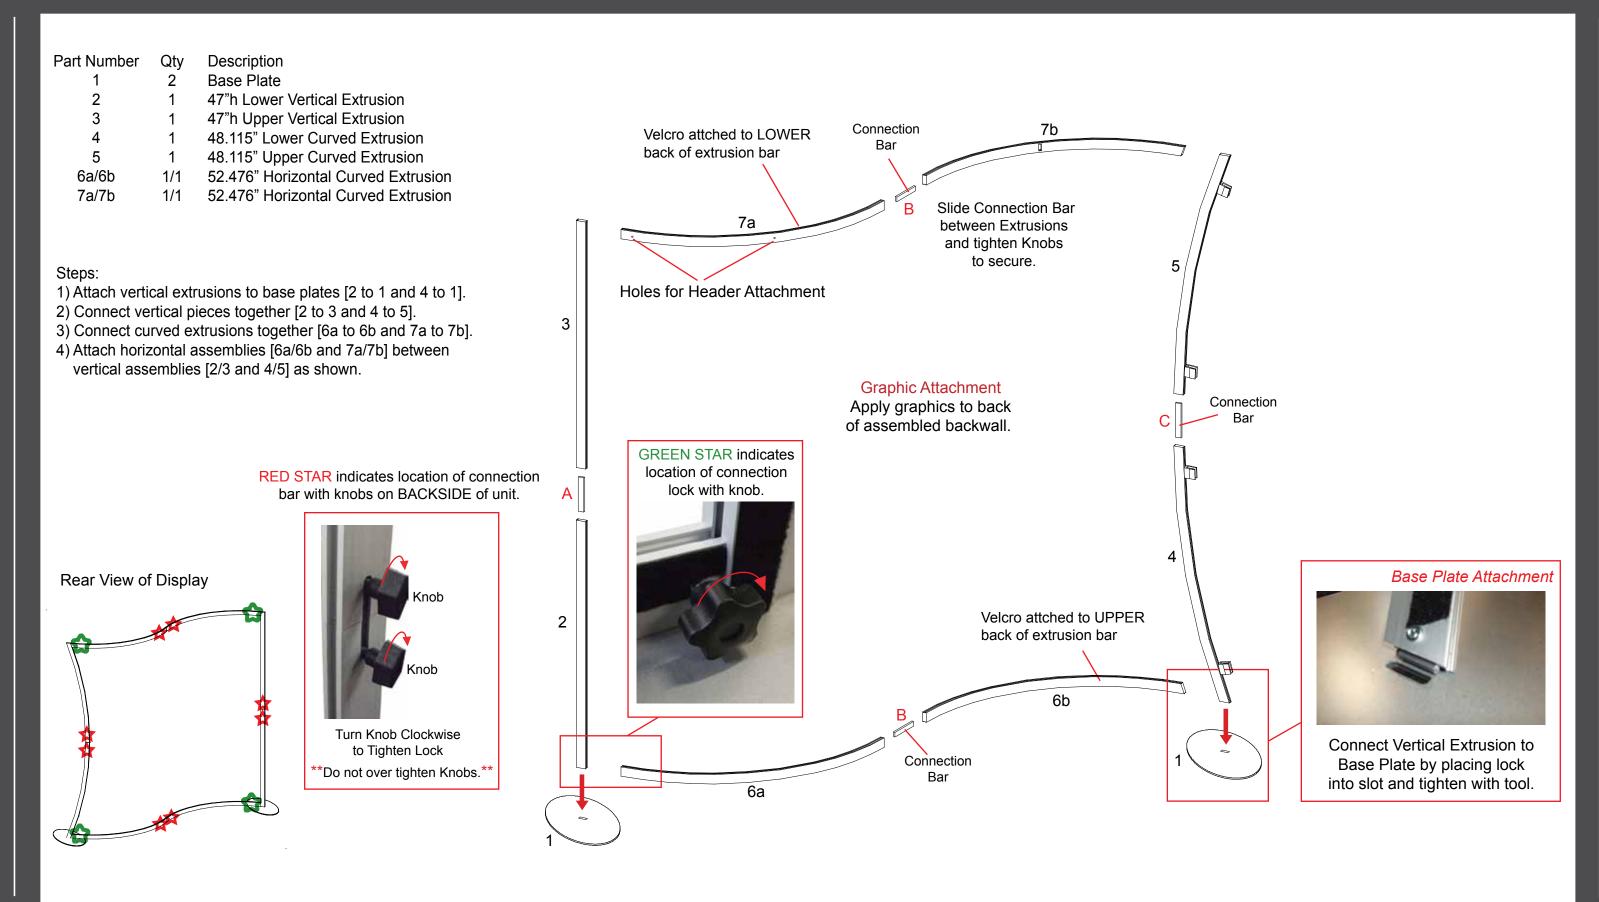



WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

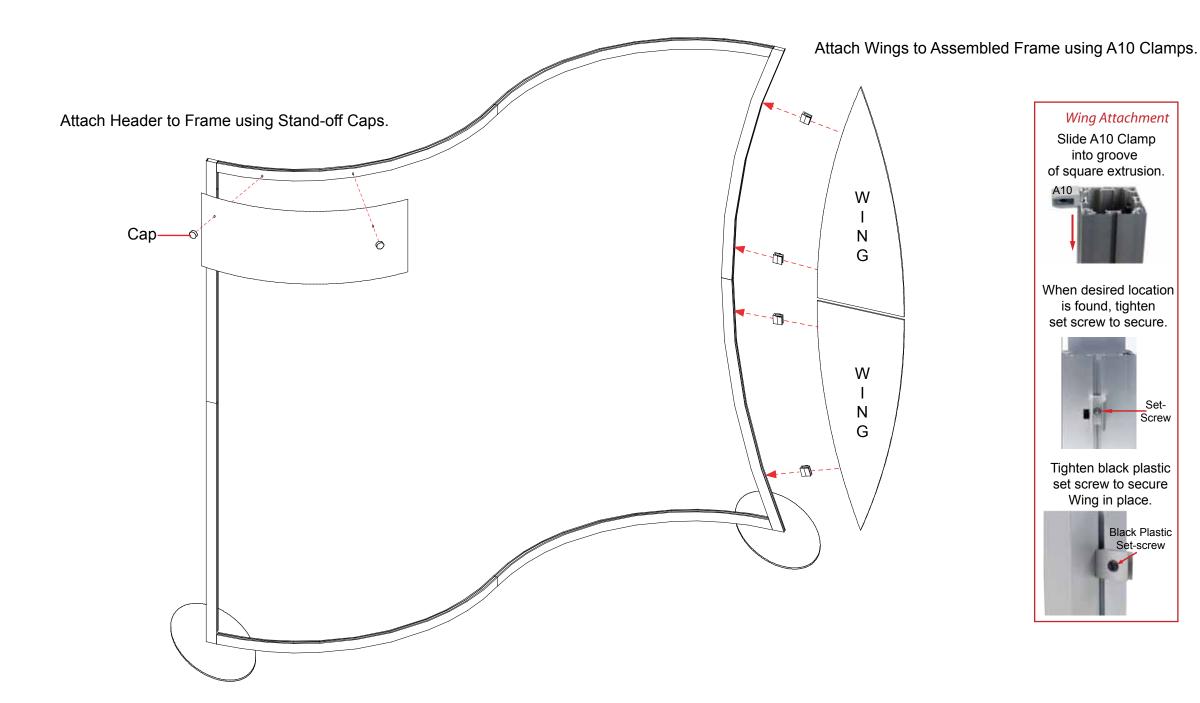





Item	Qty.	Description
8	1	37.50"h Vertical Extrusion
9	1	37.50"h Vertical Extrusion
9A	1	Door Stop
10	1	37.50"h Vertical Extrusion
11	1	37.50"h Vertical Extrusion
12	2	Horizontal Extrusion w/ Lip
13	2	Horizontal Extrusion
14	4	Curved Horizontal Extrusion

Steps


- 1) Connect lower horizontal extrusions [12 and 14] between vertical extrusions [8, 9, 10 and 11] as shown.
- 2) Place inserts and attach door where indicated.
- 3) Attach upper horizontal extrusions [13 and 14] between vertical extrusions [8, 9, 10 and 11] and atop inserts and door.
- 4) Place shelf atop lip of extrusions [12].
- 5) Set counter top on assembled pedestal.

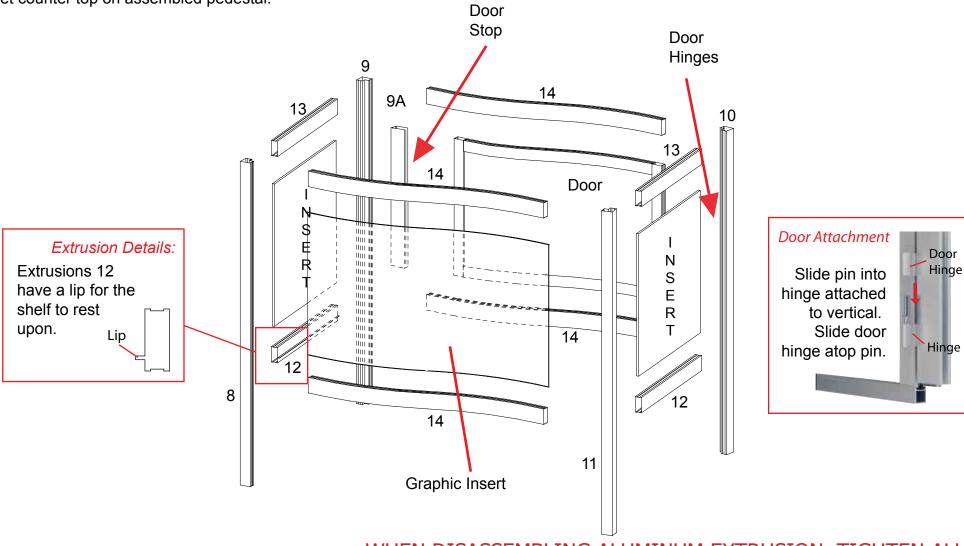


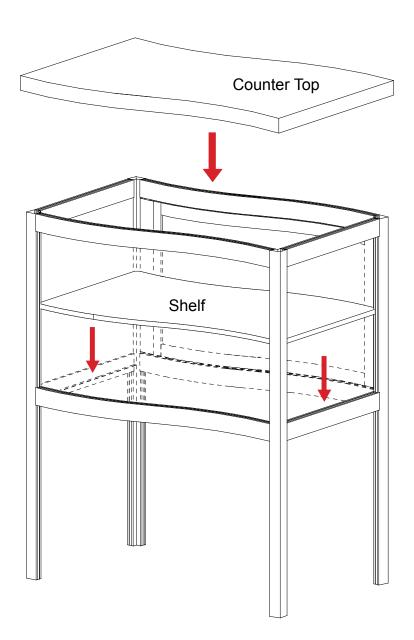





Backwall Components

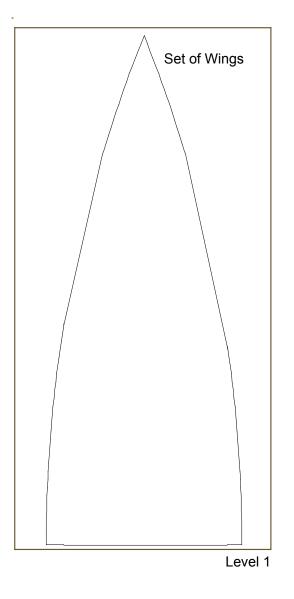

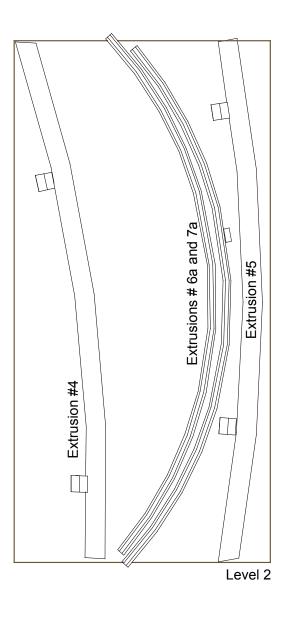

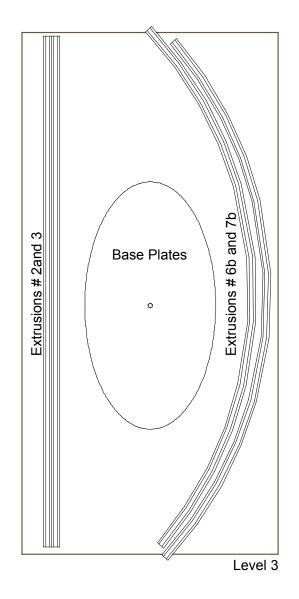

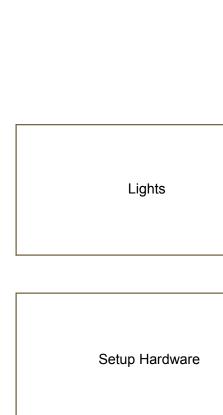

MOD-1235 Components

