












Steps:


- 1) Attach assembled header frame to top of backwall as shown.
- 2) Apply graphic to velcro on back of header frame.
- 3) Attach lights to header frame and backwall as shown.
- 4) Attach wings to backwall with A10 clamps.
- 5) Attach literature racks to backwall as shown.
- 6) Attach assembled counter support [18/19] to vertical where indicated.
- 7) Attach support leg [18a] to counter support [18/19].
- 8) Attach flange plate [19a] to top of curved extrusion [19] as shown.
- 9) Attach counter top to support, see [counter top attachment](#) detail.
- 10) Attach monitor mount to connectors as shown.

Item	Description
14	9.2856" Vertical extrusion
15	9.2856" Vertical extrusion
16	43.66" Curved Horizontal Extrusion
17	30.2" Curved Extrusion
17a	Leg Support
18	12.184" Horizontal Extrusion
18a	Flange Plate

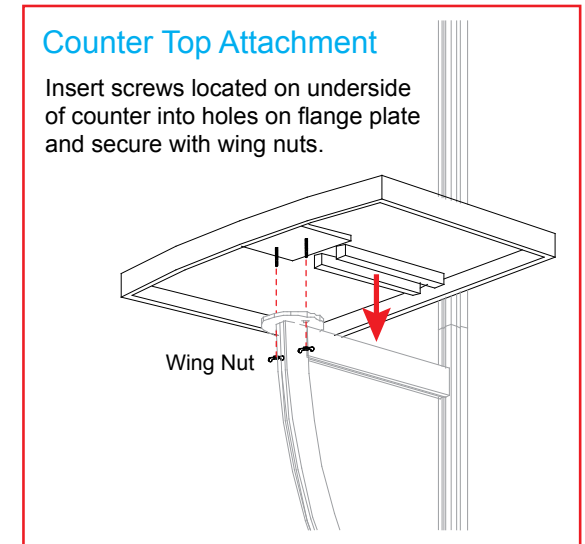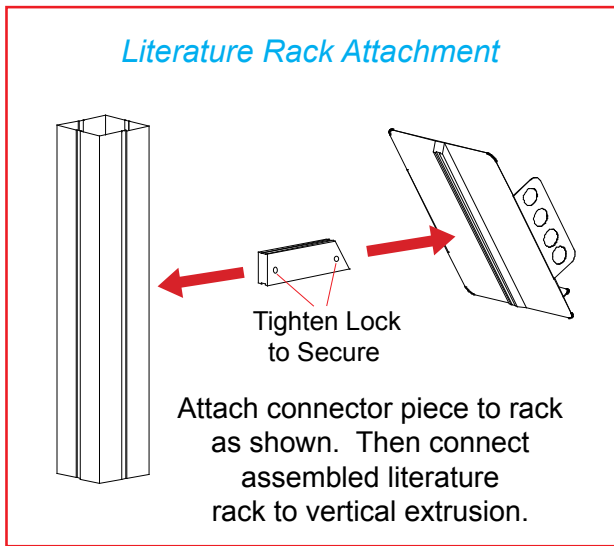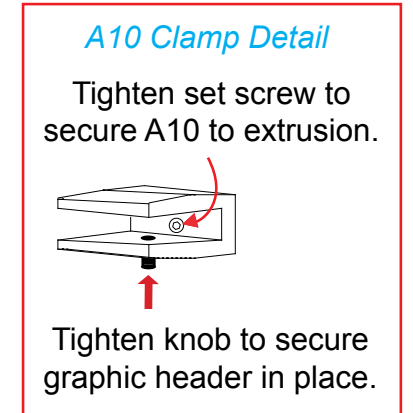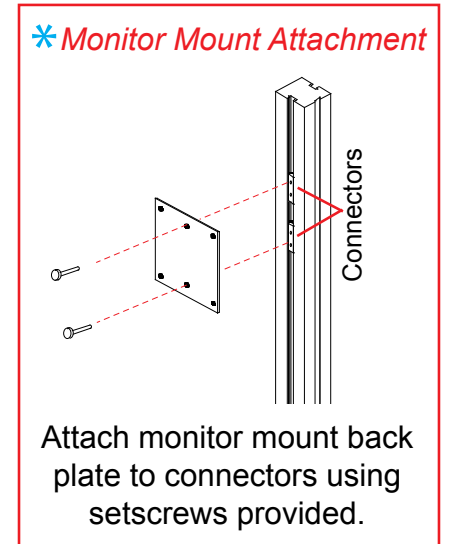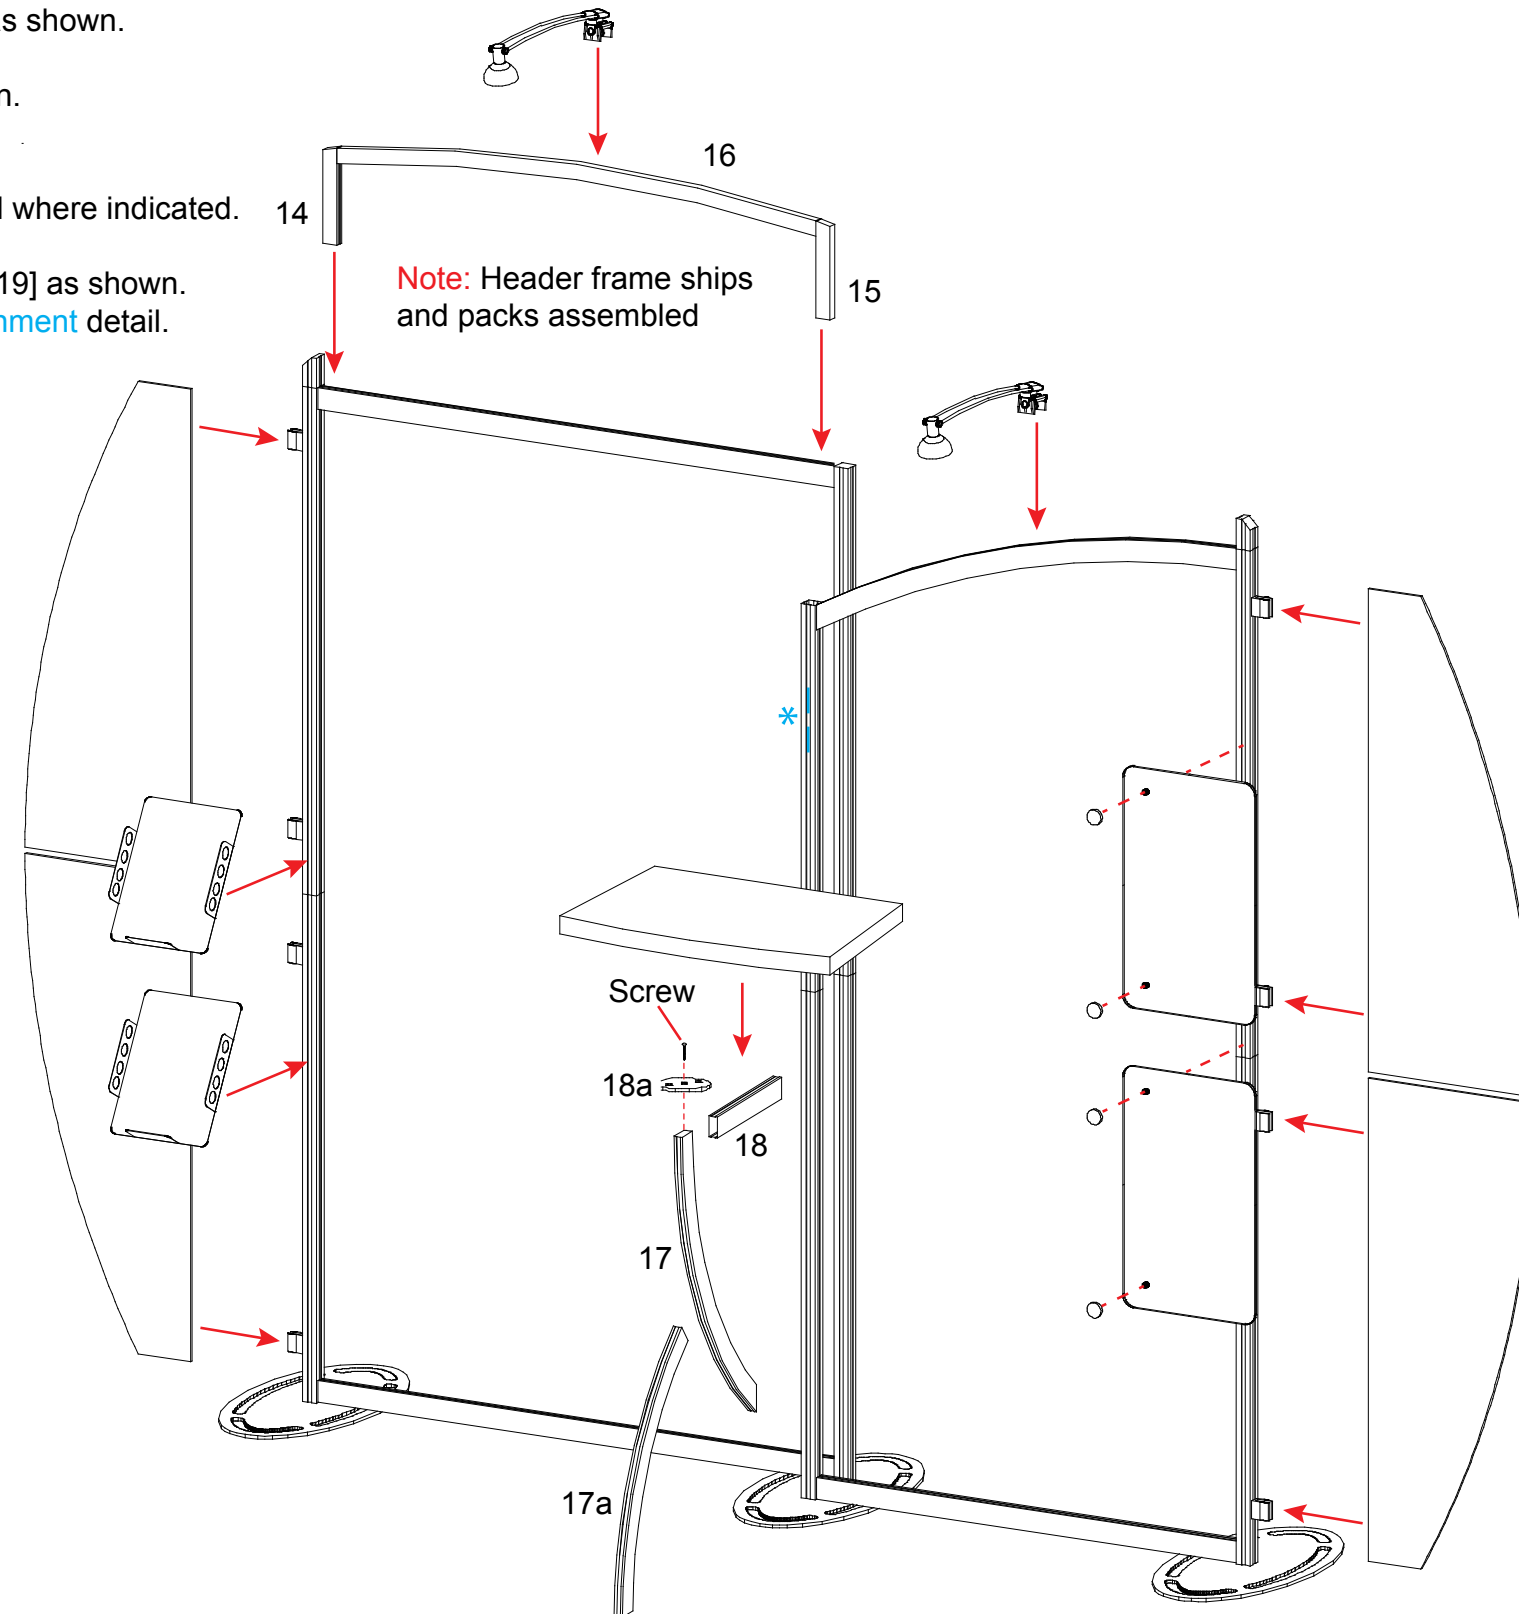


**WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING**


Top View

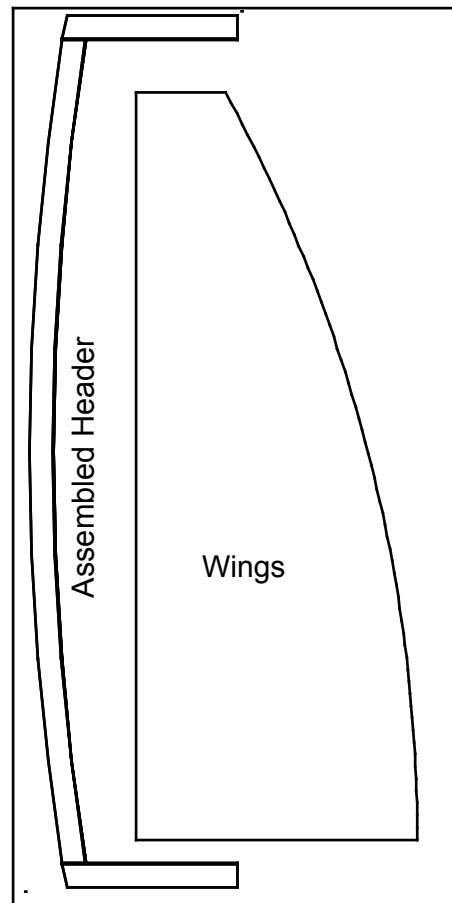


Level 1

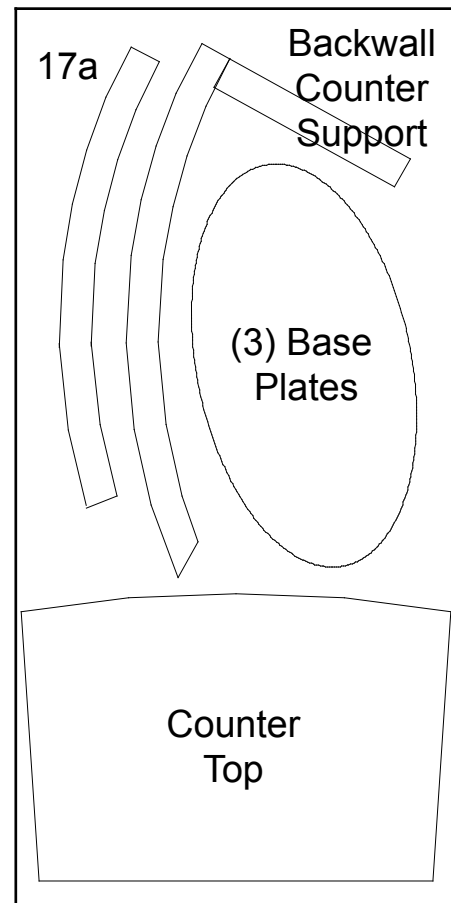

Level 2

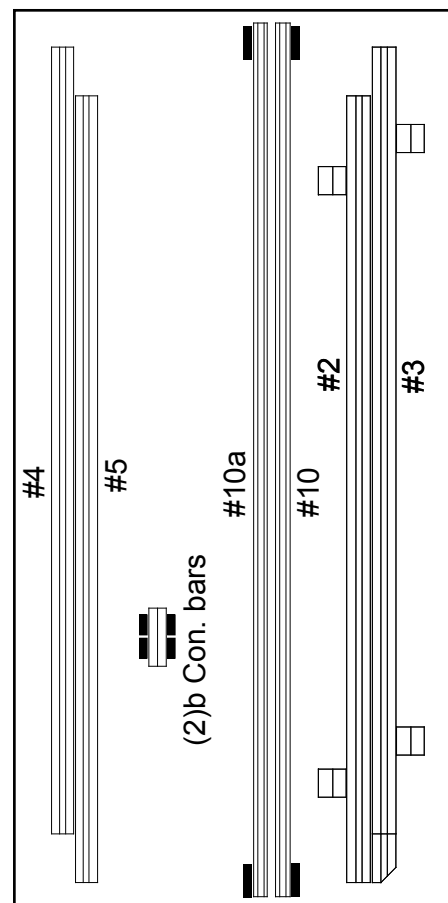

Level 3

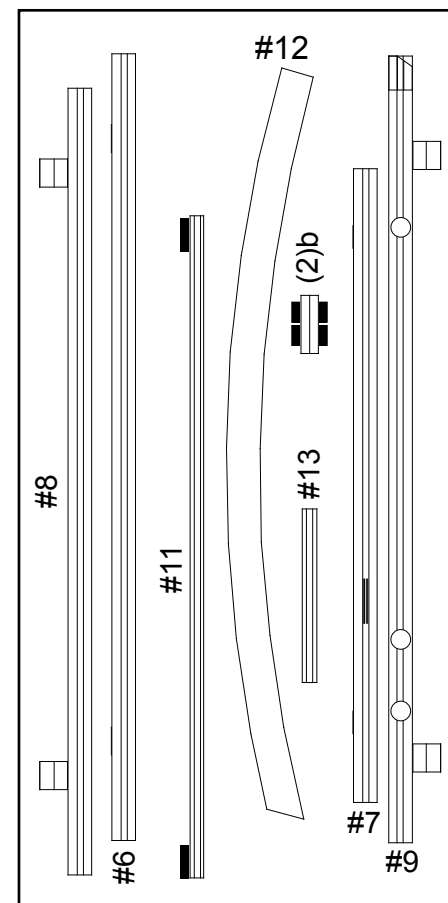

Level 4

Graphics

Setup Hardware & Literature Pockets

Halogen Lights

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING