


INSTRUCTIONS


PARTS

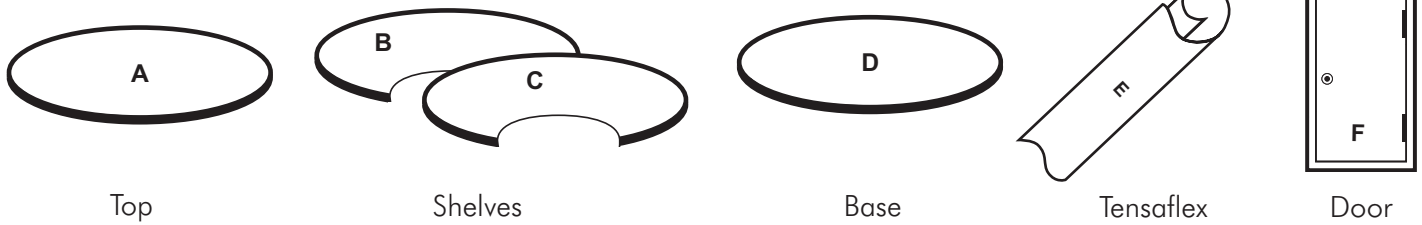

INSTRUCTIONS

Step 1


Place the base (D) at the site of display, unwind the tensaflex (E) and stretch out. Place the tensaflex along the reference dots, with arrows pointing up.

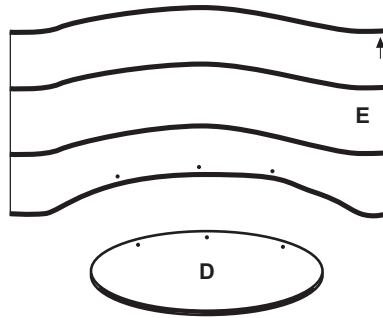

Step 1

Step 2


Attach the base hook (D) to the tensaflex loop (E). Leave one of the ends loose.

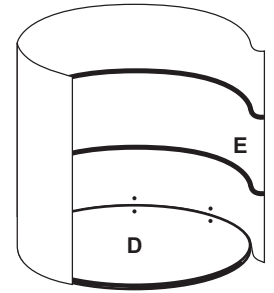

Step 2

Step 3


Set shelf (C) in the corresponding place indicated by the hook and loop (take reference points into account).

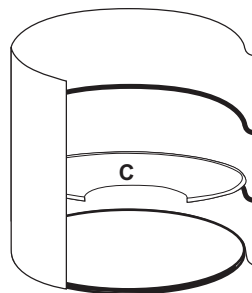

Step 3

Step 4


Set shelf (B) in the corresponding place indicated by the hook and loop while centering and adjusting the tensaflex (E) simultaneously (take reference points into account).

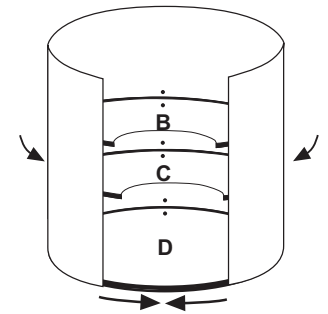

Step 4

Step 5


Place top (A) and press the hook and loop faces together. Make sure that each of the elements is in perfect position taking the reference dots into account.

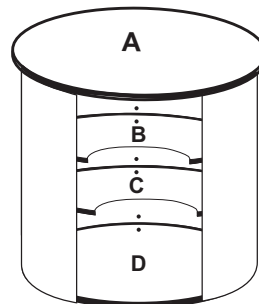

Step 5

Step 6

Door Installation Detach the tensaflex, two inches from each side of the tops and shelves as shown in the figure. Place the door (F) in the corresponding space, open it and press the door frame hook against the tensaflex loop (E).

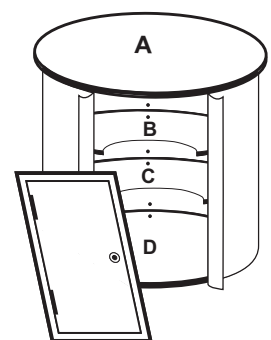

Step 6


Note: To disassemble, reverse the steps.

INSTRUCTIONS SOLO CONNECTOR

PARTS



Top




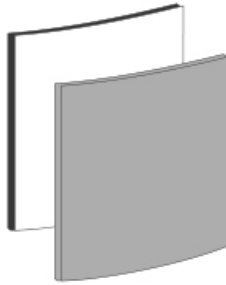


Tensaflex




Base

ASSEMBLY

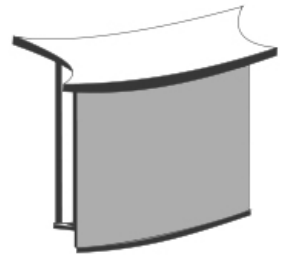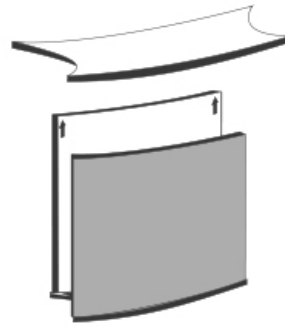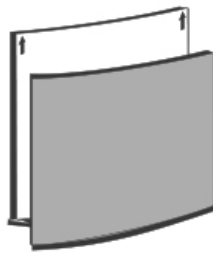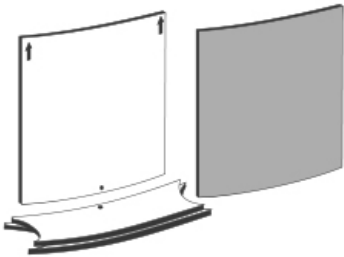

Step 1

Place the base on the floor exhibition, spread the tensaflex, place it according to the guide dots and the arrows pointing up. Repeat the process with the other tensaflex.

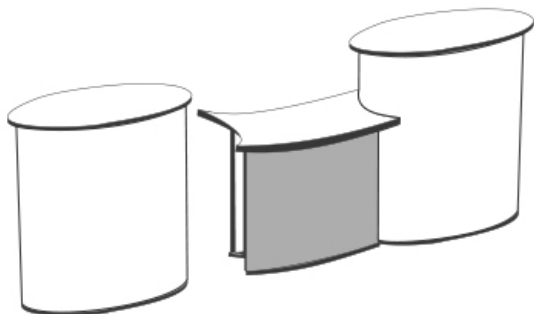


Step 3

Move SOLO CONNECTOR to SOLO, place to complete base ellipse shape. Then attach the tensaflex ends on the SOLO tensaflex.

Step 2

Press around the bottom edge attached to the base tensaflex. Leave the ends free. Then, place the Top using the guide dots.

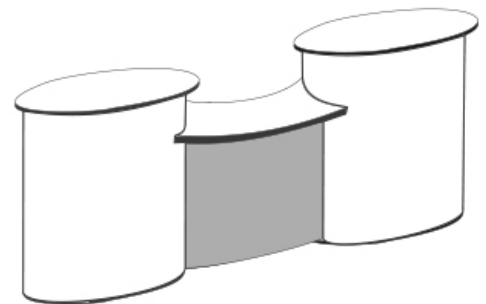

NOTE

For disassemble, do the steps against the instructions and store the parts in the original package.


WARNING

Remove the tensaflex wing from top to bottom softly and slowly to avoid damage.


INSTRUCTIONS SOLO PRONTO POST 22"-32"

1/2012

PARTS

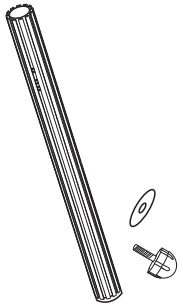


Post 0.87m with ProntoPost accessory

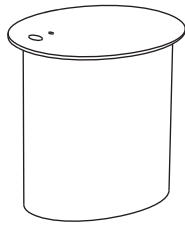


SOLO STANDARD with Post and grommet hole



Screen Support

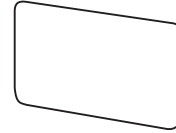


Header
19.69" (500mm)
x11.81" (300mm)





Header Support

ASSEMBLY

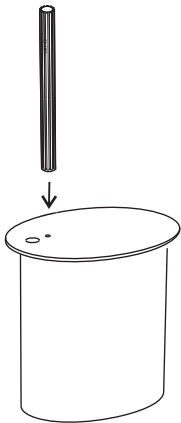

Step 1 Post





Place the post on the lid of the SOLO, from the underside, screw the post inserting the plastic screw and washer.

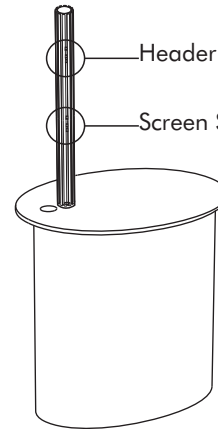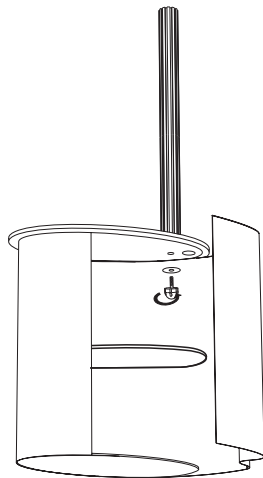

Step 2



Look for the guides on the post.

Header Support Guide
Screen Support Guide

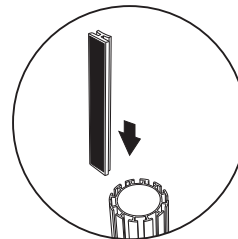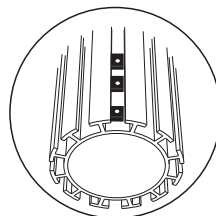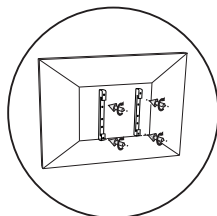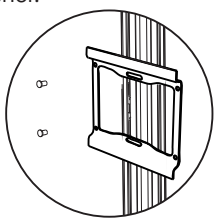

Step 3 Screen support

Screw the base of the screen support to the guide in the post. Screw the other part to the screen. Join together as shown in the picture.

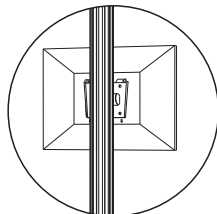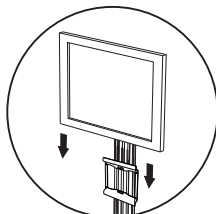

Step 4 Header

Slide the header support until it hits the guide inserted in the post. Attach the header pressing firmly on the hook & loop.

