

Eurofit with Ballast Base

Product Parts

- 1 - Base
- 2 - Couplers (x2)
- 3 - Bottom Sides (x2)
- 4 - Top Sides (x2)
- 5 - Bottom Corners (x2)
- 6 - Bottom Center
- 7 - Top Corners (x2)
- 8 - Fabric Graphic




Display Set-Up

Optional: Filling the Ballast Base

Remove the Base (1) Plug and fill the base with water or sand. Water is not recommended for use in below-freezing weather.

Step 1


Remove the spinning fasteners from each coupler (2). Insert the couplers into the base (1) and firmly reattach the fasteners on the underside of the base.

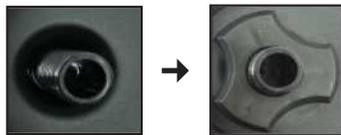

(Underside of base)

Step 2

Join the frame's three bottom pieces (5 and 6) by connecting the corresponding numbers together while pressing the snap button as shown. Insert the bottom of the frame into the couplers.

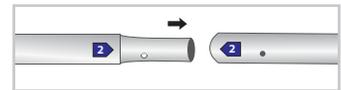

Step 3

Attach the side poles (3 and 4) to create the sides of the frame. Each side is made of one bottom side pole (3) and one top side pole (4).



Step 4

Combine the two rounded top corner poles (7) and attach them to the top side poles. Tighten the couplers' (2) knobs to secure the frame.



Step 5

Drape graphic (8) evenly over the top of the frame and slowly pull down both sides together until it's taut on the frame.



Storage

Store in a cool dry location.

Care

Fabric Graphic - machine wash cold on gentle cycle, air dry only. Do not dry clean. Steam clean for wrinkling.

Base - wipe with a damp cloth.