


Kit Assembly

Step by Step

Step 1.

Gather and connect the bungee flex rod components to build the graphic arc panels frames.

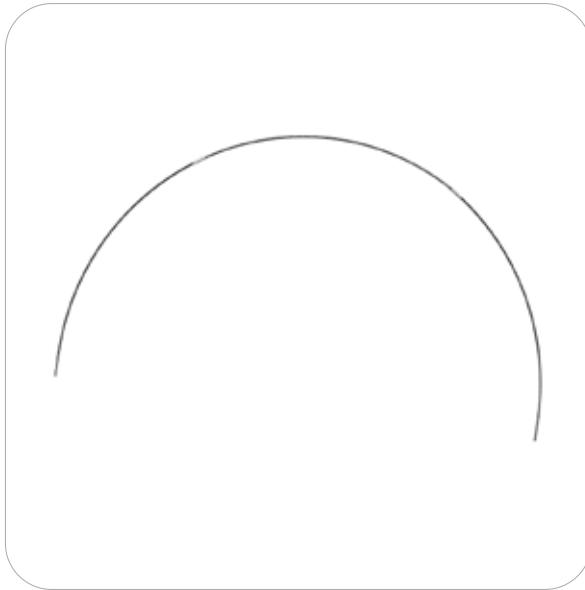

Step 2.

Feed the flex rod into the graphic panel spandex pocket. Do this for both A and B graphic arc panels.



Step 3.

Attach spandex pocket loops to included keyring feet.

Insert feet into rod ends and secure into ground with ground stakes.



Step 4.

With sides A and B under tension with the flex rods installed, **hook & loop** the graphic arc panels together at the top of the arc and on the side straps.

Setup is complete.

