


Magnetic Signware Frame™ - TLC Series

1. Install the first french cleat on the wall using the appropriate screws and anchors. *Note - larger frames may have more than one cleat for top and/or bottom.*
2. Insert the second french cleat into the lower back lip of the frame with the gap facing the steel face. Make sure the holes on the cleat match the holes in the steel panel.
3. Place the back lip of the frame onto the wall mounted french cleat clip. Mark the hole locations. Remove the frame and install the anchors. Then place the frame back on the wall.
4. Fasten the lower french cleat using the appropriate wall screws.
5. Add the magnetic graphic to the metal face. Use the notch at the corner of the frame to remove the graphic when needed.

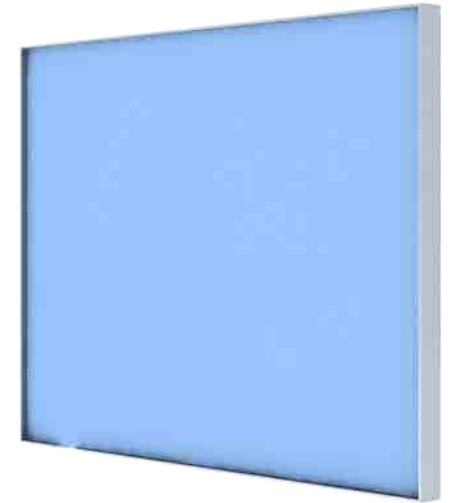

TLC8511-MM shown

