
WLM-2000F



Setup Instructions

- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.
- 7. If you have a header in the kit you can fix to the top by using the clear plastic clips.

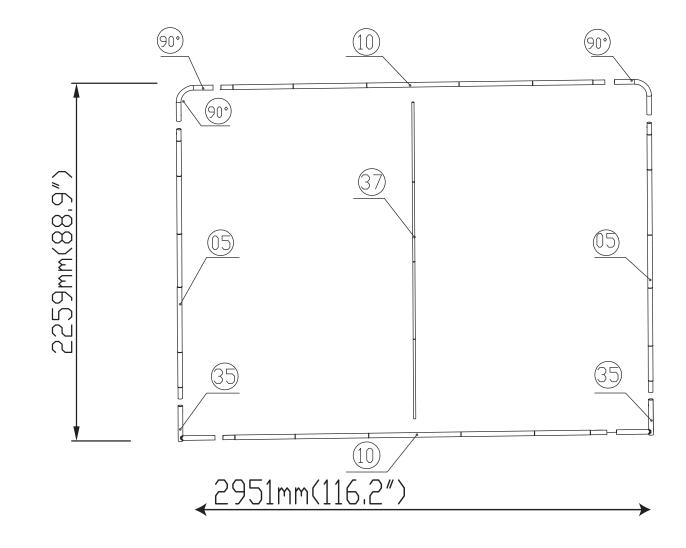

	Frame		Frame			Frame		Frame		Frame		Frame		TV kit		Shing	Case	accessories	
10	2	90°	2																
05	2	35	2																
23)	TBO SO																		
22	TBO SO																		
37	1																		
NO.	Quantity Confirm	NO.	Quantity	Confirm	NO.	Quantity	Confirm	NO.	Quantity Confirm	NO.	Quantity Confirm	NO.	Quantity	Confirm	NO.	Confirm	NO.	Confirm	