


## MODCO 7 - TOWER





# MODCO 7 - TOWER


- Use REF column to reference parts. Reference "Birds eye view" for footprint orientation.

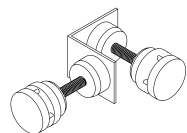



**REF (C) + (B)**  
MOD-90D-CON + MOD-PC

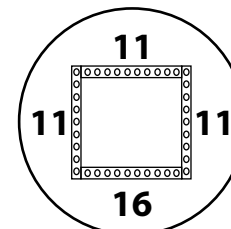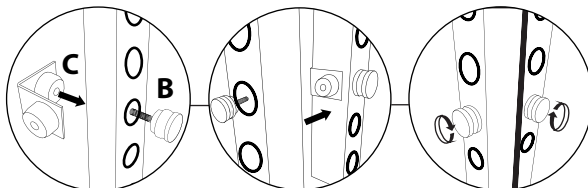



**Birds eye view**

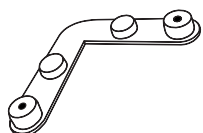

**REF (D) + (B)**  
MOD-SM90D-CON / MOD-PC

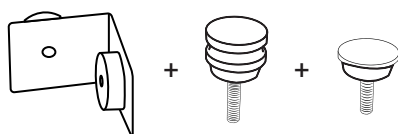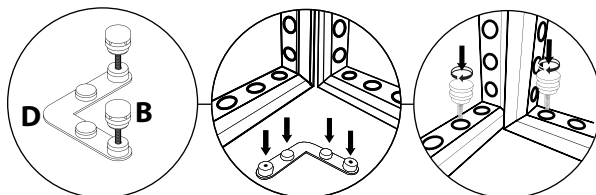


**REF (C) + (B) + (A)**  
\*MOD-PCWP-A will be inside of door hinge

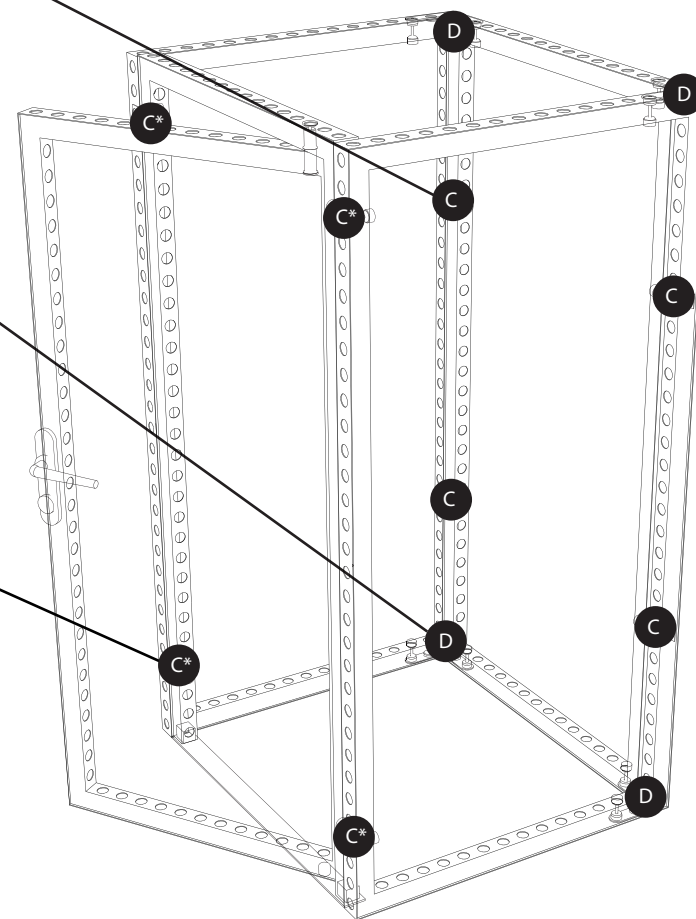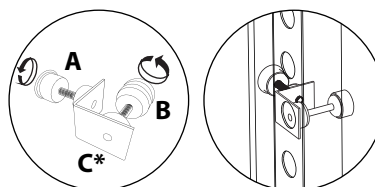



| PARTS LIST (TOWER) |     |                   |                                                           |
|--------------------|-----|-------------------|-----------------------------------------------------------|
| REF                | QTY | PART NO.          | DESCRIPTION                                               |
| 11                 | 7   | MOD-FRM-992x2480  | Straight Frame, Corner Screw Connect 992mm x 2480mm       |
| 16                 | 1   | MOD-DSWL-992x2480 | Door Set w/ Lock 992mm x 2480mm                           |
| E                  | 6   | MOD-CLA-CON       | Clamp Connector                                           |
| D                  | 6   | MOD-SM90D-CON     | Small 90° Connector                                       |
| C                  | 16  | MOD-90D-CON       | 90° Connector                                             |
| B                  | 40  | MOD-PC            | Pin Connector                                             |
| A                  | 4   | MOD-PCWP-A        | Pin Connector for Door Jamb                               |
| AA                 | 2   | MOD-DCC-180D      | Door Clamp Connector, 180 Degrees (Connect to Wall Frame) |

# MODCO 7 - TOWER



- Use REF column to reference parts. Scissor lift necessary to attach frames on top.

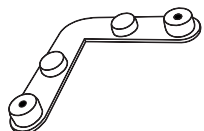



**REF (D) + (B)**  
MOD-SM90D-CON / MOD-PC

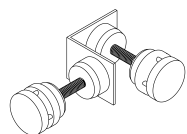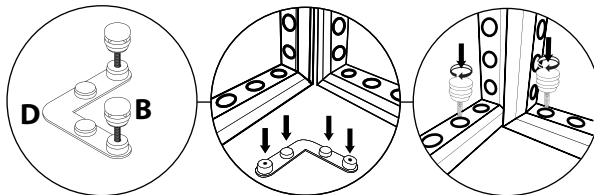

**REF (C) + (B)**  
MOD-90D-CON + MOD-PC

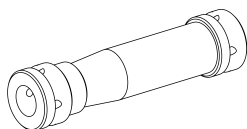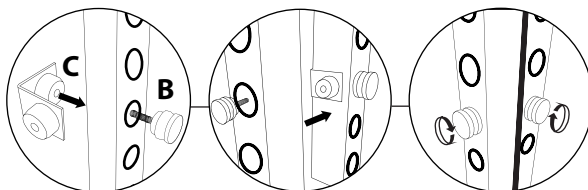


**REF (E)**  
MOD-CLA-CON

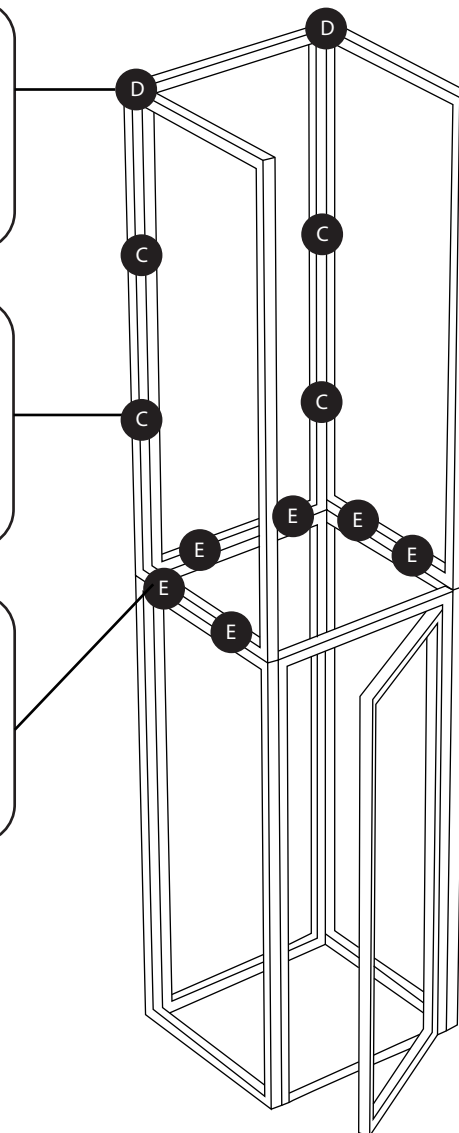
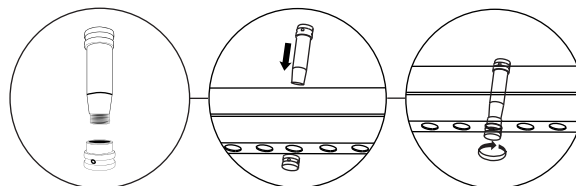


# MODCO 7 - TOWER



- Use REF column to reference parts. Attach final frame above the door.

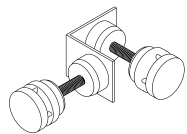

**REF (C) + (B)**  
MOD-90D-CON + MOD-PC

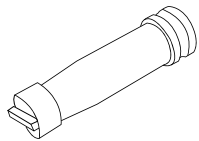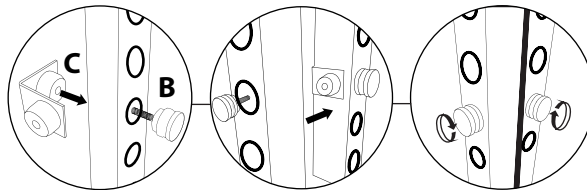


**REF (AA)**  
MOD-DCC-180D

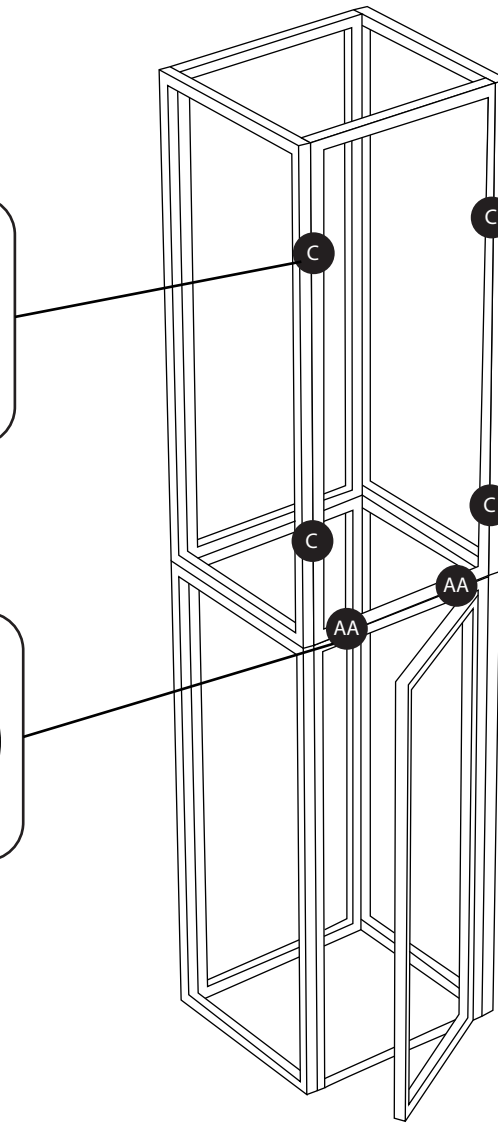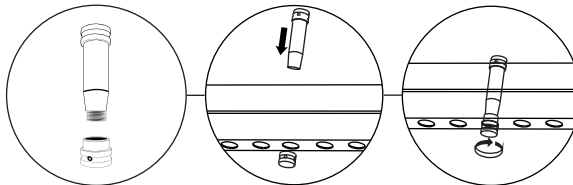

# MODCO 7 - TOWER

- Use REF column to reference parts. Attach cover profile to each exposed side (8 sides total).

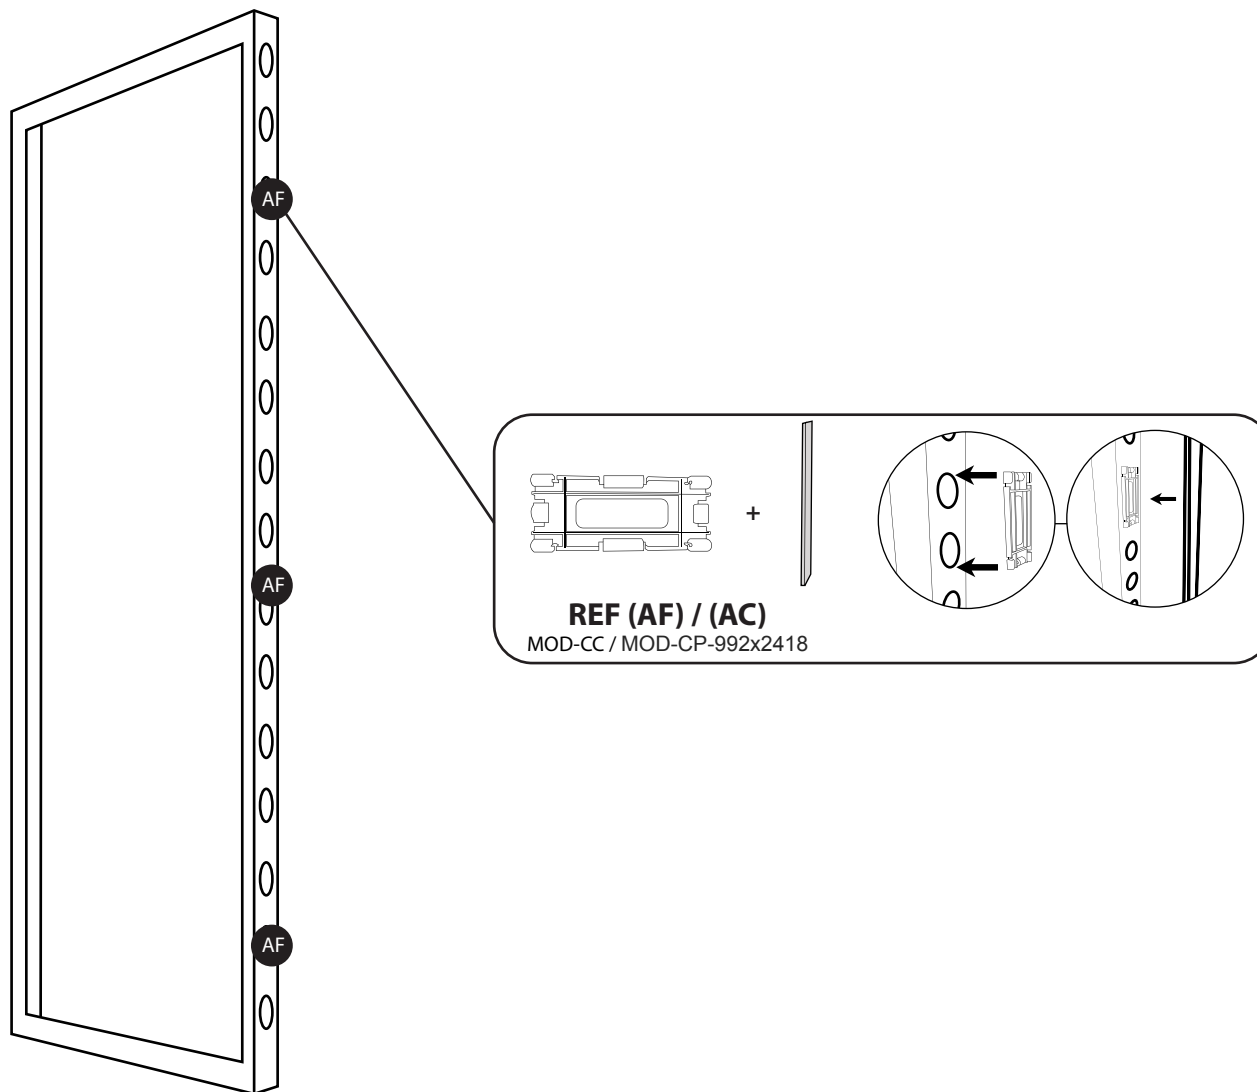

## COVER PROFILES & ACCESSORIES

| REF | QTY | PART NO.        | DESCRIPTION                                            |
|-----|-----|-----------------|--------------------------------------------------------|
| AD  | 8   | MOD-CP-992x2480 | Cover Profile for Frame 992x2480. Flat Model. Anodized |
| AF  | 24  | MOD-CC          | Clip Connector Cover Connects Cover Profile            |


# GRAPHIC INSTALL



Place graphic over the front of the frame.



Begin inserting SEG beading at each corner.

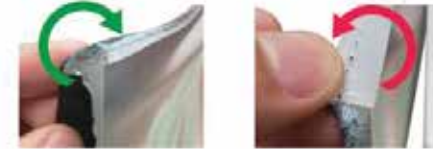

YES

NO

Insert the silicone beading with the fabric folded over. The silicone beading should not be exposed.



Using your fingers, push both fabric and silicone beading completely into the extrusions channel.



Continue to push in the remaining silicone beading on each side.



Check the perimeter of the frame for any excess beading that hasn't been pushed in. Graphic should be taut.